

INSIGNIA®

Quick Setup Guide
NS-CSPBTCUBE-W

Bluetooth Cube Speaker
with Speakerphone

PACKAGE CONTENTS

- Bluetooth speaker
- Keychain strap
- Quick Setup Guide

FEATURES

- Bluetooth streams music wirelessly
- Rechargeable battery lasts for up to two hours
- Use as a speakerphone for hands-free talking
- Take pictures remotely using the Power/pairing button

Before using your new product, please read these instructions to prevent any damage.

Top view

Charge indicator

Bluetooth indicator

Power/pairing button

Microphone

Back view

Micro USB charging port

Keychain strap hole

CHARGING YOUR SPEAKER

- 1 Connect the small end of a charging cable (not included) to the micro USB port underneath the cover on your speaker.
- 2 Connect the other end to a USB charging port.

Note: When the battery is low, you will hear beeps. About 10 minutes later, the speaker will power off automatically.

CHARGE INDICATOR LED	DESCRIPTION
Solid red	Charging
Off	Fully charged

TURNING YOUR SPEAKER ON AND OFF

Press and hold the Power/pairing button for three seconds to turn your speaker on or off. The Bluetooth indicator blinks quickly and the speaker enters pairing mode.

CONNECTING WITH BLUETOOTH

- 1 Make sure that your Bluetooth device is turned on and within 33 feet (10 meters) of your speaker.
- 2 On your speaker, press and hold the Power/pairing button for one second (or until hear a tone). Your speaker enters pairing mode and the Bluetooth LED blinks.
Note: Press and hold the Power/pairing button for one second to return to pairing mode.
- 3 Turn on your Bluetooth device and turn on Bluetooth. Set your device to pairing mode, then select **NS-CSPBTCUBE**. See the instructions that came with your Bluetooth device for information about pairing.
- 4 If you are asked for a password, enter **0000**. When pairing is complete, the Bluetooth indicator on your speaker lights solid blue.

5 To disconnect from the paired Bluetooth device, press and hold the Power/pairing button on your speaker for one second. Your speaker disconnects from the Bluetooth device and enters pairing mode again.

BLUETOOTH INDICATOR LED	DESCRIPTION
Blinks blue rapidly	Speaker is in pairing mode
Solid blue	Speaker is paired

RECONNECTING TO A PAIRED DEVICE

When your speaker is not paired to a device, the Bluetooth indicator blinks blue.

Your speaker loses the Bluetooth connection if you...	To reconnect...
Turn off your speaker.	Turn on your speaker. Your speaker searches for the last connected Bluetooth device and reconnects.
Move the Bluetooth device out of range.	Make sure that your Bluetooth device is within 33 feet of your speaker.
Turn off your Bluetooth device.	Turn on your Bluetooth device, then make sure that Bluetooth is on.
Turn off Bluetooth on your Bluetooth device.	Turn on Bluetooth on your Bluetooth device.
Connect your Bluetooth device to another Bluetooth device.	Disconnect your Bluetooth device from the other Bluetooth device, then set your device to pairing mode. Select NS-CSPBTCUBE on your Bluetooth device.

Note: If a device does not automatically reconnect, you may need to reselect **NS-CSPBTCUBE** on your Bluetooth device.

LISTENING TO MUSIC

- 1 Press and hold the Power/pairing button, then connect to your Bluetooth device.
- 2 Begin playback on your Bluetooth device.
- 3 Adjust the volume on your Bluetooth device.
Note: Use the controls on your Bluetooth device to control playback.

TAKING A CALL

- 1 Press the Power/pairing button briefly to accept an incoming call.
OR
Press and hold the Power/pairing button to reject an incoming call.
- 2 Press the Power/pairing button during a call to end the call.

TAKING PICTURES

- 1 Connect your smartphone to the speaker using Bluetooth.
- 2 Start your phone's camera.
- 3 Quickly press the Power/pairing button on your speaker to take pictures.

TROUBLESHOOTING

PROBLEM	SOLUTION
No power	<ul style="list-style-type: none"> Make sure that your speaker’s battery is charged. Make sure that your speaker is turned on.
No sound or low volume	<ul style="list-style-type: none"> Make sure that your Bluetooth device is turned on, Bluetooth is turned on, and NS-CSPBTCUBE is selected. Turn up the volume on your speaker. Turn up the volume on your Bluetooth device. Make sure that your Bluetooth device is not muted. Make sure that your speaker is not paired to another Bluetooth device. Make sure that your Bluetooth device is not paired to another Bluetooth device.

PROBLEM	SOLUTION
Cannot establish a Bluetooth connection	<ul style="list-style-type: none"> Shorten the distance between your speaker and your Bluetooth device. Turn your devices off, then on. Re-pair your speaker and your Bluetooth device. Make sure that your speaker is not paired to another Bluetooth device. Make sure that your speaker and Bluetooth device are both in pairing mode. Make sure that your Bluetooth device supports Bluetooth v4.0 and below. Make sure that your Bluetooth device is not connected to any other device. Make sure that you have selected NS-CSPBTCUBE on your Bluetooth device.
My Bluetooth device keeps unpairing	<ul style="list-style-type: none"> Shorten the distance between your speaker and your Bluetooth device. If the battery on your Bluetooth device is low, recharge the battery. If the battery on your speaker is low, recharge the battery.

PROBLEM	SOLUTION
“NS-CSPBTCUBE” does not appear on my Bluetooth device	<ul style="list-style-type: none"> Shorten the distance between your speaker and your Bluetooth device. Put your speaker into pairing mode, then refresh your list of Bluetooth devices. For more information, see the documentation that came with your Bluetooth device.
The speaker does not control the phone’s camera	<ol style="list-style-type: none"> On your phone, go into the Bluetooth menu, then tap the settings icon next to the speaker name. In the PROFILES section, tap INPUT DEVICE (CONNECT TO INPUT DEVICE) or USE FOR INPUT, then go back to the camera. You should now be able to take pictures with the speaker.

SAFETY INSTRUCTIONS

- Never expose the product to fire as this could result in personal injury.
- Do not store the product in an extremely cold or warm environment.
- Never dismantle the product.
- Never let children play with the product.
- Do not expose the product to dampness or moisture.
- The product should not be exposed to dripping or splashing.

LEGAL NOTICES

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution:
Changes or modifications not expressly approved by the part responsible for compliance could void the user’s authority to operate the equipment.

FCC Statement:
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy

and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
—Reorient or relocate the receiving antenna.
—Increase the separation between the equipment and receiver.
—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
—Consult the dealer or an experienced radio/TV technician for help.

RSS-Gen & RSS-210 statement:
This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.
Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

RSS-102 Statement:
This equipment complies with Industry Canada radiation exposure limits set forth for an uncontrolled environment. Cet équipement est conforme à l'exposition aux rayonnements Industry Canada limites établies pour un environnement non contrôlé.

ONE-YEAR LIMITED WARRANTY

Visit www.insigniaproducts.com for details.

CONTACT INSIGNIA:

1-877-467-4289 (U.S. and Canada)
01-800-926-3000 (Mexico)
www.insigniaproducts.com

INSIGNIA is a trademark of Best Buy and its affiliated companies.
Distributed by Best Buy Purchasing, LLC
©2015 Best Buy. All rights reserved.
Made in China