



42 INCH TV SOUND BAR WITH AMAZON ALEXA



MODEL:NHS-5002

PLEASE READ CAREFULLY BEFORE OPERATING THIS EQUIPMENT
KEEP IT IN A SAFE PLACE FOR FUTURE REFERENCE

IMPORTANT SAFETY INSTRUCTIONS



CAUTION: TO REDUCE THE ELECTRIC SHOCK, DO NOT REMOVE THE COVER (OR BACK). NO USER SERVICEABLE PART INSIDE, REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



DANGEROUS VOLTAGE:The lighting flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



ATTENTION:The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.

WARNING: USE UNDER SUPERVISION OF AN ADULT DUE TO LONG CORD This unit has a long cord that can be easily tripped on or pulled on, causing injury. Please make sure it is arranged so that it will not drape over a tabletop, etc. Where it can be pulled on by children or tripped over accidentally.

FCC STATEMENT:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation. The antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.

FCC NOTICE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC WARNING:

To assure continued operation, follow the attached installation instructions and use only shield cables when connecting to other devices. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

IMPORTANT SAFETY INSTRUCTIONS

Before using the unit, be sure to read all operating instruction carefully, please note that these are general precautions and may not pertain to your unit. For example, this unit may not have the capability to be connected to an outdoor antenna.

1. Read these instructions

All the safety and operating instructions should be read before the appliance is operated.

2. Keep these instructions

The safety and operating instructions should be kept for future reference.

3. Heed all warnings

All warnings on the appliance and in the operating instructions should be adhered to.

4. Follow all instructions

All operation and use instructions should be followed.

5. Do not use this apparatus near water

The appliance should not be used near water; for example, near a bath tub,

washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool.

6. Clean only with dry cloth

The appliance should be cleaned only as recommended by the manufacturer.

7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

Slots and openings in the cabinet and in the back or bottom are provided for ventilation, to ensure reliable operation of the product and to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or similar surface. This product should never be placed near or over a radiator or heat source. This product should not be placed in a built-in installation, such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.

8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

11. Only use attachments / accessories specified by the manufacturer.

12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus.

When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



Portable Cart Warning

An appliance and cart combination should be moved with care. Quick stop, excessive force and uneven surfaces may cause the appliance and cart combination to overturn.

13. Unplug this apparatus during lightning storms or when unused for long periods of time.

To protect your product from a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.

14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or

moisture, does not operate normally, or has been dropped.

15. Power source

This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your appliance dealer or local power company. For products intended to operate from battery power, or other source, refer to the operation instructions.

16. Power lines

An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

17. Overloading

 
Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.

18. Object and liquid entry

Never push objects of any kind into the product through openings as they may touch dangerous voltage points or short out parts that could result in fire or electric shock. Never spill or spray any type of liquid on the product.

19. Outdoor antenna grounding

If an outside antenna is connected to the product, be sure the antenna system is grounded so as to provide some protection against voltage surges and built up static charges. Section 810 of the National Electric Code ANSI/ NFPA 70 provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge product, size of grounding conductors, location of antenna-discharge product, connection to grounding electrodes and requirements for the grounding electrodes.

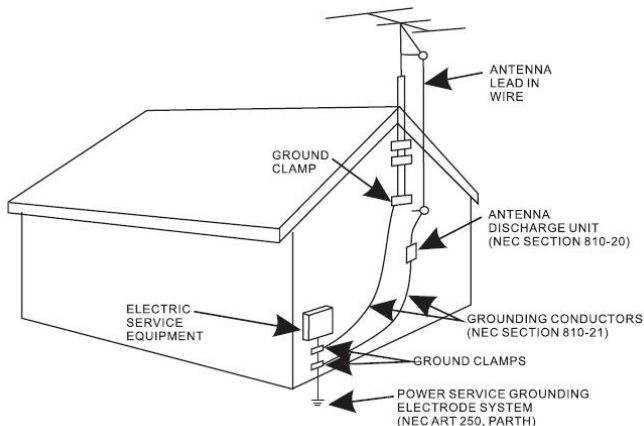

20. Service

Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

21. Replacement parts

When replacement parts are required, be sure the service technician uses replacement parts specified by the manufacturer or those that have the same characteristics as the original parts. Unauthorized substitutions may result in fire or electric shock or other hazards.

22. Safety check

Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.

23. Wall or ceiling mounting

The product should be mounted to a wall or ceiling only as recommended by the manufacturer.

24. Damage requiring service

Unplug this product from the wall outlet and refer service to qualified service personnel under the following conditions.

- a) When the power- supply cord or plug is damaged.
- b) If liquid has been spilled or objects have fallen into the product.
- c) If the product has been exposed to rain or water.
- d) If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions, as an adjustment of other controls may result in damage and will require extensive work by a qualified technician to restore the product to its normal operation.
- e) If the product has been dropped or the cabinet has been damaged.
- f) When the product exhibits a distinct change in performance- this indicates a need for service.

 
25. Note to CATV system installer

This reminder is provided to call the CATV system installer's attention to Article 820- 40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

NOTE: Refer all servicing to qualified service personnel. Servicing is required when the unit has been damaged in any way such as the following: the power-supply cord or plug has been damaged, liquid has been spilled into unit, the unit has been exposed to rain or moisture, the unit has been dropped or the unit does not operate normally.

PRODUCT OVERVIEW


TOP VIEW

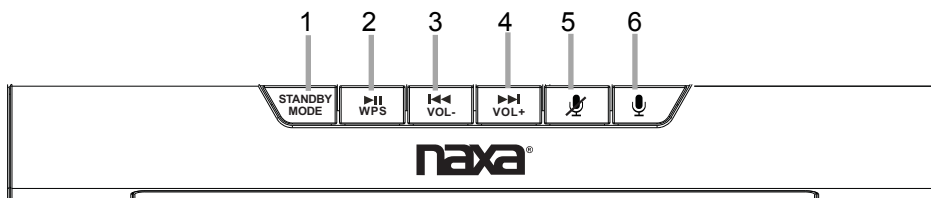

- 1. STANDBY/MODE Button
- 2. ►►/WPS Button
- 3. ◀◀/VOL- Button


- 4. ►►/VOL+ Button
- 5. 🎤 (Microphone On/Off) Button
- 6. 🗣️ (Communication) Button

 FRONT VIEW

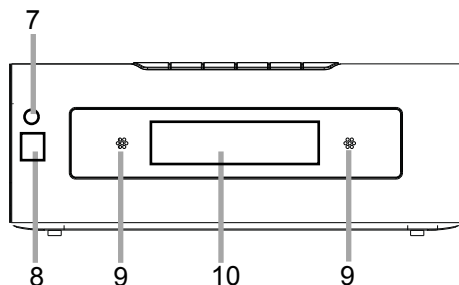


- 7. Communication Status LED Indicator
- 8. Remote IR Sensor
- 9. Built-in Microphone
- 10. Display

 REAR VIEW

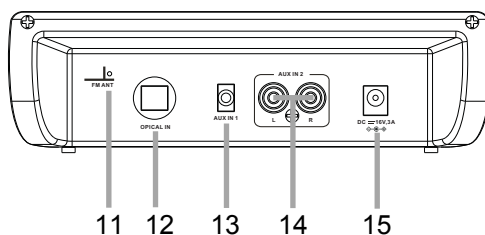


- 11. FM Antenna
- 12. OPTICAL IN Port
- 13. AUX IN 1 Jack
- 14. AUX IN 2 Jack
- 15. DC IN Jack

 FRONT VIEW

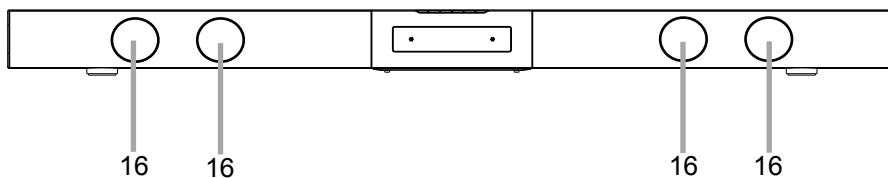

- 16. Speaker

 REMOTE CONTROL

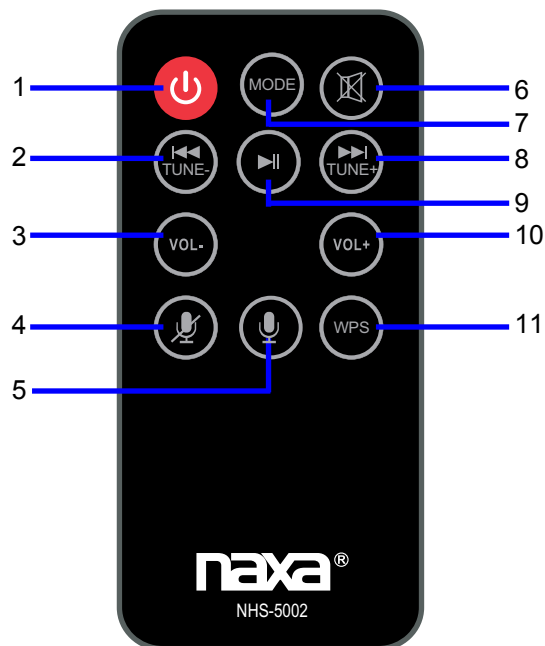


- | | |
|--------------------------------|------------------------------|
| 1. Power Button | 6. (Mute)Button |
| 2. (Previous)/ TUNE- Button | 7. MODE Button |
| 3. VOL - (Volume down) Button | 8. (Next)/TUNE+ Button |
| 4. (Microphone On/Off) Button | 9. (Play/pause) Button |
| 5. (Communication) Button | 10. VOL + (Volume up) Button |
| | 11. WPS Button |

BATTERY INSTALLATION OF REMOTE CONTROL

FIRST TIME USE

 - Remove and discard the insulation film as shown on the Figure to the right.



- Replacing Batteries on the Remote Control:

1. Push and slide out the battery holder as shown in Figure 1 below.
2. Replace the battery with a new CR2025 button cell as the polarity markings face towards the rear of the Remote Control.
3. Close the battery holder.



Fig.1

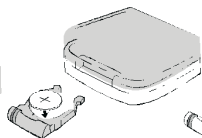 


Fig.2


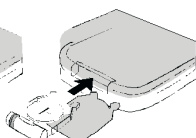 


Fig.3

BATTERY PRECAUTIONS

Follow these precautions when using a battery in this device:

 1. Use only the size and type of battery specified.
2. Be sure to follow the correct polarity when installing the battery as indicated in the battery compartment, a reserved battery may cause damage to the device.
3. Do not mix different types of batteries together (e.g: Alkaline and Carbon-zinc) or old batteries with fresh ones.
4. If the batteries in the device are consumed or the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible leakage.
5. Do not try to recharge the battery as it is not intended to be recharged; it can overheat and rupture. (Follow the battery manufacturer's instructions.)
6. The batteries shall not be exposed to excessive heat such as sunshine or fire.
7. Clean the battery contacts and also those of the device prior to battery installation.
8. The remote control is supplied with a coin/button cell battery. If the coin button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death. Keep new and used battery away from children. If the Battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed any part of the body, seek immediate medical attention.

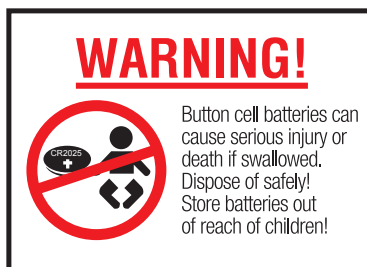

CAUTION

- Danger of explosion if the battery is incorrectly replaced.
- Replace only with the same or equivalent type.

 
Remote control operation range

- When there is an obstacle between the remote and the transmitter, the unit may not operate.
- When direct sunlight, an incandescent lamp, fluorescent lamp or any other strong light shines on the REMOTE SENSOR of the unit, the operation of the remote may be unstable.


PLACEMENT AND MOUNTING

1. Placing the device on a table - Ventilation

When placing the Sound Bar on an entertainment center, bookshelf, or any type of enclosed space, be sure to allow at least 2-3 inches of space around the Sound Bar for ventilation. If the Sound Bar is enclosed in a tight space, without ventilation, heat generated from the Sound Bar could produce a potential heat hazard.

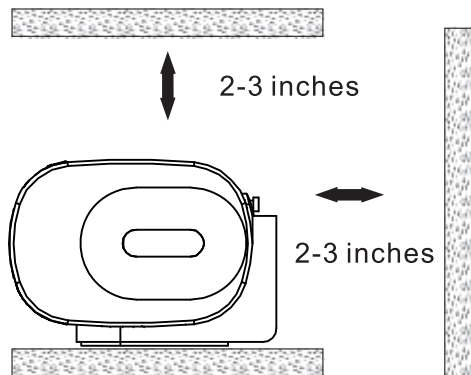


 2. The Installation Distance

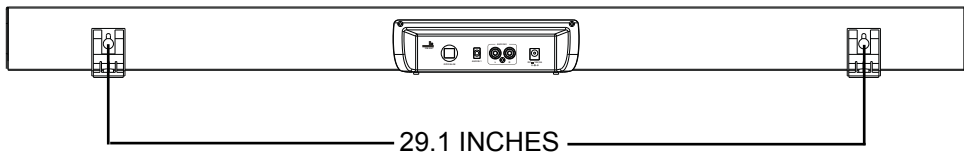

Mounting to a wall

 
2.1 Mounting to a wooden wall

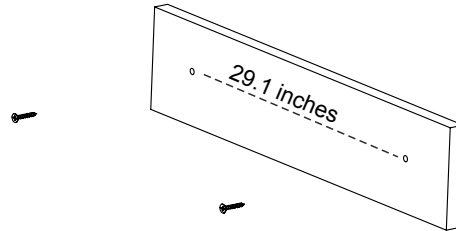

(screws not included)

- A. Mark the position of the mounting screws on the wall using a pencil.
- B. Drill the screws directly into the marks that you have made on the wall and leave approx. 0.3 inches length to hook the sound bar.
- C. Put the sound bar onto the mounting screws. Make sure they are firm and stable.

 
2.2 Mounting to a brick wall

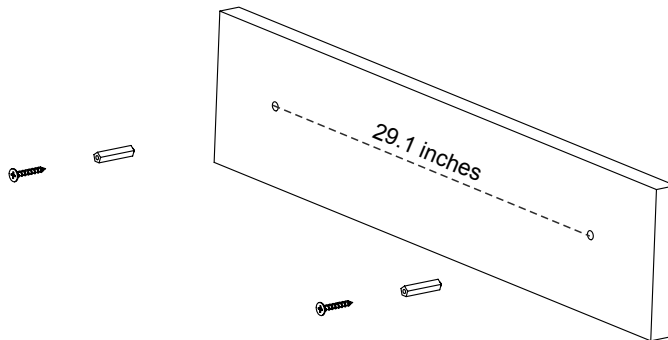


 
(screws and plastic fixing plug are not included)

- A. Mark the position of the mounting screws on the wall using a pencil.
- B. Drill 2 holes on wall with a powerful electric drill.
- C. Insert the fixing plug and hammer into the holes.
- D. Secure the screws into the fixing plug and leave approx. 0.3 inches length to hook the sound bar.
- E. Put the sound bar onto the mounting screws. Make sure they are firm and stable.

GENERAL OPERATION

1. Connect the AC/DC adapter to the unit and wall outlet. "WAIT" will appear on the display.
2. Press and hold the STANDBY/MODE button on the unit or press the  Button on remote control to turn on the unit. Press the STANDBY/MODE button on the unit or press the MODE button on the remote control repeatedly to turn to desired mode as shown below:


WIFI.....	WIFI Mode
BT.....	Bluetooth Mode
RADIO.....	FM Radio Mode
AUX 1.....	AUX IN 1 Mode
AUX 2.....	AUX IN 2 Mode
OPT.....	OPTICAL IN Mode

3. During Playback:
 - Press and hold the VOL- or VOL+ button on the unit or press the VOL- or VOL+ button on remote control to adjust the volume.
 - Press the  button on remote control to Mute the audio, press again to resume.
4. When finished listening, press and hold the STANDBY/MODE button on the unit or press the  button on remote control to put the unit into standby mode.

WIFI SETUP

PREPARATION

 
- Before connecting a device to the unit, download the "Naxa Resound" app from the Google Play store or the Apple App store. You can also scan the QR Codes shown in the Figure below to download and install the App.
- The App icon will appear as shown in Figure below after installation.

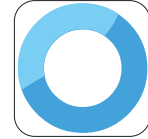



Naxa Resound

CONNECTION

 1. Plug one end of the adapter to DC IN jack of the speaker, then plug the adapter into the wall outlet, press and hold the STANDBY/MODE button on the unit to turn on the unit. Wait until "WIFI" flashes on the display -- the speaker is now ready for connection.

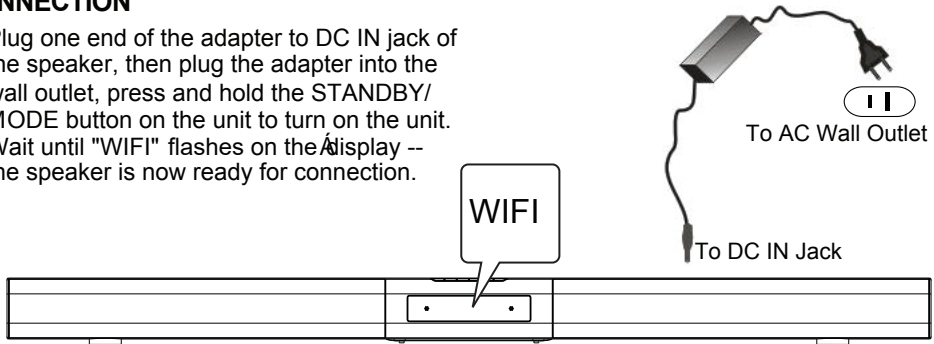

  2. Turn on the WiFi on your iOS or Android device (smart phone or tablet with WiFi function). Connect your iOS or Android device to the desired WiFi network (router).
3. Tap the NAXA RESOUND icon on your iOS or Android device. It will start to scan and search for available speakers automatically. Read the on-screen instructions and press the **Wi-Fi Setup Wizard** to continue.

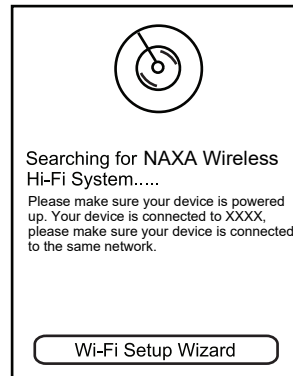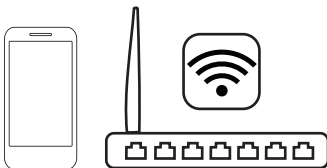



4. Read the instructions on the screen and tap

Next

to continue.

Make sure your phone is connected to 2.4G Wi-Fi, not 5G.

YOUR WIRELESS-2.4G ✓ 


YOUR WIRELESS-5G 


Not sure what you're currently using? Refer to your router's user guide for more info.


Next

5. Tap the device labeled NHS-5002.

Please select your device

NAS-5000 

NAS-5001 


NHS-5002 

6. Tap Password to enter the Wi-Fi password to connect the speaker to Wi-Fi network(router), tap

Next

① Please enter Wi-Fi password:

Wi-Fi: XXXX

Password: Please enter Wi-Fi password 


Next

7. **Press and hold the WPS button** on top of the speaker.

Tap

 
Next

② Long press the WPS key on the device to put the device into network setup mode. Then tap the "Next" button to continue.




Next


8. There will be voice instructions during the connection process.

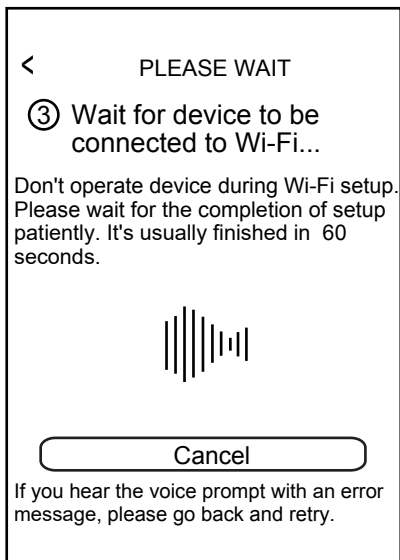

 
9. When the speaker is successfully connected to the Wi-Fi, the Mode Indicator on top of the speaker will stay **WHITE** and "WIFI" will remain on the display. If connection fails, please try again and repeat the ~~an~~ steps.

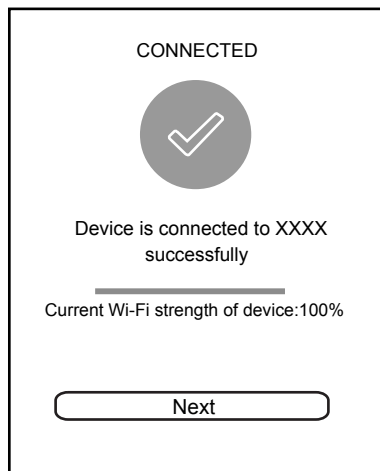

   
10. Once connected, the following screen will appear. Tap Custom to change to the desired location name, or tap one of the names listed below.

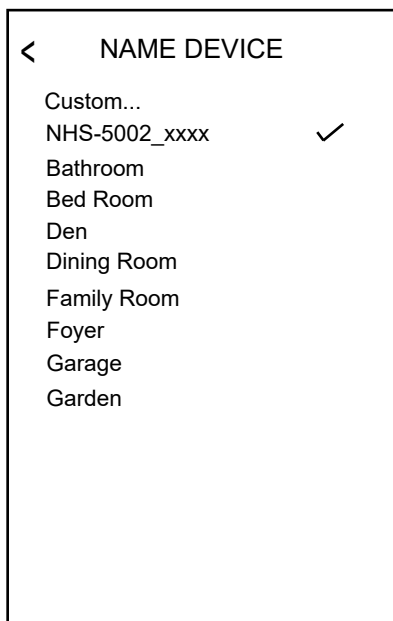


 
11. Select the desired Language for Alexa.

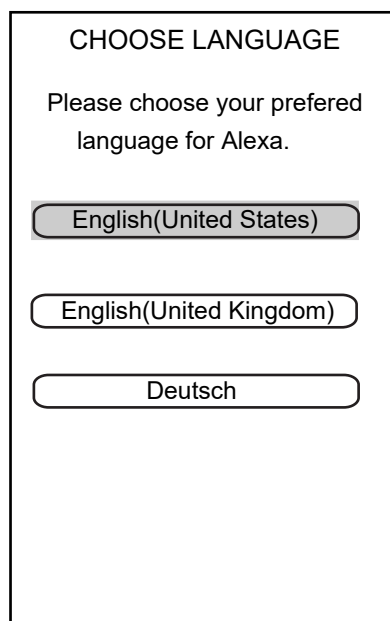


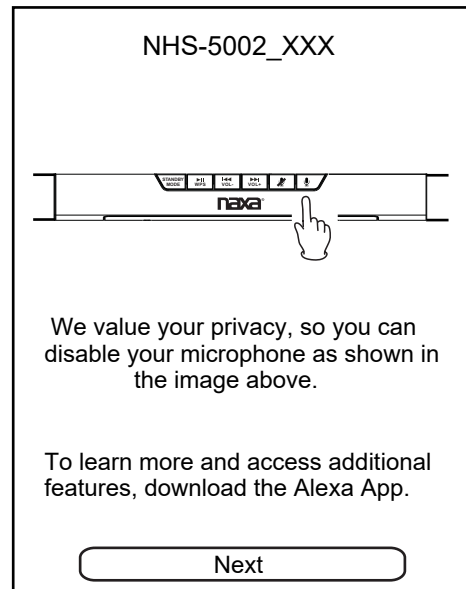 
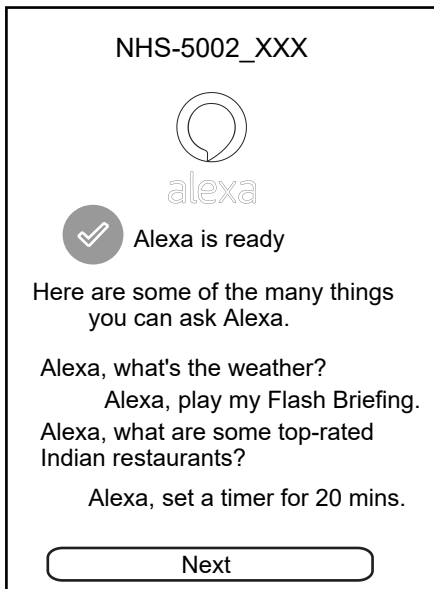 
11. Before using Amazon LinkPlay Alexa voice control function, you must have an Amazon account. Create an account on Amazon's website. If you already have an account please sign in.

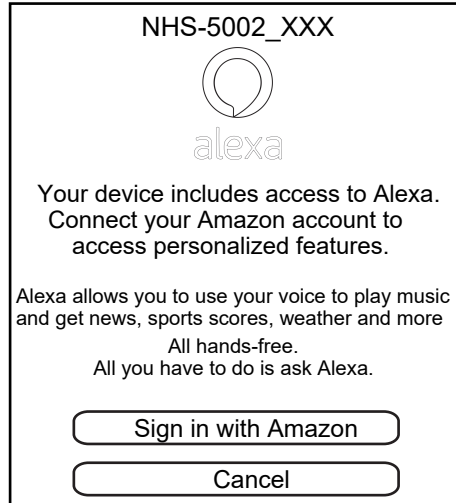


12. After you sign in, Alexa is ready. You can ask Alexa freely as on-screen instructions display.

Press the  button once to activate the speaker to communicate before  to the speaker, (or you must say "ALEXA" to activate the speaker's communication system without pressing any button).

Or you can press and hold the  button to turn off the microphone. Press and hold again to turn back on.




 
13. Next, the DEVICE LIST will appear as shown below:

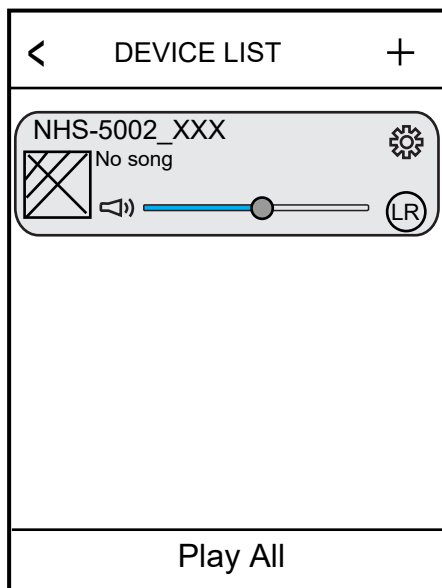

- Tap "+" to add more speakers to the network. Repeat the procedures above to make connection and follow the on-screen instructions.
- Tap "⚙️" to rename the speaker, check the speaker info, reset to the factory setting, or check the preset content.
- Tap "LR" to change the audio mode to L(left channel), R(right channel) and LR(stereo).


NOTE: For iOS device, touch and slide downward from the top of the device's screen to update the DEVICE LIST. If there is another device on the same network, the device will be added to the DEVICE LIST.

  14. If more than one speaker has been added into the DEVICE LIST, you can tap the instruction "[How to switch between solo and multi mode?](#)" to learn how to switch between solo and multi mode as shown on the figure below.

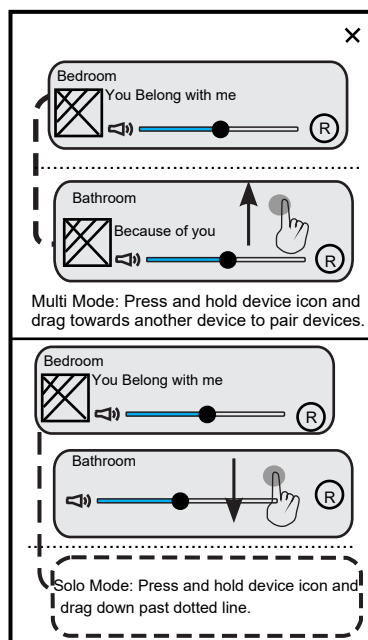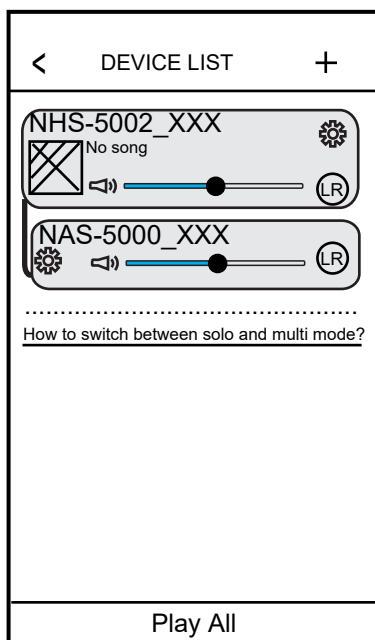

HOME SCREEN INTERFACE

 Tap "NAXA" to enter the home screen, Navigate as shown below and follow the on-screen instructions. Some platforms may require registration.

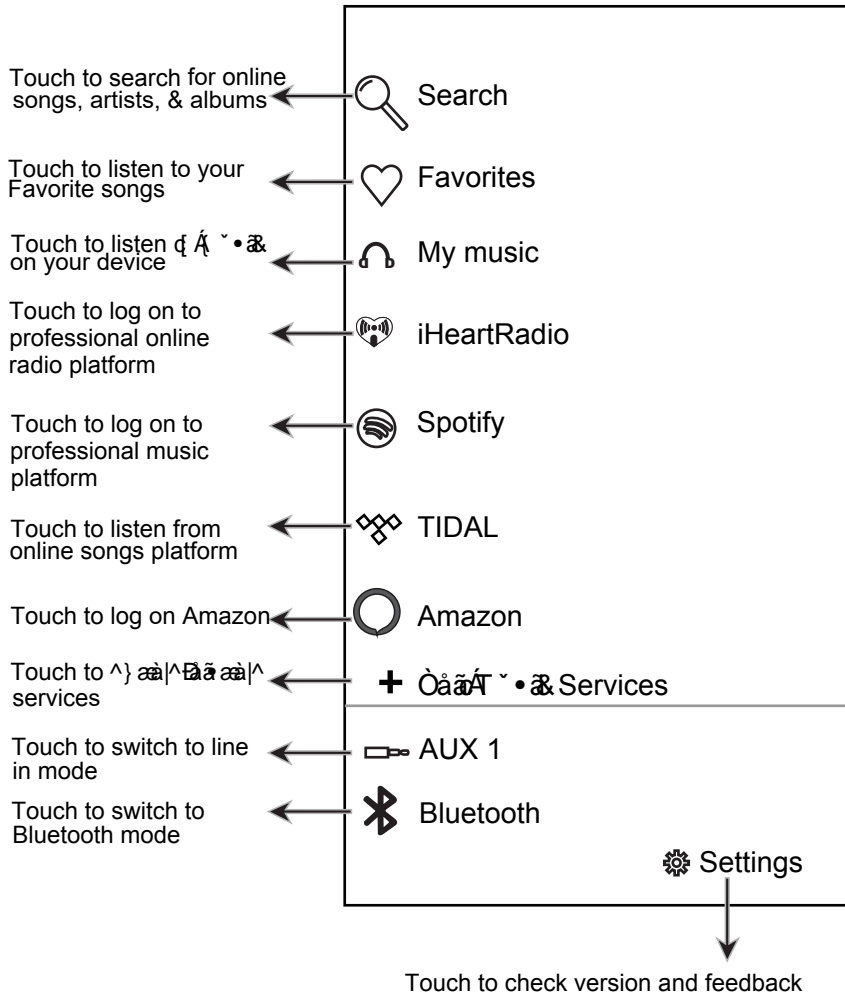


iHEARTRADIO OPERATION

Before starting, you must create an iHeartradio account to log on.

1. Tap "iHeartradio" on the POCYOFRESOUND home screen.
2. Input your account information to log on.
3. Select the desired song to play.

SPOTIFY OPERATION

Before starting, you must create a Spotify Premium account log on.

1. Tap "Spotify" on the POCYOFRESOUND home screen.
2. Input your account information to log on.
3. Open the Spotify App on your phone, tablet or PC, and play any song.
4. Tap the connect icon .
5. Select your device from the list.

Licenses

The Spotify Software is subject to third party licenses found here:
www.spotify.com/connect/third-party-licenses.


TIDAL OPERATION


Before starting, you must create a TIDAL account to log on.

1. Tap "TIDAL" on the POCYOFRESOUND home screen.
2. Input your account information to log on.
3. Select the desired song to play.


AMAZON LINKPLAY ALEXA VOICE CONTROL

Before using Amazon LinkPlay Alexa voice control function, you must create an Amazon account. Create an account on the Amazon website. (www.amazon.com)

1. Touch  Amazon on the home screen. A login window will appear; enter your account information to log on.


2. Press the  button once to activate the speaker to communicate before speaking to the speaker, (or you must say "ALEXA" to activate the speaker's communication system without pressing any button).

Example 1:

- Press the  button first, then ask the speaker, "What's the weather like today?"
The speaker will reply; "the weather is not so cold."


Example 2:

- Just say, "ALEXA", then you can ask the speaker, "What's the time now?"
The speaker will reply; "It is 8 o'clock now."
- Continue to ask the speaker to do other things, such as, "Play Music!".
The speaker will reply; "Here is the station we found. Music will then play."

3. If you want to stop asking or commanding the speaker, or avoiding external voice interference, press and hold the  button to turn off voice input. The communication indicator will turn **RED**. Press and hold this button again to turn on.

COMMUNICATION INDICATOR STATUS

 communication status indicator

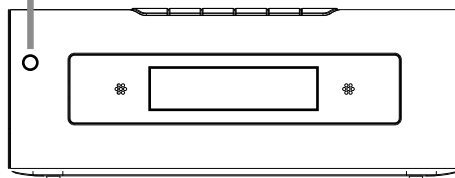

FRONT VIEW OF THE UNIT

SPEAKER STATUS	LED STATUS
Idle	White LED ON
Listening	Blue LED ON
Thinking	Blue LED ON
Talking	Blue LED blinks
Microphone Off	Red LED ON

BLUETOOTH OPERATION

Pairing the speaker with Bluetooth devices (mobile phone or music device)

1. Plug one end of the adapter to DC IN jack of the speaker, plug the adapter into the wall outlet, press and hold the STANDBY/MODE button to power on the unit, wait until "WIFI" appears on display.
2. Press the MODE button repeatedly until the "BT" flashes on display. Now the unit is in pairing mode.
3. Activate the Bluetooth function on your Bluetooth device (mobile phone or music device). Refer to the manufacturer's instructions of your device.
4. Once you have activated Bluetooth on your device, select the speaker name from the pairing list of available Bluetooth devices.
NOTE: The pairing name is " NAXA NHS-5002 ".
5. After pairing successfully, "BT" will stay on the display and should hear a confirmation tone.
6. If pairing is unsuccessful, turn off the speaker first and then follow the above steps to re-pair.
7. Once you have paired the speaker with a device, the speaker will remember and automatically pair with the connected device when the device's Bluetooth is activated within range.

During playback:

- Press the ►|| button to Play or Pause playback.
- Press the ►► or ◀◀ to skip forward or backward to a desired track.
- Press and hold the VOL- or VOL+ button to adjust the volume.


RADIO OPERATION

Before using your unit for FM reception, unwrap and fully extend the antenna wire. You may need to adjust the position of the antenna wire for maximum signal strength.

1. Plug one end of the adapter to DC IN jack of the speaker, plug the adapter into the wall outlet, press and hold the STANDBY/MODE button to power on the unit, wait until "WIFI" appears on display.
2. Press the MODE button repeatedly until "RADIO" flashes on the display.
3. Press the ►| /WPS button on the unit to search up and down the band. The radio will search for stations available and store them automatically.
4. Press the ►| or ◀◀ to listen to the stored stations.

AUX IN 1 OPERATION

 1. Connect the external audio device to the unit by an audio connection cable with 3.5mm stereo mini jacks:
 - ~ Insert one end to the mobile phone/external audio device; Line Out or AUX Out jack
 - ~ Insert the other end to the AUX IN jack on the rear of the main unit.

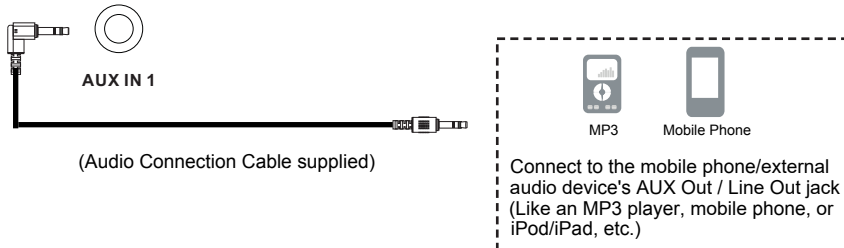


2. Plug one end of the adapter to DC IN jack of the speaker, plug the adapter into the wall outlet, press and hold the STANDBY/MODE button to power on the unit, wait until "WIFI" appears on the display.
3. Press the MODE button repeatedly until "AUX 1" flashes on the display.
4. Play music on your external device.

AUX IN 2 OPERATION

An external Audio/Video player(such as a TV, DVD Player, VCR etc.) can be connected to this unit and project audio through the speakers.

 
1. Plug one end of RCA White and Red cable into the LINE IN jacks on the rear of the unit.
Plug the other end of RCA White and Red cable into audio out jacks of TV or external A/V device as the illustration shows below.

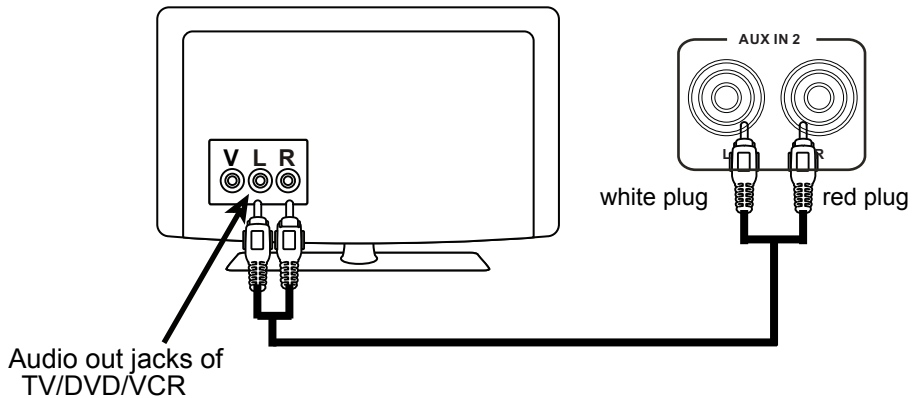


2. Plug one end of the adapter to DC IN jack of the speaker, plug the adapter into the wall outlet, press and hold the STANDBY/MODE button to power on the unit, wait until "WIFI" appears on display.
3. Press the MODE button repeatedly until "AUX 2" flashes on the display.
4. Play music on your external device.

OPTICAL-IN OPERATION

 1. Connect the Optical out jack from the external audio Player (like a TV, DVD Player BD Player, etc.) to the OPTICAL IN jack on the top of unit by the Optical Connection Cable (not supplied) shown in the figure below: (For PCM format only)

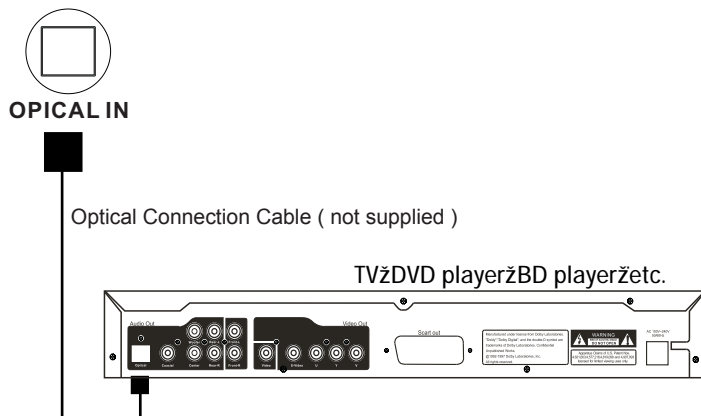

 2. Plug one end of the adapter to DC IN jack of the speaker, plug the adapter into the wall outlet, press and hold the STANDBY/MODE button to power on the unit, wait until "WIFI" appears on the display.
3. Press the MODE button repeatedly until "OPT" flashes on the display.
4. Power on the connected external player and start playback.
Go to your digital audio output settings and set it to PCM (Plus Code Modulation) as shown in the Figure below:

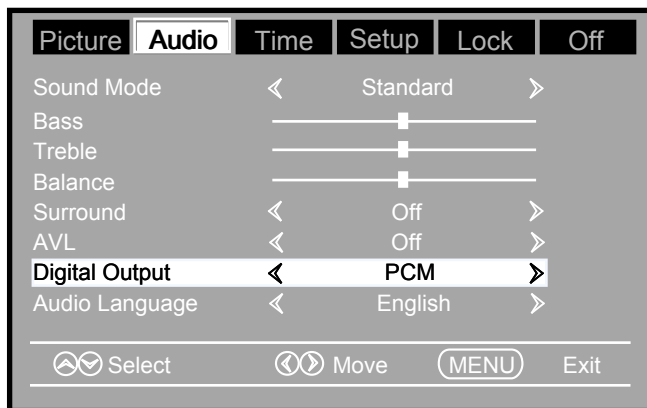



TROUBLESHOOTING

Please check the following list of common problems before requesting service:

SYMPTOM	POSSIBLE CAUSE	POSSIBLE SOLUTION
No sound or sound weak	Volume level of paired/connected device is in low level	Raise the volume level of the paired/connected device
Sound distortion	Volume level of the connected/paired device is to high	Reduce the volume level of the connected/paired device
BT not functioning	The external BT device had NOT paired to the unit	Pair the external BT device to the unit
	The external BT device is to far from the unit	Place the external BT device closer to the unit

SPECIFICATTIONS

Power Source:

DC16V  3A 

BT Version:

4.1

BT Operation Distance:

about 32 Feet in open area

Wi-Fi Operation Distance:

about 96 Feet in open area

PACKAGE CONTENTS

- 1 X User's Manual
- 1 X AC/DC Adapter
- 1 X Audio Cable with 3.5mm Plug
- 1 X RCA Audio Cable
- 1 X Remote Control

**SPECIFICATIONS AND ACCESSORIES ARE SUBJECT TO CHANGE
WITHOUT NOTICE**