


WINDOW ROOM AIR CONDITIONER



How to Choose The Right Window Air Conditioner For Your Room Size

1 MEASURE YOUR ROOM

Length x Width = Square Footage

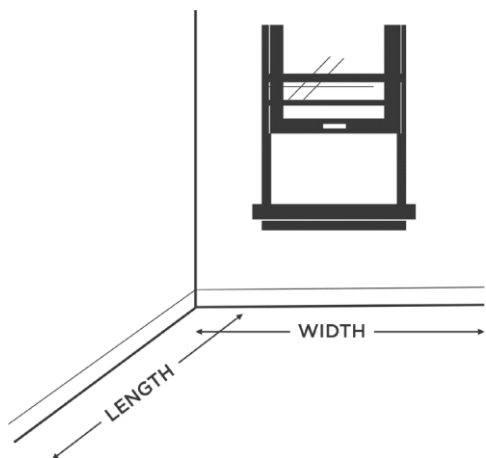


2 MATCH ROOM SIZE

Find the corresponding AC box that matches your desired cooling area.

	Cooling Area	Room Size	BTU
SMALL ROOM	UP TO 250 SQ. FT.	10' X 25'	6,000
	UP TO 350 SQ. FT.	10' X 15'	8,000
MEDIUM ROOM	UP TO 450 SQ. FT.	17' X 20'	10,000
	UP TO 550 SQ. FT.	15' X 30'	12,000

3 VERIFY WINDOW

Match size of window opening to range indicated on package or on spec sheet.

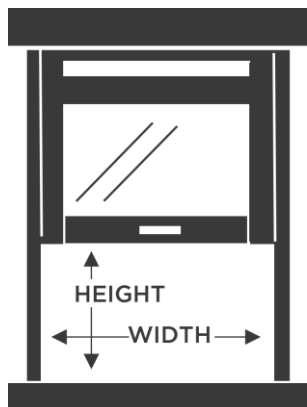

4 CHECK ELECTRICAL

Verify your outlet type.



115V
15 Amp



230V
15 Amp



230V
20 Amp

Oversizing or undersizing air conditioners is not recommended.