



**MONSTER<sup>®</sup>**

INDOOR/OUTDOOR  
16.4ft(5m) LED LIGHT STRIP

**Operation Manual**

**MODEL MLB7-1037**

**V1.0 0420**

## Introduction

This 16.4ft(5m) Indoor/Outdoor LED Light Strip light is ideal for edge-lighting your deck or railings, or highlighting gardens and walkways, and gives you the look of professional lighting while enhancing the style and safety of your outdoor living spaces.

### Features

- 16.4ft (5m) length - perfect for lighting decks, walkways, gardens, and more
- Waterproof LED light strip design is safe for both indoor and outdoor/wet environment use
- 8ft adapter cable easily reaches from outlet to the desired location
- Included mounting clips and screws for easy installation
- Multi-color/multi-white color changing and flash modes
- Remote control works up to 26 feet away

### What's Included

- 16.4ft (5m) Indoor/Outdoor Led Light Strip
- IR Remote Control
- Mounting Clips x10 (screws x20)
- User Manual

## Safety Instructions

Please read and understand all instructions before using this product. If damage is caused by failure to follow the instructions, this warranty is null and void.

**WARNING: When using outdoor use products, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and personal injury, including the following:**

- Keep these instructions.
- Do not drop, puncture, or disassemble this product.
- This LED light strip is suitable for use in wet locations. **DO NOT SUBMERGE THE STRIP OR THE POWER SUPPLY UNIT IN WATER.**
- The plug on the power supply unit must be connected to a GFCI protected hooded flush type cover plate receptacle marked “Wet Location” while in use outdoors.
- This product has a polarized plug and will only fit in a polarized outlet. Do not attempt to defeat this safety feature. Do not alter the plug.
- Use only with an extension cord rated for outdoor use. Use only three-wire outdoor extension cords that have three-prong grounding plugs and grounding receptacles that accept the appliance’s plug. Never use with an extension cord unless the plug can be fully inserted.

- Do not expose this product to open flames or use near fire.
- Do not use the product in a strong magnetic field.
- Use a clean, soft cloth to clean. Do not use any corrosive cleaners/oils to clean.
- Do not attempt to repair the device or open the unit as this will void the warranty.

NOTE: You cannot connect additional light strips to this product.

NOTE: If desired, you can cut the light strip to shorter lengths by cutting on the designated scissors marks.

However, **IF THE PRODUCT HAS BEEN CUT IT WILL NO LONGER BE WATER PROOF.**

 
---

## Specifications

- light strip length: 16.4ft (5m)
  - cable length:  
8ft (2.4m) to power supply + 1.5ft (.5m) to plug
  - input: 12V 0.42A
  - output: 12V 1A
  - remote control: 1 x 3V battery, type CR2025
-

## Get Started

- 1 Determine where you will install the Indoor/Outdoor LED Light Strip. Make sure the location is close enough to a power source for the cord to reach without becoming a tripping hazard.
- 2 Using the included mounting clips and screws, mount the Light Strip in the desired location. For best results place one clip approximately every 20", or 5 scissors marks, to secure the entire light strip evenly.



Note: Move some mounting clips closer to corners to better secure the strip around turns, use fewer on straight areas.

- 3 Once installed, connect the power adapter to a powered outlet. (Outdoors this must be a GFCI protected outlet.)
- 4 Remove the protective tab from the battery compartment of the remote. You are now ready to use your product.



TIP: If the power adapter doesn't reach to the ground from the outlet, use the keyhole hanger and a screw or nail to hang it.

 **MONSTER®**




## **Operation Manual**

**MODEL MLB7-1037**

**V1.0 0420**

## Controls, at a Glance

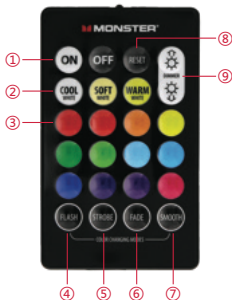

IR Remote



IR Receiver  
(on adapter housing)

①	ON/OFF	Turn the product on and off
②	MULTI-WHITE SELECTORS	Select from cool, soft, or warm white
③	MULTI-COLOR SELECTORS	Change the color to match your mood
④	FLASH	Flash color-changing mode
⑤	STROBE	Strobe color-changing mode
⑥	FADE	Fade color-changing mode
⑦	SMOOTH	Smooth color-changing mode
⑧	RESET	Reset to default settings
⑨	DIMMER BUTTONS	Adjust the brightness/intensity

## IR Remote Operation

Note: For best operation, point the IR remote towards the IR Receiver (towards power adapter).

- 1 Turn on the Indoor/Outdoor LED Light Strip by pushing the ON button on the remote control. (It will turn on into the last used lighting mode.)
- 2 Select the desired color or effect by pushing the corresponding button on the remote control.
- 3 Set the desired brightness using the buttons to increase/decrease the intensity of color.
- 4 Push the OFF button to turn off the Light Strip.

Note: You can use this Light Strip with a timer outlet or smart plug as it will power on into the last used lighting mode.

### Changing the remote control battery:

Note: The battery for the remote control has already been installed. Remove the battery pull tab to operate.

- 1 The battery compartment is located on the narrow side of the remote control.
- 2 Remove the empty battery and insert a 3V battery, type CR2025, with the positive terminal pointing upwards.
- 3 Place the battery compartment back in the remote control so it locks in place.

# Notice

## **FCC Compliance**

This device complies with Part 15 of the FCC. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## **RF Exposure Statement**

To satisfy FCC's RF exposure requirements, a separation distance of 20 cm or more should be maintained between the antenna of this device and persons during device operation. To ensure compliance, operations at closer than this distance is not recommended.

## **Warning**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's warranty or authority to operate the equipment.

---

The M Monster logo is a registered trademark of Monster, Inc. or its subsidiaries in the U.S. and other countries and is used under license. Licensed and Manufactured by Jem Accessories, Inc. Edison, NJ 08817  
Made in China  
Please call for customer support 866-246-2008

## Customer Service

In the event this product becomes defective, please do not return this product to your retailer.



**866-246-2008**

## Limited Warranty

### **What Does This Warranty Cover?**

This warranty covers any defect or malfunctions in a new Monster product that you have purchased from an authorized Monster dealer and that comes with this warranty statement.

### **How Long Does the Coverage Last?**

This warranty lasts as long as you own your Monster product. Coverage terminates if you sell or otherwise transfer it.

### **What Will Monster Do?**

Monster will repair or replace the product for any defective or malfunctioning product at no charge.

### **What This Warranty Will Not Cover?**

Any problem that is caused by abuse, misuse, commercial use, exposure to heat, bright light, sun, liquids sand and other contaminates, contact with solvents or cleaners, malfunctions caused by other audio equipment or an act of God (such as a flood) is not covered. Also consequential and incidental damages and costs of removal or installation is not covered under this warranty. Some states and countries do not allow the exclusion of limitation of incidental or consequential damages, so these limitations or exclusions may not apply to you.

### **How Do You Get a Replacement?**

If something goes wrong with your product call us toll free at 866-246-2008 for details on how to return your product.