


Features

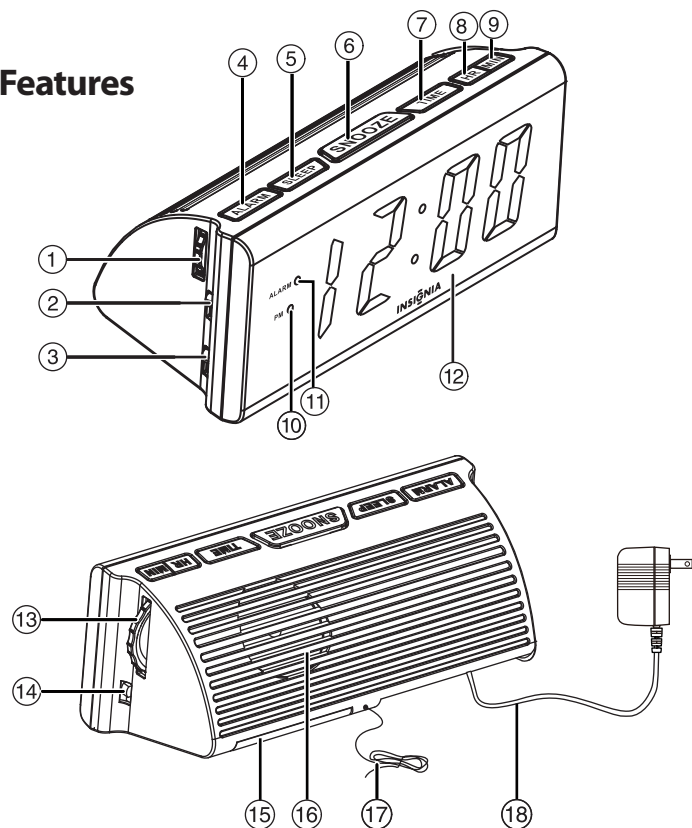

1	VOLUME dial
2	OFF/BUZZ ALARM/RADIO ALARM/ON
3	HIGH/MIDDLE/LOW DIMMER
4	ALARM button
5	SLEEP button
6	SNOOZE button (time interval 8-9 minutes)
7	TIME button
8	HOUR (HR) button
9	MINUTE (MIN) button
10	PM indicator
11	ALARM indicator
12	Main display
13	TUNING dial
14	AM/FM switch
15	Battery compartment door
16	Speaker
17	FM antenna
18	AC power adapter

Setting up your clock radio

To set up your clock radio:

- Before use, make sure that the rated voltage of your unit matches your local voltage.
- Open the battery compartment door on the bottom of unit and insert a 9V battery into the battery compartment. Make sure that the positive (+) and negative (-) terminals on the battery align with the + and - symbols in the battery compartment. In case of power outage, battery backup will maintain your alarm and clock settings only.
- Close the battery compartment door, then plug the AC power adapter into an AC wall outlet.

Using your clock radio

When you install the battery and plug in your clock radio, the clock turns on automatically. Slide the **OFF/BUZZ ALARM/RADIO ALARM/ON** switch:

- To the **ON** position to turn your clock radio on.
- To the **OFF** position to turn your clock radio off.
- To the **RADIO ALARM** position to activate the radio alarm.
- To the **BUZZ ALARM** position to activate the buzzer alarm.

To set the time:

- Press and hold the **TIME** button, then press the **HR** button to set the hour.
- Press and hold the **TIME** button, then press the **MIN** button to set the minute.
- Release the **TIME** button.

To set the alarm:

- Press and hold the **ALARM** button, then press the **HR** button to set the hour and press the **MIN** button to set the minute.
- Release the **ALARM** button.

To wake to music:

Slide the **OFF/BUZZ ALARM/RADIO ALARM/ON** switch to the **RADIO ALARM** position.

To wake to an alarm:

Slide the **OFF/BUZZ ALARM/RADIO ALARM/ON** switch to the **BUZZ ALARM** position.

To turn off alarm:

- Press the **SNOOZE** button to mute the sound for 8-9 minutes.
- Press the **ALARM** button to shut off the alarm.

To use the radio:

- Slide the **OFF/BUZZ ALARM/RADIO ALARM/ON** switch to the **ON** position.
- Slide the **AM/FM** switch to the radio band of your choice (AM or FM).
- Turn the **TUNING** dial to tune to a station.

To set the sleep timer:

- Slide the **OFF/BUZZ ALARM/RADIO ALARM/ON** switch to the **OFF**, **BUZZ ALARM** or **RADIO ALARM** position.
- Press and hold the **SLEEP** button, then press the **HR** and/or **MIN** button to set the sleep timer.
- Release the **SLEEP** button. The radio turns off after the interval you set.
- Press the **SNOOZE** button to cancel the sleep timer setting.

Safety information

- WARNING:** It may cause dangerous radiation exposure by doing the operations beyond of the operation instructions listed in this manual.
- WARNING:** To prevent fire or shock hazard, do not expose the unit to rain or moisture.
- WARNING:** To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.
- Do not expose the apparatus to dripping or splashing. Do not place an object filled with liquid, such as vases, on the apparatus

90-day limited warranty

Visit www.insigniaproducts.com for details.

Contact Insignia:

For customer service please call 1-877-467-4289

www.insigniaproducts.com

Distributed by Best Buy Purchasing, LLC

7601 Penn Avenue South, Richfield, Minnesota, U.S.A. 55423-3645.