


INSIGNIA™

USER GUIDE

7.1 Cu. Ft. Convertible Upright Freezer

NS-UZ70SS26L/NS-UZ70WH26L

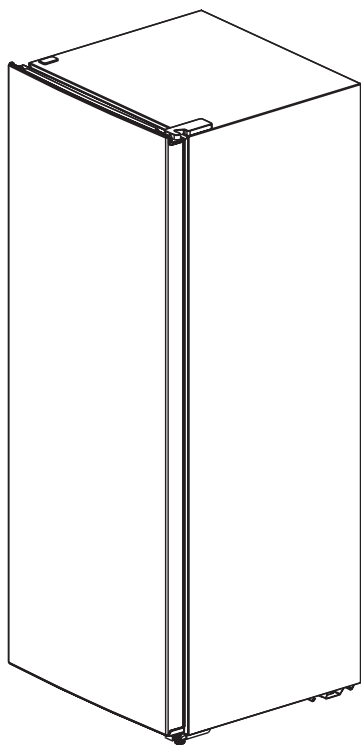

Before using your new product, please read these instructions to prevent any damage.

Contents

Introduction..... 3

IMPORTANT SAFEGUARDS 3

 Grounding requirement 5

Features..... 6

 Package contents..... 6

 Interior 7

Setting up your freezer..... 8

 Before using your freezer..... 8

 Finding a suitable location 8

 Providing correct ventilation 9

 Providing the correct power source.....10

 Leveling your freezer10

 Reversing the freezer door11

Using your freezer 14

 Adjusting the freezer shelves15

Maintaining your freezer..... 15

 Cleaning your freezer15

 Defrosting your freezer.....16

Shutting down your freezer for a long time (several months) 16

Moving your freezer..... 16

Disposing of your freezer..... 16

Tips on saving energy 16

Tips on storing food..... 17

Tips for shopping for frozen foods 17

Tips on defrosting..... 18

Troubleshooting..... 19

Specifications 21

ONE-YEAR LIMITED WARRANTY..... 22

Introduction

Congratulations on your purchase of a high-quality Insignia product.

Your NS-UZ70SS26L, NS-UZ70WH26L represents the state of the art in upright freezer design and is designed for reliable and trouble-free performance.

IMPORTANT SAFEGUARDS

For your safety and correct usage, please read these instructions carefully before using your new appliance to avoid unnecessary mistakes and accidents. Please ensure that all people using this appliance are familiar with its operation and safety features. Keep these instructions in a safe place for future reference and be sure that they are kept with the appliance in the event that it is moved or sold, so that everyone using it through its life will be properly informed on its correct usage and safety. The manufacturer is not responsible for damages caused by misuse. The appliance is for indoor and domestic use only.



WARNING: Risk of fire/flammable materials

- Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- Do not damage the refrigerant circuit.
- Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- If the SUPPLY CORD is damaged, it must be replaced by the manufacturer, its service agent, or a similarly qualified person in order to avoid a hazard.
- The appliance contains a small quantity of refrigerant (R600a) which is environmentally friendly but potentially flammable in the refrigerant circuit.
- Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.
- Do not use extension cords or ungrounded (two prong) adapters.
- Unplug the cooler before carrying out user maintenance on it.

**WARNING: Safety for children and others who are vulnerable**

- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- Keep all packaging away from children to avoid risk of suffocation.
- Never allow children to play with, operate, or crawl inside the refrigerators. Risk of child entrapment. Before you throw away your old freezer:
 1. Remove the door seal and Take off the doors.
 2. Leave the shelves in place so that children may not easily climb inside.
 3. Have the refrigerant removed by a qualified service technician.

**WARNING: General Safety and daily use**

- This appliance is intended to be used in household and similar applications such as:
 1. Staff kitchen areas in shops, offices, and other working environments.
 2. Farm houses and by clients in hotels, motels, and other residential type environments.
 3. Bed and breakfast environments.
 4. Catering and similar non-retail applications.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- Do not place the appliance in direct sunlight.
- Do not operate any electrical appliances within the appliance (such as electric ice cream makers, mixers, etc.), unless they are of the type recommended by the manufacturer.
- Do not store flammable gases or liquids inside the Freezer. There is a risk of an explosion.
- Do not pick up foods or containers with wet hands in the freezing chamber when the freezer is running, especially metal containers, in order to avoid frostbite.
- Unplug this appliance during lightning storms or when it will not be used for long periods of time.
- Unplug the power cord by holding the plug, never by pulling the cord.

**WARNING: Disposal of the appliance**

- It is prohibited to dispose of this appliance as household waste.
- Freezers contain refrigerant and gases in the insulation. Refrigerant and gases must be disposed of professionally as they may cause eye injuries or a fire hazard. Make sure that the refrigerant tubing is not damaged prior to proper disposal.
- Packaging materials with the recycle symbol are recyclable. Dispose of the packaging into a suitable waste collection container to recycle it.

Before disposing of this appliance:

1. Unplug it.
2. Cut off and discard the power cord.

Grounding requirement


Your freezer must be grounded. Your freezer is equipped with a cord having a grounding wire with a grounding plug. The plug must be inserted into an outlet that is correctly installed and grounded. Incorrect use of the grounding plug can result in a risk of electric shock. Consult a qualified electrician or service person if the grounding instructions are not completely understood, or if doubt exists as to whether your freezer is correctly grounded.

SAVE THESE INSTRUCTION


Features

Package contents

- 7.1 Cu. Ft. Convertible Upright Freezer
- Left-Side Hinge Component (for reversing the door)
- User Guide

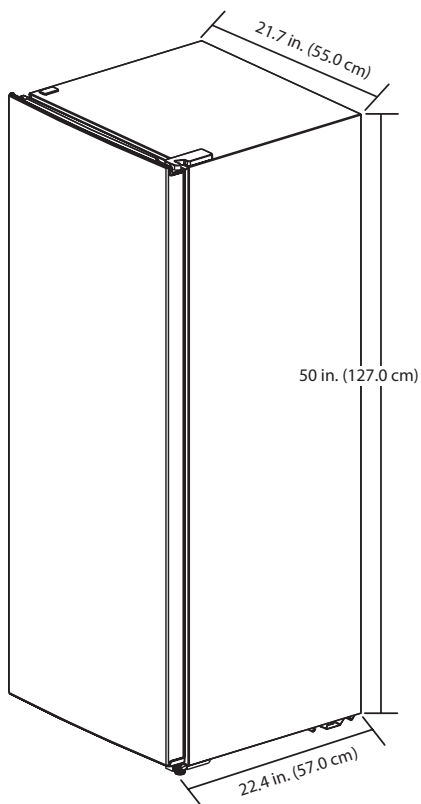

Interior

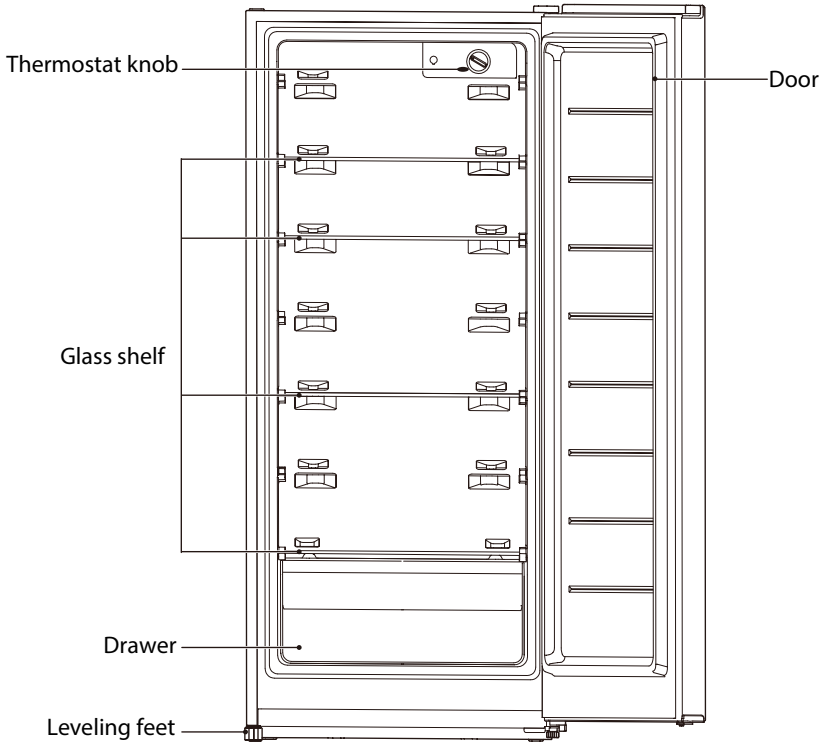

Setting up your freezer

CAUTION:

- This freezer is heavy (83.6 lbs. (37.9 kg)). We recommend that two people be used to move it.
- Before connecting this freezer to a power source, let it stand for approximately six hours to reduce the possibility of a malfunction in the cooling system.

Before using your freezer


- Remove the exterior and interior packaging.
- Wash the inside with a damp, warm cloth and a baking soda solution (two tablespoons in a quart [.94 l] of water), then wipe dry with a dry cloth. Do this periodically to keep your freezer looking new.
- Level your freezer using the leveling feet. If you do not level your freezer, the door may not close or seal correctly, causing cooling, frost, and moisture problems. Turn the leveling feet clockwise to raise or counterclockwise to lower a side.

Finding a suitable location

- Place your freezer on a floor that is strong enough to support it when fully loaded.
- Do not install your freezer on carpeting or a rug.
- Your freezer is designed to be free standing and should not be recessed or built-in.
- Your freezer is garage ready (only in Freezer mode), and is designed to operate in an ambient temperature range of 0 °F (-17.7 °C) to 110 °F (43.3 °C).
- Adjust the feet to keep your freezer level.
- If you locate your freezer next to a fixed wall, allow sufficient space on the hinge side for the door to swing open.
- Position your freezer away from direct sunlight and sources of heat, such as a stove, heater, or radiator. Direct sunlight may affect the acrylic coating and heat sources may increase electrical consumption. Extremely cold temperatures may also prevent your freezer from performing correctly.
- Avoid locating your freezer in moist areas.
- Your freezer is intended for household use only. It is not designed for outside installation, including anywhere that is not temperature controlled, such as a porch.

Providing correct ventilation

Allow at least in. (10 cm) between the left and right sides and top of your freezer and surrounding walls and at least 5 in. (12.7 cm) between the back of your freezer and the back wall.

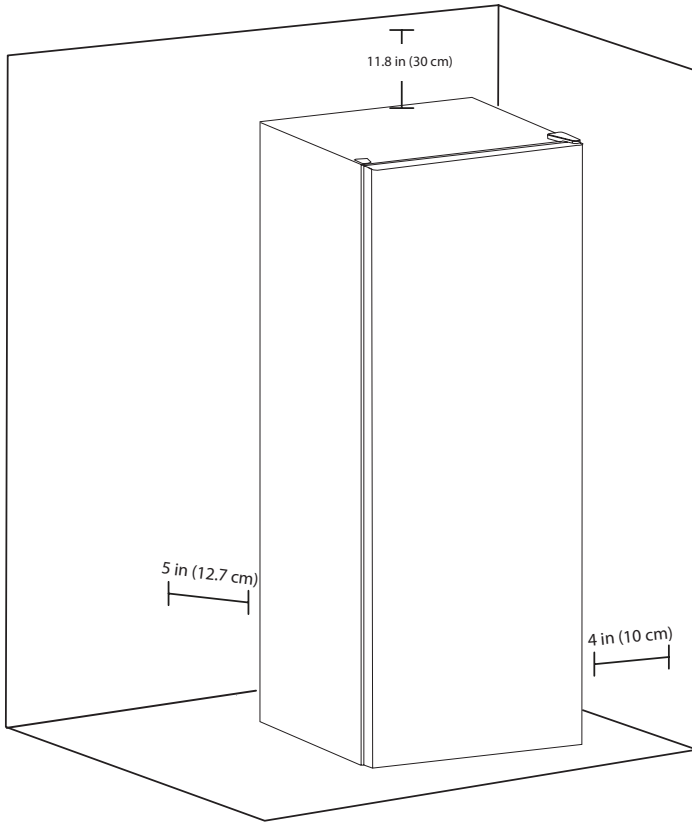


Providing the correct power source

Check your local power source. Your freezer requires a 115V~, 60Hz power supply.

WARNINGS:


Make sure that:

- The power outlet accepts a 3-prong grounding plug. The third prong on the power cord plug grounds your freezer to minimize the possibility of electric shock. Do not modify the power plug.
- You do NOT plug anything else into the same power outlet as your freezer. You may overload the circuit which can cause a fire.
- You do NOT use an extension cord. If your freezer is too far from the power outlet, move your freezer or have a electrician install a plug closer to your freezer.
- The power outlet cannot be turned off with a switch or pull string.

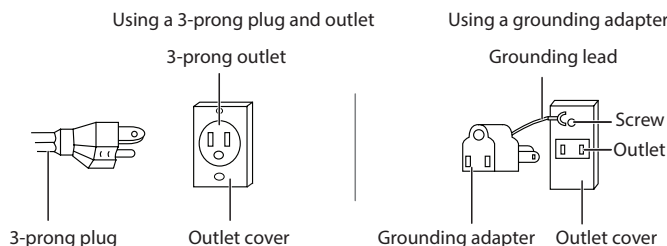

Leveling your freezer

Leveling your freezer is important. If you do not level your freezer during installation, the doors may not close or seal correctly which can cause cooling, frost, or moisture problems.

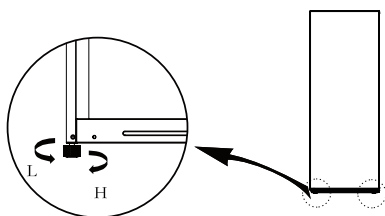


- Rotate the leveling feet clockwise (to raise) your freezer or counter clockwise (to lower).

Note: To make it easier to adjust the feet, have someone push against the top of your freezer to tilt it slightly.

Reversing the freezer door

CAUTION: If you lay your freezer on its back or side for any length of time, wait for six hours after you stand it up again before you plug it in. Otherwise, you may damage internal components.

 You will need the following tools to reverse the freezer door:



Tool A: Phillips head screwdriver



Tool B: Flat head screwdriver



Tool C: T-shaped socket wrench (8mm)




Tool D: Adjustable wrench


1. Make sure that your freezer is unplugged and empty.
2. Tilt your freezer back and rest the front base on something solid so that it won't fall forward or back during the door reversing process. It may help to have another person to assist you.

CAUTION: Make sure that your freezer is stable when you tip it back.


3. Remove the top hinge cover from the top right side of your freezer and the top hinge hole cap from left side. (Tool needed: B)
4. Remove the screws that secure the top right hinge to the door, then remove the hinge. (Tool needed: C)

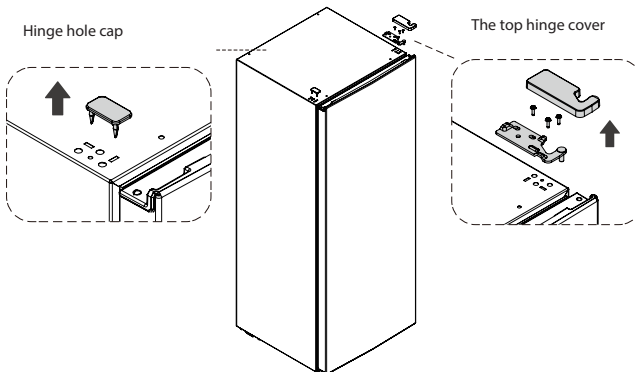


5. Remove the door; Dismantle the door stopper, and install it on other side;(Tool needed: A)

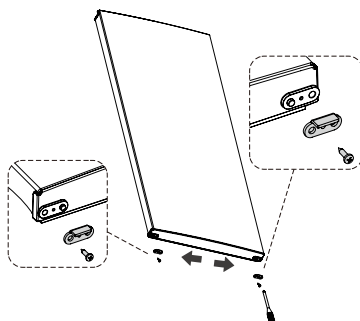


6. Dismantle the lower hinge and leveling foot from the bottom of your freezer. (Tool needed: C)

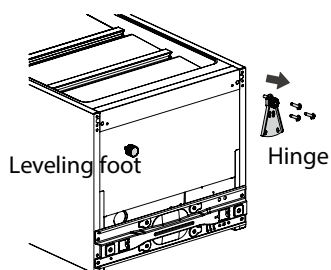

7. Install the lower hinge on the left side of the cabinet and the levelling foot on the right side;(Tool needed: C)

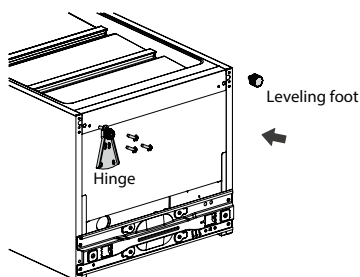

8. Put the door on lower hinge vertically, and validate the gas tightness of door gasket, takeout the spare upper left hinge and hinge cover from accessory bag, then install the upper left hinge by fitting screws. finally to install the hinge cover , and cover the hinge hole cap on upper right side.

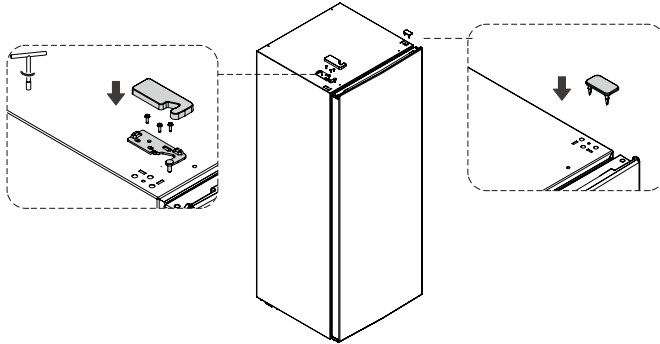

9. With the door closed, make sure that door is aligned horizontally and vertically with the freezer cabinet and that the gasket makes a good seal. When everything is in proper alignment, tighten the bottom hinge bracket.
10. Re-adjust the leveling feet as necessary.


(The picture above is only for reference. The actual conguration will depend on the physical product or statement by the distributor.)

Using your freezer

CAUTIONS:

- If you run your freezer in an ambient temperature below 50° F, it may not operate consistently, it may not operate consistently. For example, the freezer temperature may become too warm and the contents may defrost.
- Internal temperatures can vary based on the location of your freezer, the ambient room temperature, and how often you open the doors.
- Do not store carbonated drinks in the freezer compartment. They may break and damage your freezer.
- Do not exceed the storage times recommended by the food manufacturers for any kind of food.

Before storing foods in your freezer, turn on the freezer and freezer compartments, then wait for 24 hours to make sure that they are working correctly and to let both compartments reach the correct temperatures.

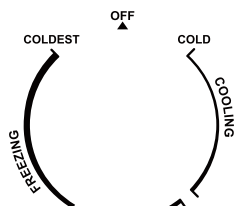

Plug your freezer into a power outlet, then adjust the interior temperature with the temperature control knob. The following should be considered when you are making adjustments:


CAUTION: The temperature control knob should not be turned clockwise past the FREEZER setting, or damage could result.

- Turn the knob clockwise to turn your freezer on (from OFF to FRIDGE mode).
- Continue turning the knob clockwise to go from FRIDGE mode to FREEZER mode.
- Expect a slight click as you change modes.
- The more clockwise you turn the knob, the colder your freezer gets.
- In the middle of each zone, there is a black dot with a snowflake, which indicates the recommended setting for that mode.
- Turn the knob counterclockwise to go from FREEZER mode to FRIDGE mode and from FRIDGE mode to OFF.

Adjusting the freezer shelves

The shelves inside the freezer and freezer compartments are adjustable.

1. Open the freezer door all the way.
2. Lift a shelf, then pull it out.

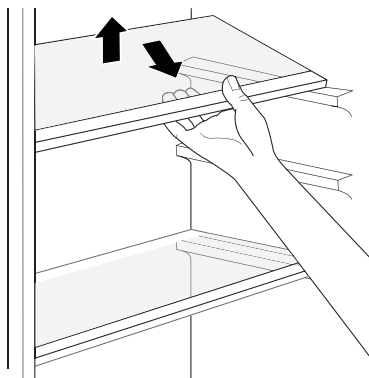

3. To replace a shelf, slide it into the compartment, then lower it into position.

Maintaining your freezer

Cleaning your freezer

CAUTIONS:

To prevent damage to the finish:

- Do not use gasoline, benzine, thinner, or other similar solvents.
- Do not use abrasive cleaners.
- Do not use sharp objects because they are likely to scratch the surface.

We recommend that you do the following every time you clean your freezer to keep it running odor-free and efficiently:

1. Unplug your freezer from the power outlet.
2. Remove all food.
3. If you want to remove the door racks, shelves, crisper, freezer shelf, or freezer door racks, see:
 - Maintaining your freezer on page 14
 - Adjusting the freezer shelves on page 13
4. Clean the doors, handles, and cabinet surfaces with a mild detergent, then rinse with warm water using a wrung-out sponge or cloth.
5. Wash the inside with a damp warm cloth soaked in a solution of one quart (.94 l) of lukewarm water to one tablespoon of baking soda solution, then rinse with warm water using a wrung-out sponge or cloth.
6. Clean the shelves, and drawer with a mild detergent and soft cloth, then rinse with warm water.

7. Make sure that you keep the door gaskets (seals) clean so that the door seals tightly. This helps your freezer to run efficiently.

CAUTION: Make sure that the door gaskets are completely dry before you plug your freezer into the power outlet.

8. Dry all surfaces and removable parts before putting them back into place.
9. Plug your freezer into the power outlet.

Defrosting your freezer

- For improved cooling performance, your refrigerator will need to be defrosted manually if interior frost gets too thick.
- To avoid water flowing out from under the your refrigerator, manually defrost is before switching from freezer mode to refrigerator mode.
- If the drain hole at the bottom of the freezer liner is blocked by ice or dirt, clean it to ensure proper draining.

Shutting down your freezer for a long time (several months)

1. Turn off your freezer and unplug it from the wall outlet.
2. Remove all food.
3. Clean your freezer.
4. Leave the door open slightly to avoid possible formation of condensation, mold, or odor.

CAUTION: Use extreme caution with children. Do not let children play with your freezer.

Moving your freezer

1. Turn off your freezer and unplug it from the power outlet.
2. Remove all food.
3. Securely tape down all loose items inside your freezer.
4. Tape the doors shut.
5. Protect the exterior with moving blankets or pads.
6. Make sure that your freezer stays in the upright position during transportation.

Disposing of your freezer

This appliance should not be treated as regular household waste. It should be taken to the appropriate waste collection point for recycling of electrical components. For information on where to take it, contact your local waste removal agency or government office.

Tips on saving energy

- Locate your freezer in the coolest area of the room, away from heat producing appliances or heating ducts and out of direct sunlight.
- Let hot foods cool to room temperature before placing them in your freezer. Overloading

your freezer forces the compressor to run longer.

- Wrap foods correctly and wipe containers dry before placing them in your freezer. This cuts down on frost build-up inside your freezer.
- Organize and label food to reduce door openings and extended searches.
- Do not use aluminum foil, wax paper, or paper toweling to line shelves. Liners interfere with cold air circulation and make your freezer less efficient.

Tips on storing food

- Always store cooked meats on a freezer shelf above raw meats to avoid bacterial transfer. Keep raw meat on a plate which is large enough to collect juices, and cover the plate with cling film or foil. Leave space around food. This allows cold air to circulate around your freezer so that all parts of your freezer are kept cool.
- To prevent transfer of flavors and food drying out, wrap or cover each food item separately.
- Let hot food cool down before placing it in the freezer. Placing hot food in the freezer could spoil other food and lead to higher temperatures.
- To prevent cold air from escaping, try to limit the number of times you open the doors. When retuning from shopping, sort foods to be kept in the freezer before opening the door. Only open the door to put food in or take it out.
- Do not store food in your freezer which goes bad easily at low temperature, such as bananas and melons.
- When storing food in your freezer, use a container with a lid whenever possible. This prevents moisture from evaporating, and helps food keep its taste and nutrients.
- When storing food in your freezer, wrap the food in polyethylene film, aluminum foil, or other types of freezer storage products.
- Do not block air vents inside with food. Smooth circulation of cold air keeps freezer temperatures even.
- Do not open the door frequently. Opening the door lets warm air enter your freezer and can cause the temperature to rise.
- To adjust the temperature control easily, do not store food near the temperature controls.
- Do not store bottles in your freezer. They may break when frozen.
- Do not refreeze food that has been thawed. This causes a loss of taste and nutrition.
- Leave a small amount of "air space" when freezing liquids to allow for expansion.
- To make the best use of freezer space, freeze liquids (or solids with liquids, such as stew) in square blocks. Pour the liquid into a freezer bag placed inside a square-sided container and freeze it. When the liquid is frozen, remove the bag from the container and seal the bag.

Tips for shopping for frozen foods

- When you are buying frozen food, look at the storage guidelines on the packaging. Check the "Best Before" date. Do not use food that is past this date.
- Check the temperature of the frozen food cabinet in the shop where you buy your frozen foods.
- Make sure that the frozen food package is in perfect condition.
- Always buy frozen products last to avoid thawing while you shop.

- Keep frozen food together while shopping, and on the journey home to help to keep the food cooler.
- Don't buy frozen food unless you can freeze it quickly.
- When transporting frozen food, use special insulated bags that you can buy from most supermarkets and hardware shops. These keep frozen food cold longer.
- Freeze food in small quantities. It freezes faster and takes less time to thaw.
- If you are freezing large amounts of fresh food, select a low temperature range. This will lower the temperature in the freezer so your food freezes faster. When the food is frozen, adjust the temperature back to its normal mode.

Tips on defrosting

- For better performance, your freezer should be defrosted when the frost inside exceeds 1/4 in. thick.
- Your freezer should be defrosted prior to converting from Freezer mode to Refrigerator mode.

Troubleshooting

PROBLEM	SOLUTION
My freezer does not work.	<ul style="list-style-type: none"> • Make sure that your freezer is securely plugged into a working outlet. • Make sure that your power source has the correct voltage. Your freezer's voltage rating is on a label on the back of your freezer. • Check the house fuse or circuit breaker box and replace the fuse or reset the circuit breaker.
My freezer does not keep foods frozen.	<ul style="list-style-type: none"> • Make sure that your freezer is securely plugged into a working outlet. • Make sure that your freezer door is fully closed and that the gasket makes a good seal with the freezer cabinet. • Make sure that the temperature control knob is set to an appropriate setting. Adjust it to a colder temperature (clockwise), if necessary.
The freezer has a bad odor.	<ul style="list-style-type: none"> • Make sure that all food with a strong odor (like onions) is wrapped or stored in airtight packaging. • Certain containers and wrapping materials (such as paper, foil, or plastic) can cause odors. If you think this might be the case, try using different containers or a different brand of wrapping material. • Check for spoiled food and remove it. • Clean the inside of your freezer. See <i>Cleaning your freezer</i> on page 14.
The freezer door does not close completely.	<ul style="list-style-type: none"> • Make sure that no food packages are in the way. • Make sure that the door gasket (seal) are clean. See <i>Cleaning your freezer</i> on page 14. • If the door gasket does not seal, try heating then cooling the seal. You can use an electric hair dryer to heat the seal. • Make sure that your freezer is level. See <i>Leveling your freezer</i> on page 9.
The temperature is too warm.	<ul style="list-style-type: none"> • You may have left the door open too long or opened it too frequently. • Make sure that no obstacle is keeping the door from closing correctly. • Adjust the freezer temperature. See <i>Adjusting the freezer shelves</i> on page 13. • Your freezer may not have enough clearance from walls or the ceiling. See <i>Providing correct ventilation</i> on page 8.
The temperature is too cold.	<ul style="list-style-type: none"> • Adjust the freezer temperature. See <i>Adjusting the freezer shelves</i> on page 13.
A layer of frost occurs in your freezer.	<ul style="list-style-type: none"> • A layer of frost may occur on the freezer's interior walls if the freezer is opened frequently or kept open too long. • Make sure that the air outlets are not blocked by food. • Make sure that the doors are fully closed.

PROBLEM	SOLUTION
The freezer door is hard to open or close.	<ul style="list-style-type: none"> • When you open the freezer door, warm air rushes inside. When you close the door, the warm air rushes to the condenser which causes a vacuum. This causes the door to be hard to open for about 10 to 15 seconds after closing. • If the door is hard to open at other times, try rubbing paraffin wax or petroleum jelly along the edges of the entire gasket. Paraffin wax is used for canning and is safe for use around food. • If the door is hard to close, try slightly loosening the tension on the door hinges.
The compressor runs for a long time or turns on and off frequently.	<p>The compressor runs longer if:</p> <ul style="list-style-type: none"> • The room temperature is high. • You just added a large amount of food. Wait for the food to freeze, then check again. • You open and close the door frequently. • The door gasket is dirty. Clean the gasket. See Cleaning your freezer on page 14. • Your freezer has been disconnected for a period of time. Wait for your freezer to cool (about four hours) before adding food. • You have the temperature set too low.
The freezer makes unusual noises or vibrations.	<p>The following sounds are normal:</p> <ul style="list-style-type: none"> • Compressor running noises. • Air movement noise from the small fan motor in the freezer compartment or other compartments. • Popping noise during automatic defrosting. • Clicking noise before the compressor starts. <p>Other unusual noises or vibrations may occur:</p> <ul style="list-style-type: none"> • If you have items on the top of your freezer. Remove the items. • If your freezer is not level. See Leveling your freezer on page 9. • If your freezer is touching walls. Move it away from the walls. • If the shelves or drawers are installed incorrectly.

Specifications

Dimensions (W × D × H)	21.7 × 22.4 × 50 in. (55.0×57.0×127.0 cm)
Internal dimensions(W × D × H)	Freezer compartment (H × W × D): 42.3 x17.2 x 16.8 in. (107.5 x 43.7 x 42.8 cm) Shelf (W × D): 17 x 16.5 in. (43.2 x 41.8 cm) Crisper drawer (H x W x D): 7.36 x 16.7 x 10.2 in. (18.7 x 42.3 x 26.0 cm)
Weight	83.8 lbs. (38 kg)
Power requirements	115V~60Hz
Current	1.5 A
Temperature range	10.4°F to -11.2°F (-12°C to -24°C) ± 5°F (3°C)
Ambient temperature ranges	Refrigerator mode: 50°F to 110°F (10°C to 43°C) Freezer mode: 0° to 110° F (-17.8° to 43.3° C)
Power cord length	5.4 ft. (165 cm)
Power consumption per year	333 kWh
Certifications	DOE approved
Garage ready?	Yes. Garage ready only in freezer mode in ambient temperatures of 0° to 110° F (-17.8° to 43.3° C)

ONE-YEAR LIMITED WARRANTY

Best Buy, or its Authorized Partner of Insignia branded products, warrants to you, the original purchaser of this new Insignia branded product ("Product"), that the Product shall be free of defects in the original manufacture of the material or workmanship for a period of one (1) year from the date of your purchase of the Product or the date of delivery (if later than the date of purchase) ("Warranty Period").

For this warranty to apply, your Product must be (i) purchased in the United States or Canada from a Best Buy branded retail store, online at www.bestbuy.com or www.bestbuy.ca, or from Best Buy's Authorized Partner, and (ii) packaged or sold with this warranty statement. The term "Best Buy", as used in this warranty, refers to Best Buy branded retail stores, www.bestbuy.com, www.bestbuy.ca, and Best Buy's Authorized Partner.

Because Insignia cannot control the quality of products sold by unauthorized sellers, this warranty applies only to Products that were purchased from Best Buy or an Insignia Authorized Partner, unless otherwise prohibited by law. Insignia reserves the right to reject warranty claims for Products purchased from unauthorized sellers, including unauthorized websites.

REPAIR OR REPLACEMENT, AS PROVIDED UNDER THIS WARRANTY, IS YOUR EXCLUSIVE REMEDY FOR BREACH OF WARRANTY. INSIGNIA SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR THE BREACH OF ANY EXPRESSED OR IMPLIED WARRANTY ON THIS PRODUCT, INCLUDING, BUT NOT LIMITED TO, LOST DATA, LOSS OF USE OF YOUR PRODUCT, LOST BUSINESS, OR LOST PROFITS. INSIGNIA PRODUCTS MAKES NO OTHER EXPRESS WARRANTIES WITH RESPECT TO THE PRODUCT. ALL EXPRESSED AND IMPLIED WARRANTIES FOR THE PRODUCT, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE WARRANTY PERIOD SET FORTH ABOVE AND NO WARRANTIES, WHETHER EXPRESSED OR IMPLIED, WILL APPLY AFTER THE WARRANTY PERIOD. SOME STATES, PROVINCES, AND JURISDICTIONS DO NOT ALLOW LIMITATIONS ON (i) HOW LONG AN IMPLIED WARRANTY LASTS, (ii) EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, or (iii) LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE.

How long does the coverage last?

The Warranty Period lasts for 1 year (365 days) from the date you purchased the Product or the date of delivery (if later than the date of purchase). Your purchase date is printed on the receipt you received with the Product. In the event that Authorized Partner ceases to sell the covered Insignia branded product, this warranty shall terminate for that product and there shall be no repair or replacement of the Product.

What does this warranty cover?

During the Warranty Period, if the original manufacture of the material or workmanship of the Product is determined to be defective by an authorized Insignia repair center or store personnel, Insignia will (at its sole option): (1) repair the Product with new or rebuilt parts; or (2) replace the Product at no charge with new or rebuilt comparable products or parts. Products and parts replaced under this warranty become the property of Insignia and are not returned to you. If service of Products or parts are required after the Warranty Period expires, you must pay all labor and parts charges. This warranty lasts as long as you own your Insignia Product during the Warranty Period. Warranty coverage terminates if you sell or otherwise transfer the Product.

How to obtain warranty service?

If you purchased the Product at a Best Buy retail store location or from a Best Buy online website (www.bestbuy.com or www.bestbuy.ca), please take your original receipt and the Product to any Best Buy store. Make sure that you place the Product in its original packaging or packaging that provides the same amount of protection as the original packaging. If you purchased your Product from an Authorized Partner, call Insignia at 1-877-467-4289. To obtain warranty service, in the United States and Canada call 1-877-467-4289. Call agents may diagnose and correct the issue over the phone.

If you purchased the Product from an Authorized Partner other than Best Buy, please call 1-888-BESTBUY in the United States or 1-866-BESTBUY in Canada. You will be asked to provide proof of purchase and to return your Product to Best Buy. Make sure that you put the Product in its original packaging or packaging that provides the same amount of protection as the original packaging.

Where is the warranty valid?

This warranty is valid only in the United States and Canada to the original purchaser of the product from an Authorized Partner, in the country where the original purchase was made.

What does the warranty not cover?

This warranty does not cover:

- Food, beverage, and or medicine loss/spoilage.
- Damage to other products caused by a power surge or other similar issue while connected to the Product.
- Customer instruction/education.
- Installation.
- Set up adjustments.
- Cosmetic damage.
- Damage due to weather, lightning, and other acts of God, such as power surges.
- Accidental damage.
- Misuse.
- Abuse.

- Negligence.
- Commercial purposes/use, including but not limited to use in a place of business or in communal areas of a multiple dwelling condominium or apartment complex, or otherwise used in a place of other than a private home.
- Modification of any part of the Product, including the antenna.
- Display panel damaged by static (non-moving) images applied for lengthy periods(burn-in).
- Damage due to incorrect operation or maintenance.
- Connection to an incorrect voltage or power supply.
- Damage due to attempted repair by any person not authorized by Insignia to service the Product.
- Products sold "as is" or "with all faults".
- Consumables, including but not limited to batteries (i.e. AA, AAA, C etc.).
- Products where the factory applied serial number has been altered or removed.
- Loss or Theft of this product or any part of the product.
- Display panels containing up to three (3) pixel failures (dots that are dark or incorrectly illuminated) grouped in an area smaller than one tenth (1/10) of the display size or up to five (5) pixel failures throughout the display. (Pixel based displays may contain a limited number of pixels that may not function normally.).
- Failures or Damage caused by any contact including but not limited to liquids, gels or pastes.

Contact Insignia:

1-877-467-4289

www.insigniaproducts.com

INSIGNIA is a trademark of Best Buy and its affiliated companies.

*Distributed by Best Buy Purchasing, LLC

7601 Penn Ave South, Richfield, MN 55423 U.S.A

©2025 Best Buy. All rights reserved.

INSIGNIA™

www.insigniaproducts.com
1-877-467-4289 (U.S. and Canada)

INSIGNIA is a trademark of Best Buy and its affiliated companies.
Distributed by Best Buy Purchasing, LLC
7601 Penn Ave South, Richfield, MN 55423 U.S.A.
©2025 Best Buy. All rights reserved.

V3 ENGLISH
25-1031