


INSIGNIA™

ASSEMBLY GUIDE

Console for TVs up to 80"

NS-HFMS80

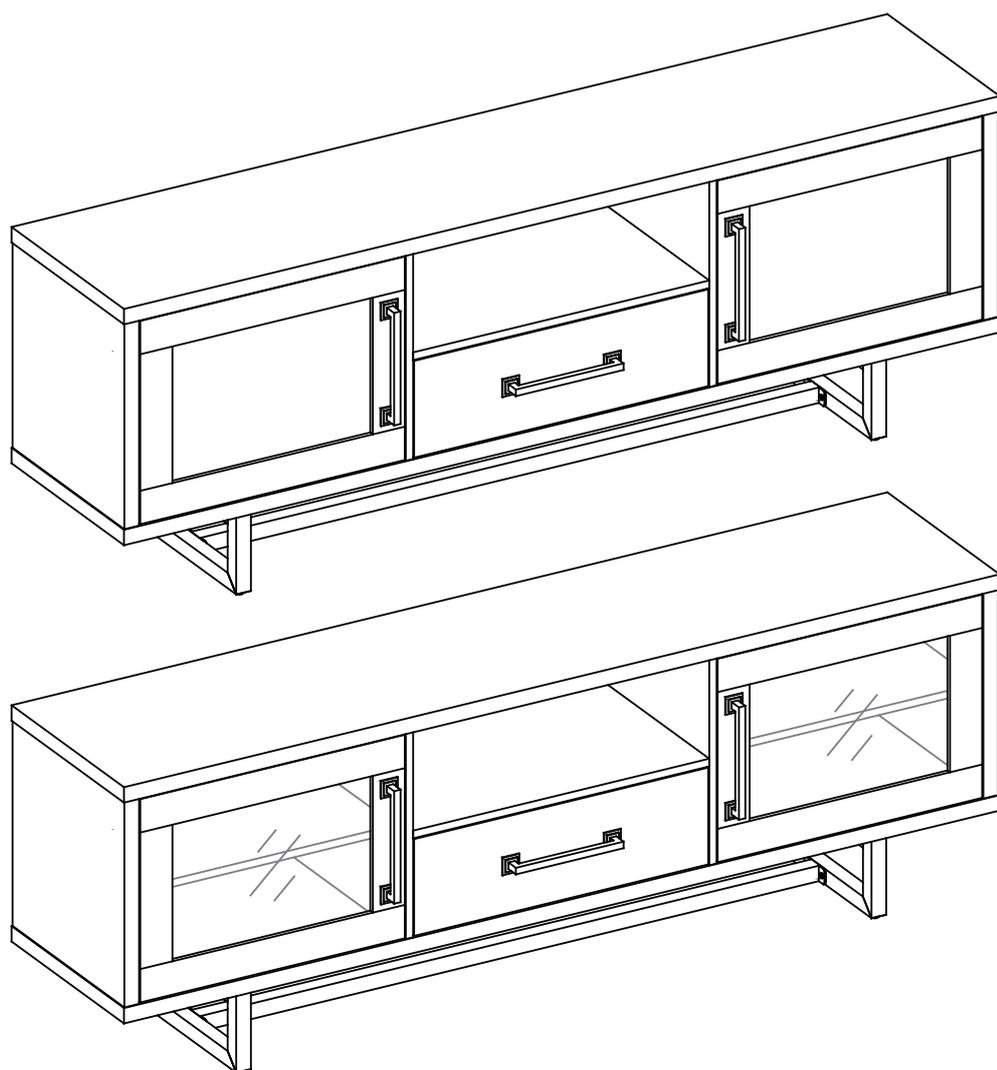

Before using your new product, please read these instructions to prevent any damage.

INSIGNIA™

Contents

IMPORTANT SAFEGUARDS	3
Features	4
Dimensions	4
Package contents	5
Parts	5
Hardware	6
Tools needed	7
Installation tips	7
Assembling your stand	8
Maintaining your TV console	35
Specifications	35
ONE-YEAR LIMITED WARRANTY	36

Before you begin >>>>



3D-GUIDED INTERACTIVE ASSEMBLY INSTRUCTIONS CAN BE FOUND ON **BILT®**

DOWNLOAD THE FREE APP



IMPORTANT SAFEGUARDS

WARNING



Some steps are more easily handled with two adults.

CAUTION
 The top surface of this stand is designed for use with a product weighing no more than 135 lbs. (61.2 kg) and having a width that permits it to sit evenly on the stand with no more than a one-inch overhang on each side of the shelf. Use with products that weigh more than the maximum weight allowed, or with dimensions that extend beyond the maximum width may result in instability, which may result in injury.

CAUTION
 The drawer weight capacity of this product is 30 lbs. (13.6 kg).

CAUTION
 This product contains small items that could be a choking hazard if swallowed. Keep these items away from young children!

WARNING
 Please use your stand correctly and safely. Improper use can cause safety hazards or damage to your furniture or household items. Carefully read the following chart.


LOOK OUT FOR:	WHAT CAN HAPPEN:	HOW TO AVOID THE PROBLEM:
<ul style="list-style-type: none"> Children climbing on the stand. A child may try to reach a toy or other object by climbing on the stand. Children will play and be active near the TV. 	<ul style="list-style-type: none"> Risk of injury or death. A child climbing on the stand can make it top-heavy and cause it to tip over. A child playing with a TV can cause it to tip over. 	<ul style="list-style-type: none"> Never allow children to climb on or play with the stand. Do not place toys or food on the top shelves. Children may try to climb to reach them out of curiosity.
<ul style="list-style-type: none"> Improper use of the stand to support TVs. The stand is designed for use with TVs will specify the maximum weight rating and recommended size of the TVs it will safely support. 	<ul style="list-style-type: none"> Risk of injury or death. TVs can be very heavy. Note, older CRT TVs tend to be unbalanced and prone to tipping forward. 	<ul style="list-style-type: none"> A TV must only be set on furniture specifically designed to support a television. Never use a TV that exceeds the weight ratings or size guidelines specified for the stand.
<ul style="list-style-type: none"> Improperly moving the stand. 	<ul style="list-style-type: none"> The stand can tip over or break if improperly moved. Risk of injury. 	<ul style="list-style-type: none"> Unload shelves from the top to the bottom before moving the stand. Do not push the stand, especially on a carpeted floor. Have a friend help you lift the item and set it in place. Do not lift the stand using the top shelf. Lift from the frame or leg assembly. Remove the TV before moving the TV stand.
<ul style="list-style-type: none"> The TV/stand assembly tipping forward. 	<ul style="list-style-type: none"> Risk of injury. Top-heavy furniture can tip over. The TV and stand could be damaged. 	<ul style="list-style-type: none"> Use the tipping restraint hardware provided and install it properly.

SAVE THESE INSTRUCTIONS

Features

- Interchangeable door fronts customize your stand's look with either glass or wood insert panels
- Sturdy frame supports most flat screen TVs up to 80 in. (203.2 cm) and 135 lbs (61.2 kg)
- Shelving adds space for cable boxes, Blu-ray players, game consoles, and more
- Drawer stores cords, spare remotes and other accessories out of sight
- Light gray wood finish with metal accents looks modern to match most decor
- Cutouts leave room for cords to exit the back while ventilating electronics


Dimensions

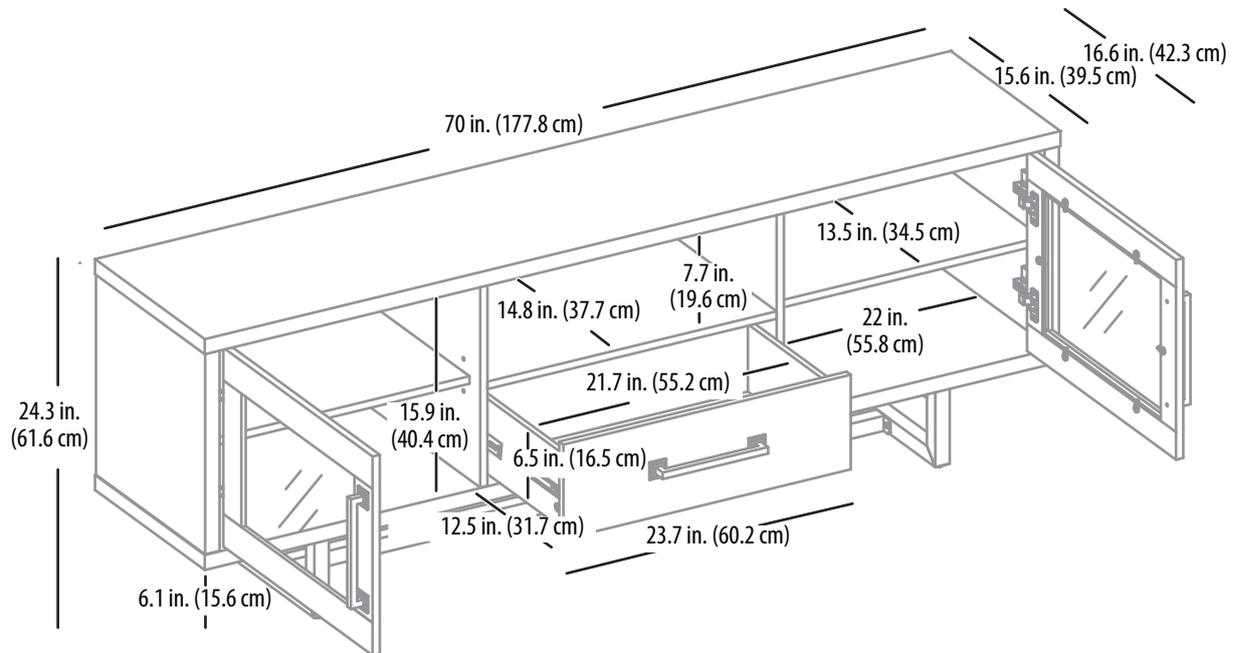

Package contents


Make sure that you have all the parts necessary to assemble your new TV stand.

Parts

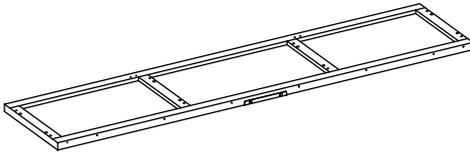


A Top panel (1)


Note: Keep the stopper template attached to the top panel

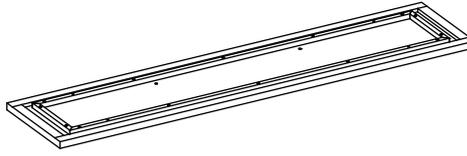

B Bottom panel (1)

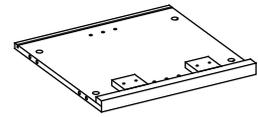

C Left side panel (1)

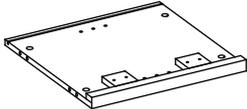

D Right side panel (1)




E Left partition panel (1)




F Right partition panel (1)




G Media Shelf (1)

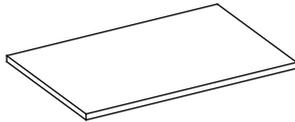


H Adjustable shelf (2)

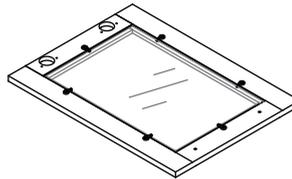


I Door (2)

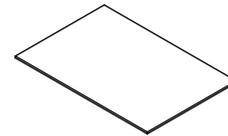


J Wood door panel (2)

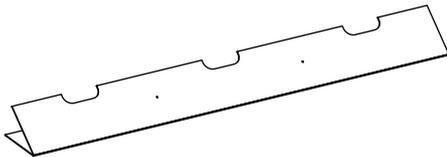

K Back panel (1)

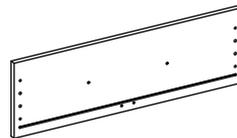


L Drawer front panel (1)

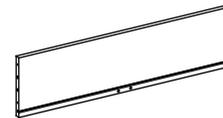


M Drawer back panel (1)



N Drawer left side panel (1)

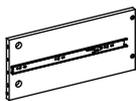


P Drawer right side panel (1)

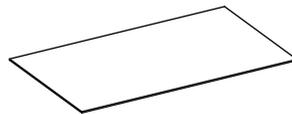


Q Drawer bottom panel (1)



R Drawer bottom support (1)





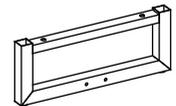


S Metal base (2)

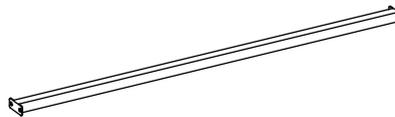


T Metal stretcher (1)

Hardware

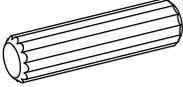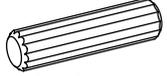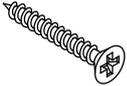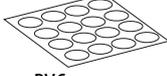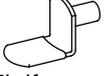LABEL	STAND PART	QTY.
U	 Wood dowel M8 x 30 mm	20
V	 Cam pin	26
W	 Large cam lock	20
X	 Wood dowel M6 x 30 mm	8
Y	 Small cam lock	6
Z	 Flat head screw M4 x 38 mm	6
AA	 Washer head screw M3.5 x 15 mm	4
BB	 Flat head screw M3.5 x 15 mm	4
CC	 Door stopper	2
DD	 PVC cover	16
EE	 Shelf support	8
FF	 Zinc hinge screw M4 x 14 mm	8
GG	 Hinge	4

LABEL	STAND PART	QTY.
HH	 Handle	3
II	 Handle bolt	6
JJ	 Bolt 1/4" x 5/8"	4
KK	 Bolt 1/4" x 1-1/4"	4
LL	 Lock washer	8
MM	 Flat washer	8
NN	 Plastic holder	8
PP	 Flat head screw M3 x 17 mm	8
QQ	 Acrylic stopper	2
RR	 4 mm hex wrench	1
SS	 Glue	1
TT	 Touch-up pen	1
UU	 Tipping restraint hardware kit	2


Tools needed

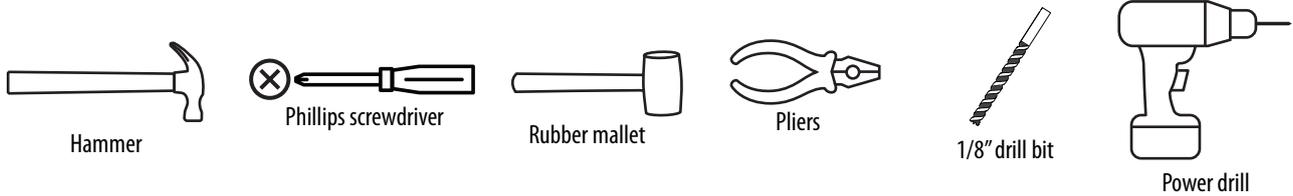

Installation tips


Gluing wood dowels (U and X)

When using a wood dowel (**U** and **X**), put one drop of glue (**SS**) in the hole before you insert the wood dowel (**U** and **X**). Insert the wood dowel (**U** and **X**), then gently tap it with a rubber mallet to secure it in place.

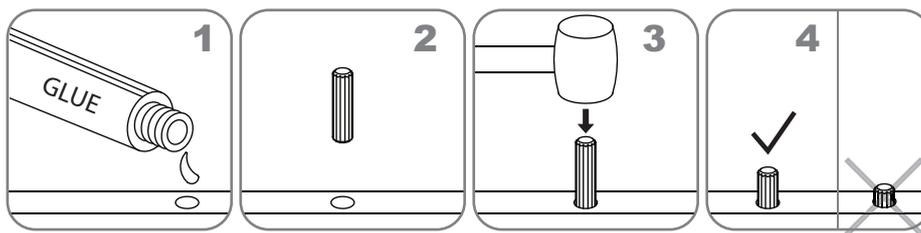

Locking cam pins (V) and cam locks (W and Y)

- 1 One end of a cam pin (**V**) is threaded so that it screws into place. The other end is not threaded. Before you insert the un-threaded end into a hole, insert a cam lock (**W** and **Y**) into the hole and make sure that the hole in the cam lock (**W** and **Y**) faces the outside edge of the part being used.
- 2 Insert the un-threaded end of the cam pin (**V**) through the hole in the part being used and into the cam lock hole, then rotate the cam lock (**W** and **Y**) clockwise with a screwdriver to lock the cam pin (**V**) into place.
- 3 Insert a PVC cover (**DD**) into the cross slot of the cam lock (**W** and **Y**) to conceal.

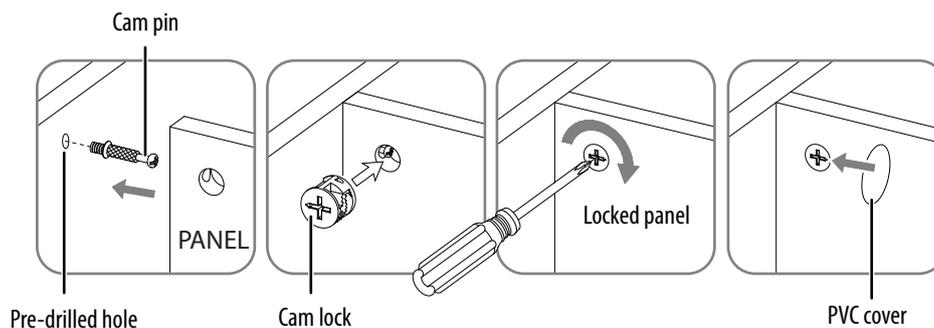


Assembling your stand

Tip: Assemble your stand on a carpeted floor or the empty TV stand box to avoid scratching it.


Note: Do not fully tighten all bolts until you finish assembling all of the parts. After assembly, go back and fully tighten all bolts. This will make the assembly easier.


STEP 1: Screw cam pins onto the drawer front panel

You need:

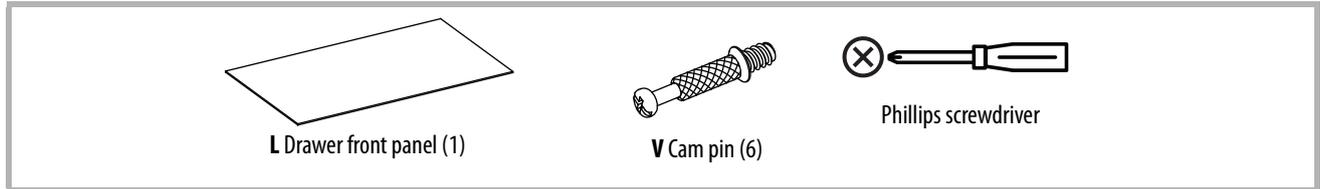


- Securely screw the cam pins (V) into the indicated holes in the drawer front panel (L), using a Phillips screwdriver.

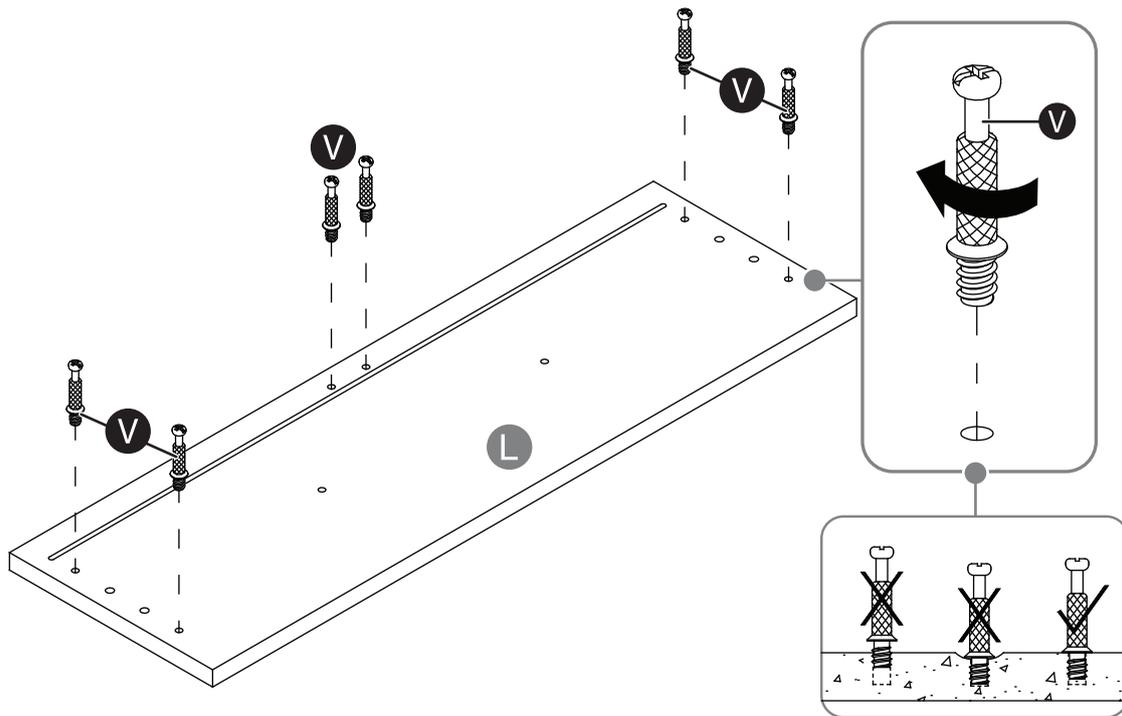

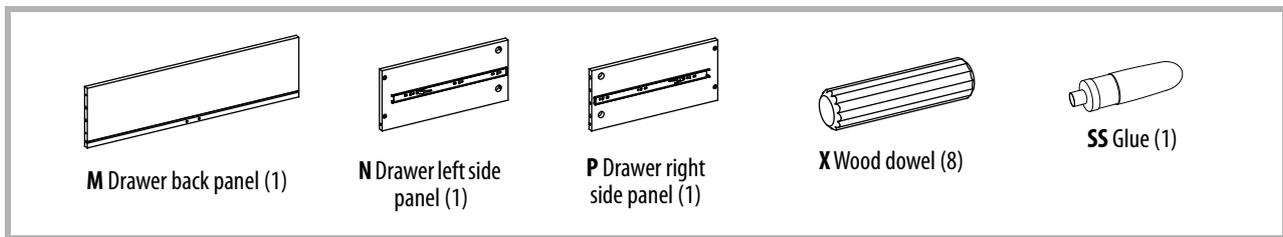
STEP 2: Install the small wood dowls**You need:**

- Glue eight small wood dowels (**X**) into the drilled holes on the ends of the drawer back panel (**M**) and drawer side panels (**N** and **P**).

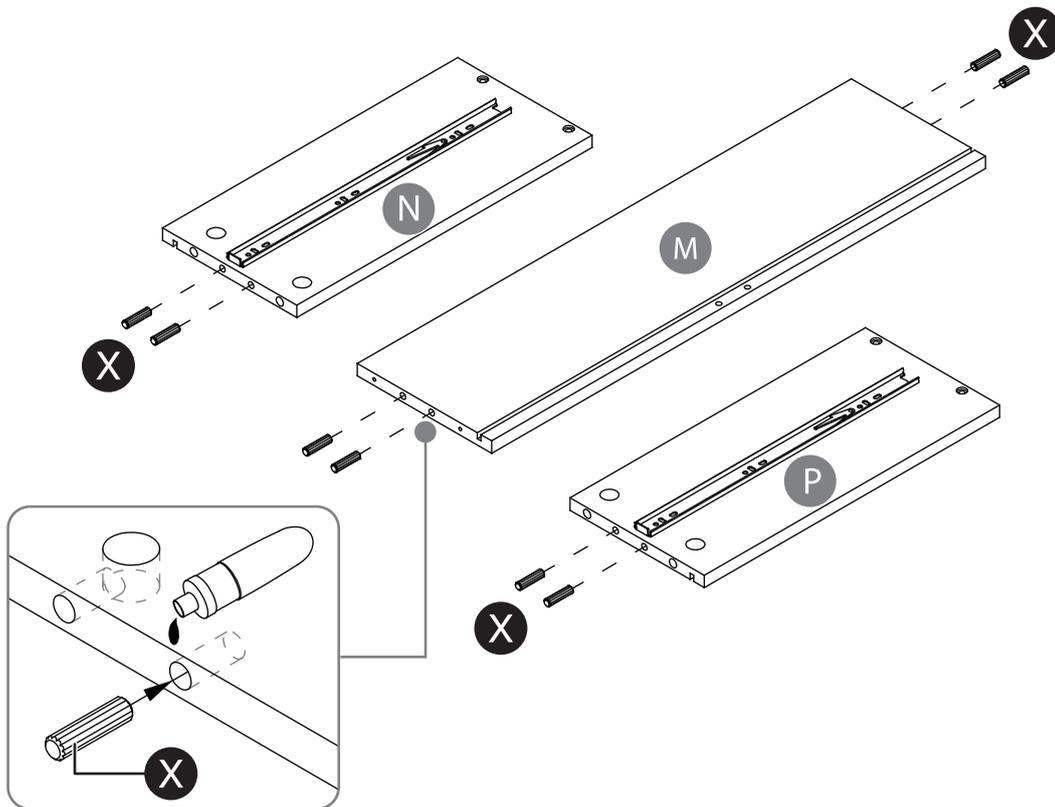



STEP 3: Assemble the drawer back panel and the drawer side panels

You need:

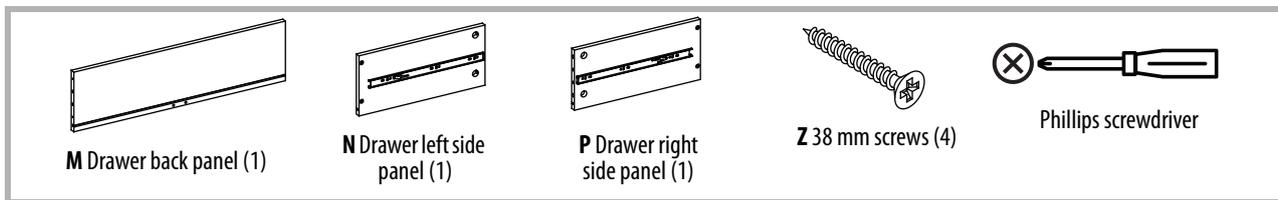


- Attach the drawer back panel (M) between the drawer side panels (N and P) with four 38 mm screws, using a Phillips screwdriver. The grooves in the drawer panels must line up with each other and face inward.

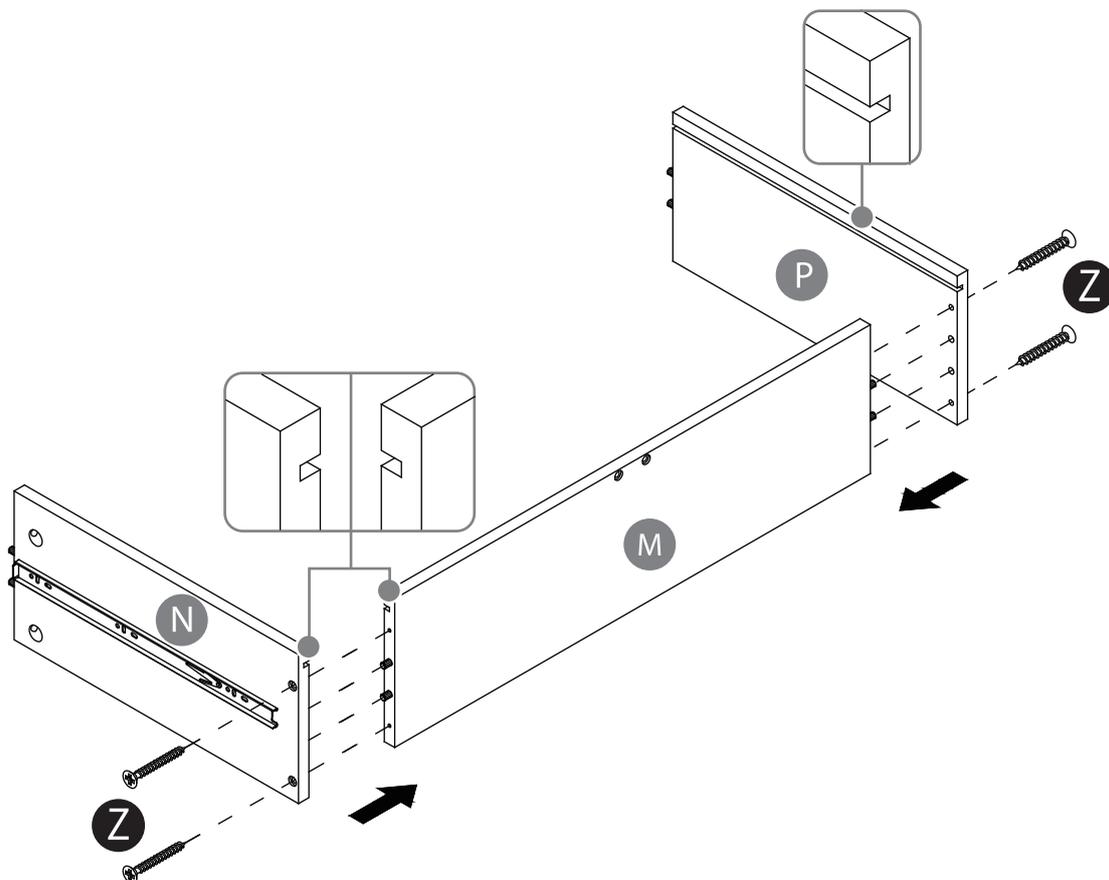

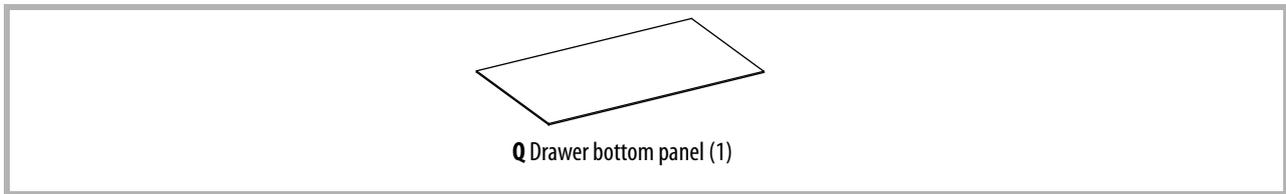
STEP 4: Install the drawer bottom panel**You need:**

- Slide the drawer bottom panel (**Q**) into the drawer assembly (**N**, **P**, and **M**) until fully inserted.

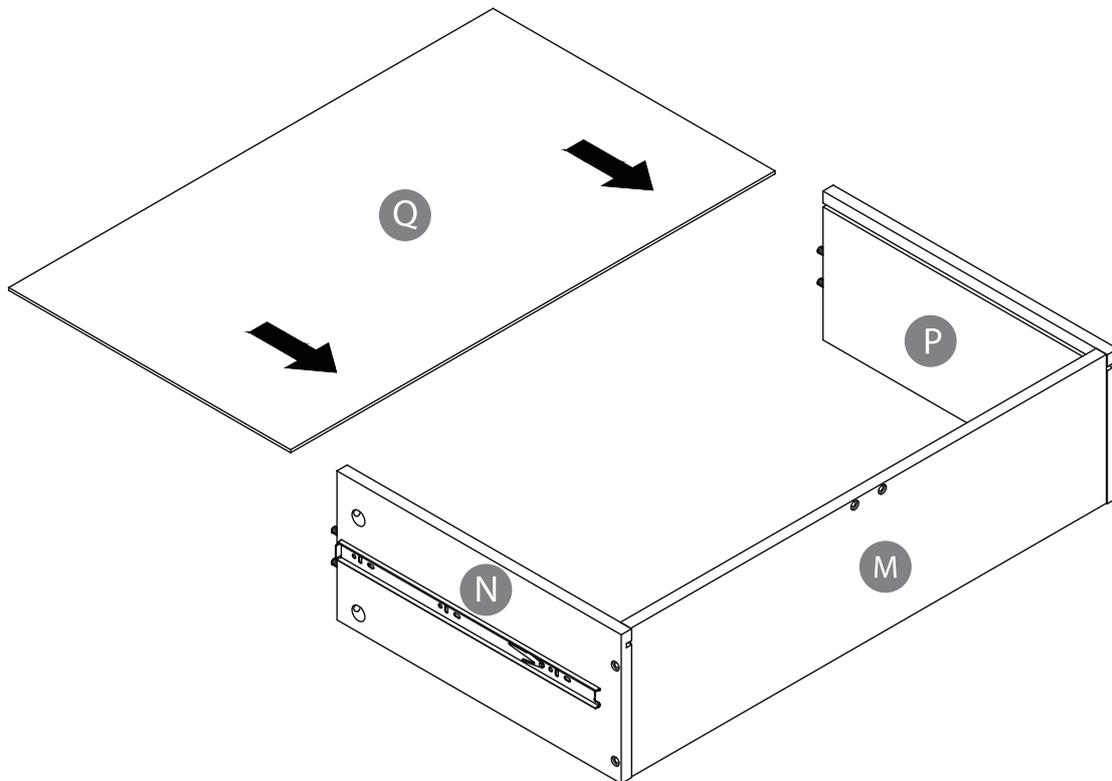



STEP 5: Install the drawer bottom support

You need:

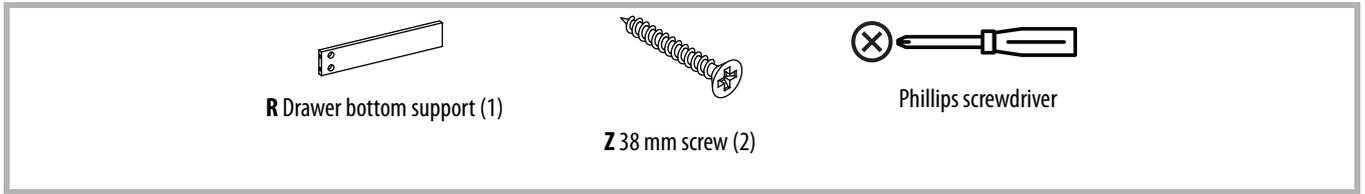


- Fasten the drawer bottom support (R) to the drawer back panel (M) with two 38 mm screws (Z). The cam screw holes should face upward.

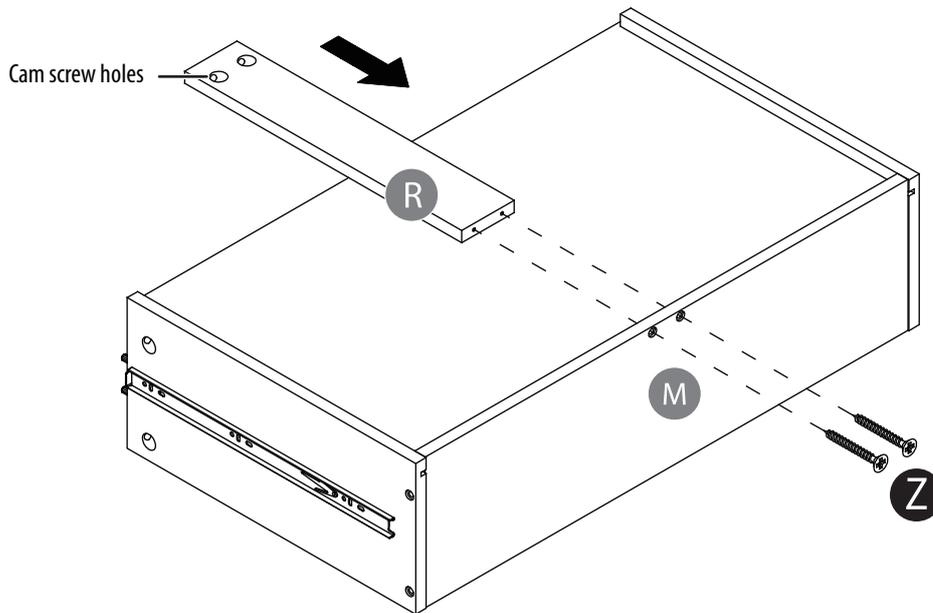

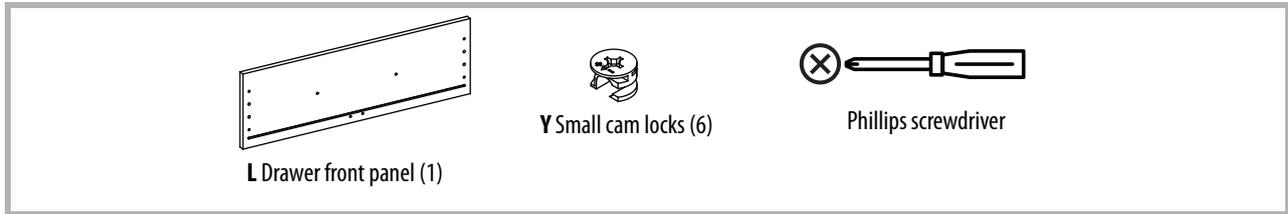
STEP 6: Install the drawer front**You need:**

- Stand the drawer assembly on its back and position the drawer front panel (L) onto the installed wood dowels. Fasten the drawer front panel in place with the small cam locks (Y).

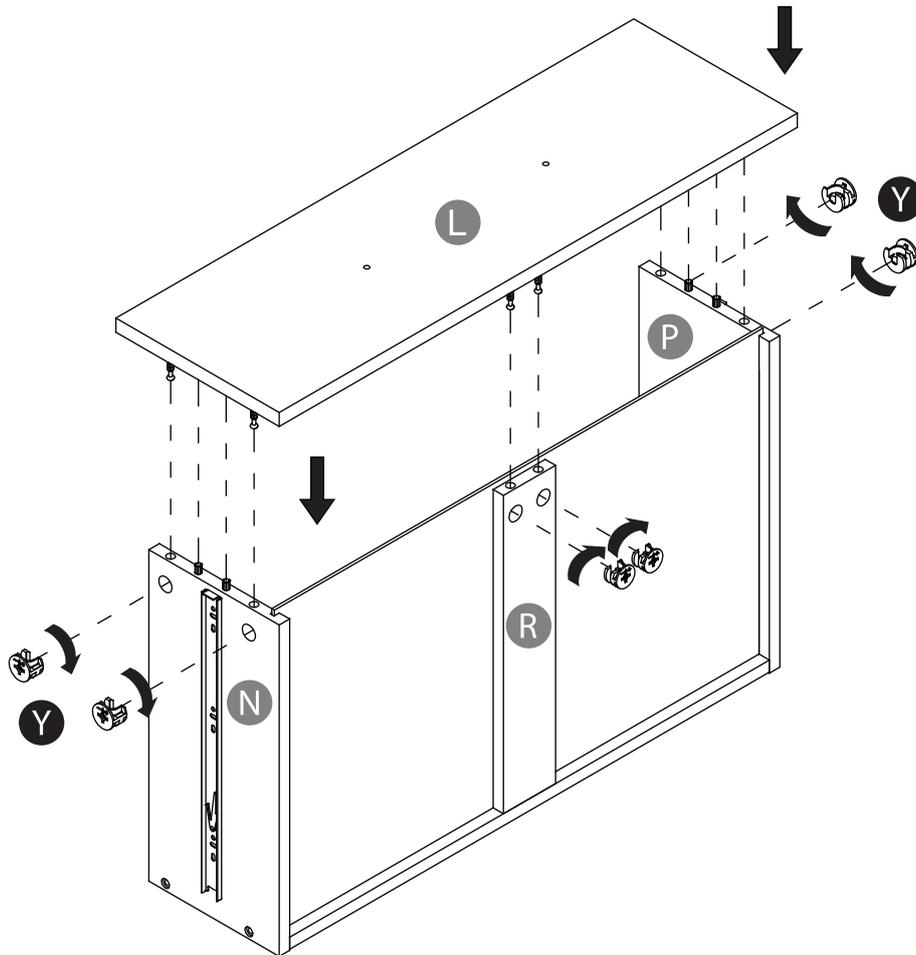



STEP 7: Install the drawer handle

You need:

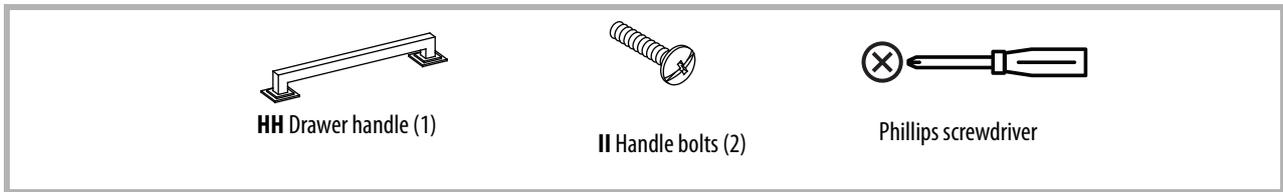


- Turn the drawer assembly upright and attach the drawer handle (**HH**) to the front of the drawer assembly with two handle bolts (**II**).

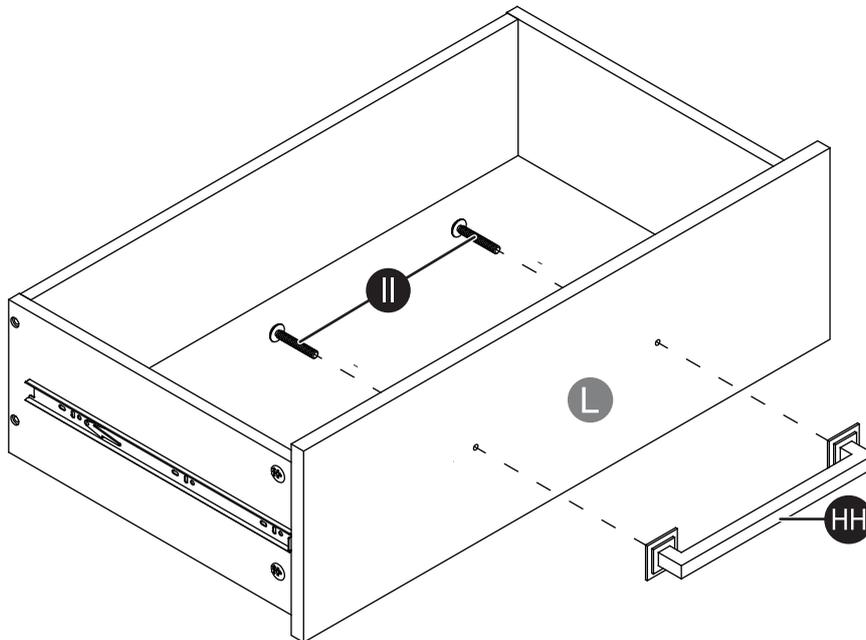

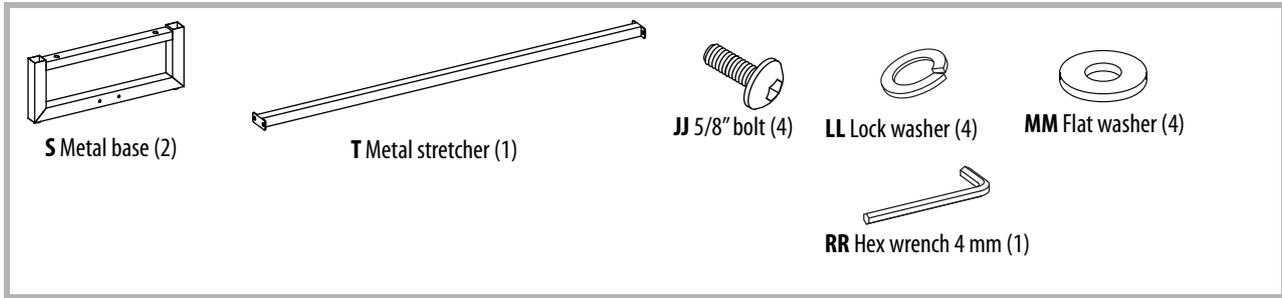
STEP 8: Assembling the metal base**You need:**

- Insert four 5/8" bolts (**JJ**) with four lock washers (**LL**) and flat washers (**MM**) through the holes in the metal stretcher (**T**), into the metal bases (**S**), then tighten the bolts with the 4 mm hex wrench (**RR**).

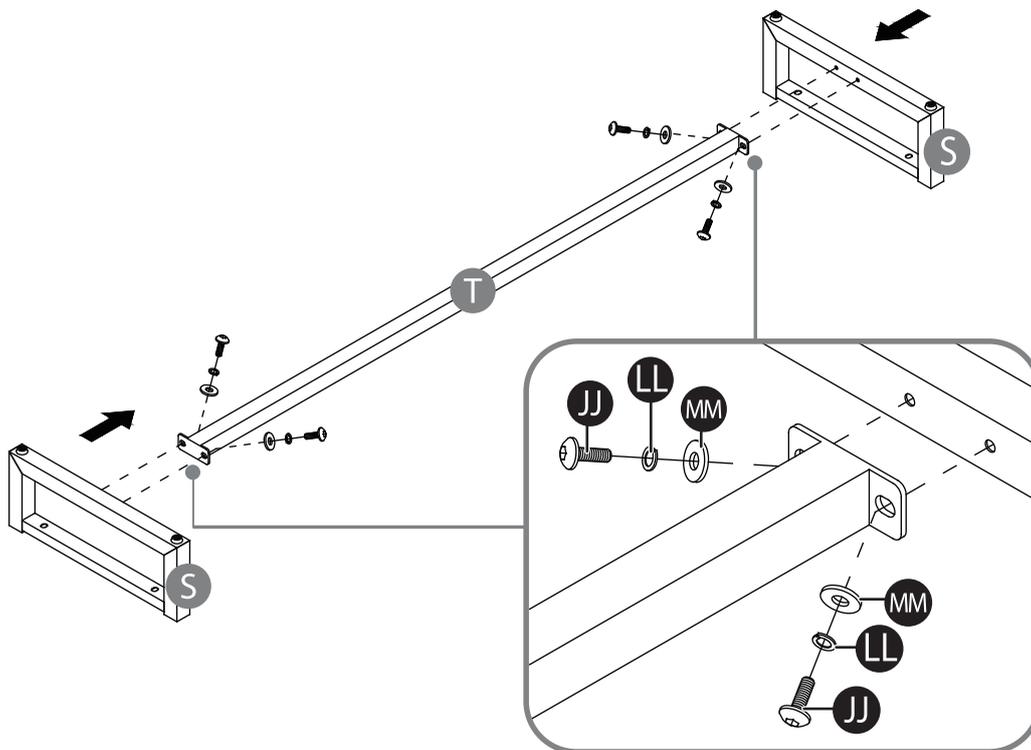



STEP 9: Attach the metal base to the bottom panel

You need:

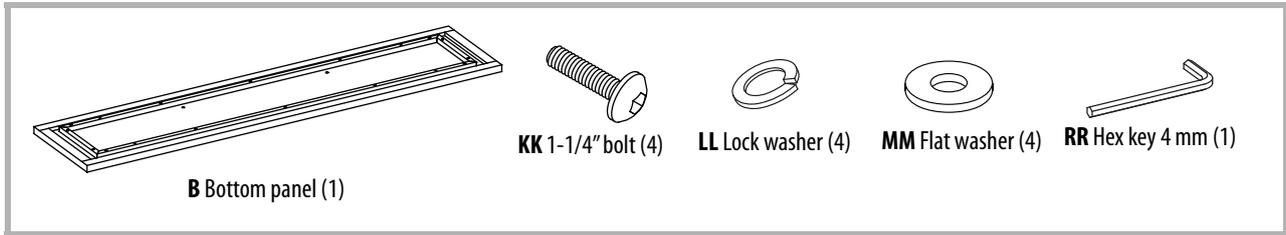


- Insert four 1/1/4" bolts (**KK**) with lock washers (**LL**) and flat washers (**MM**) through the holes on both bases (**S**), then tighten them into the threaded holes in the bottom panel (**B**) with the 4 mm hex wrench.

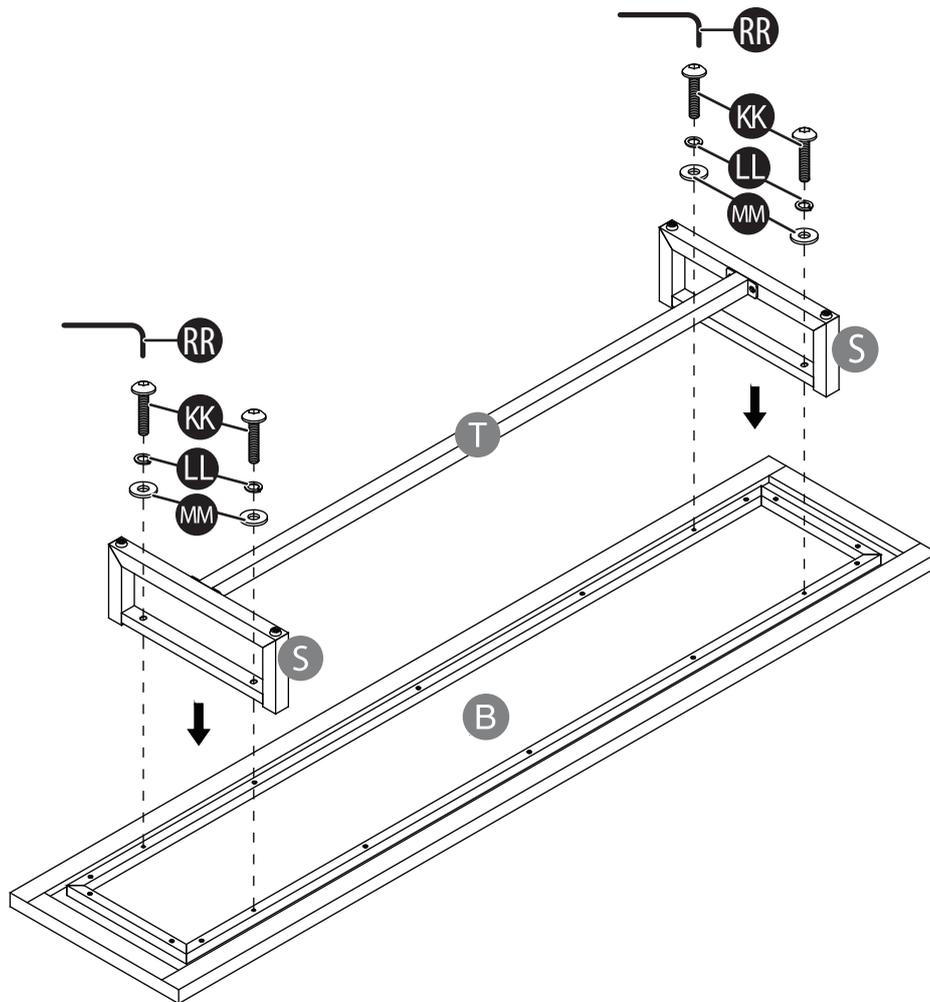

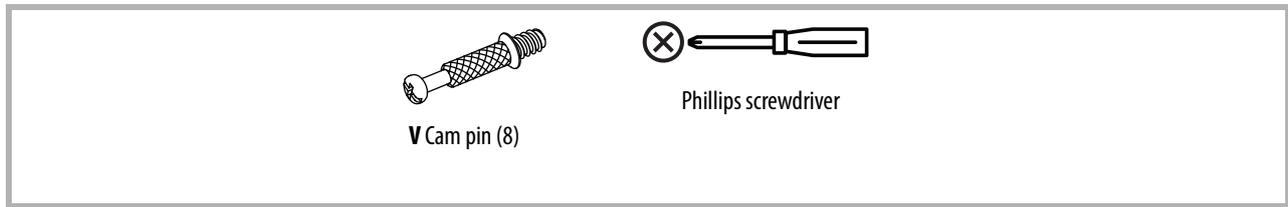
STEP 10: Prepare the bottom panel assembly**You need:**

- Securely screw eight cam pins (V) into the indicated small holes in the bottom panel assembly, using a Phillips screwdriver.

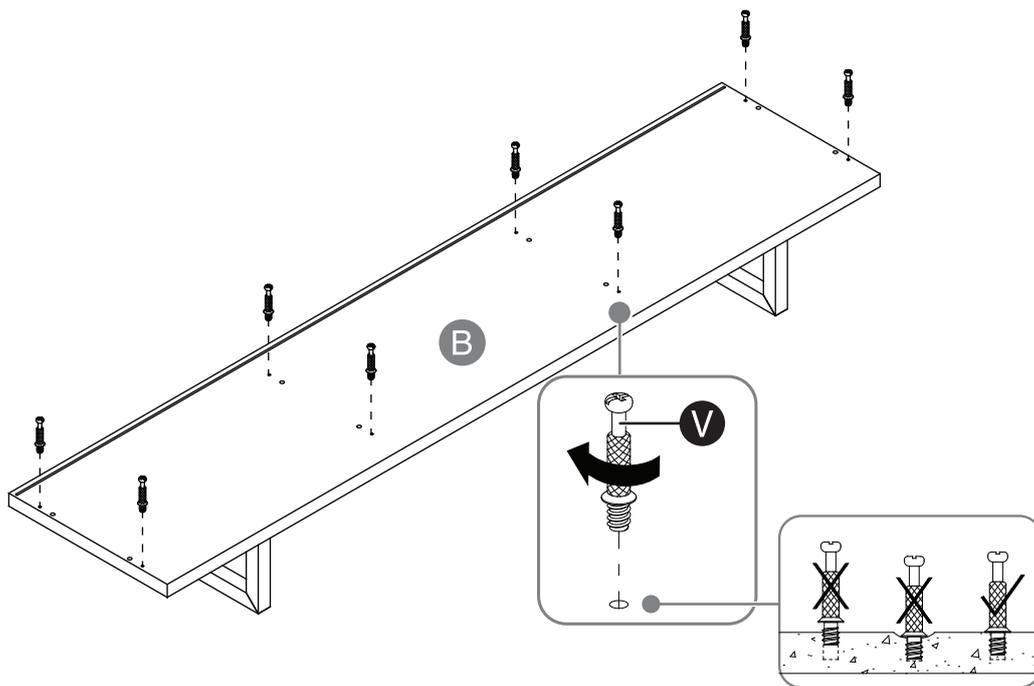


STEP 11: Prepare the top panel and partition panels

You need:

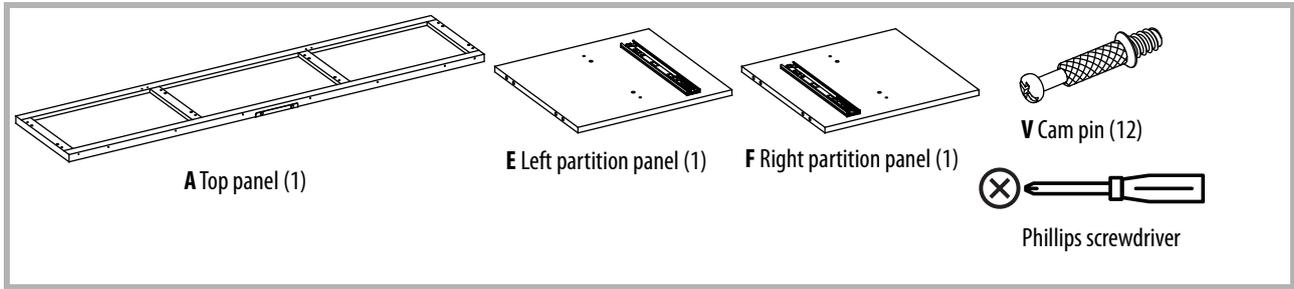


- Securely screw twelve cam pins (**V**) into the indicated small holes in the top panel (**A**) and the partition panels (**E** and **F**) with a Phillips screwdriver.

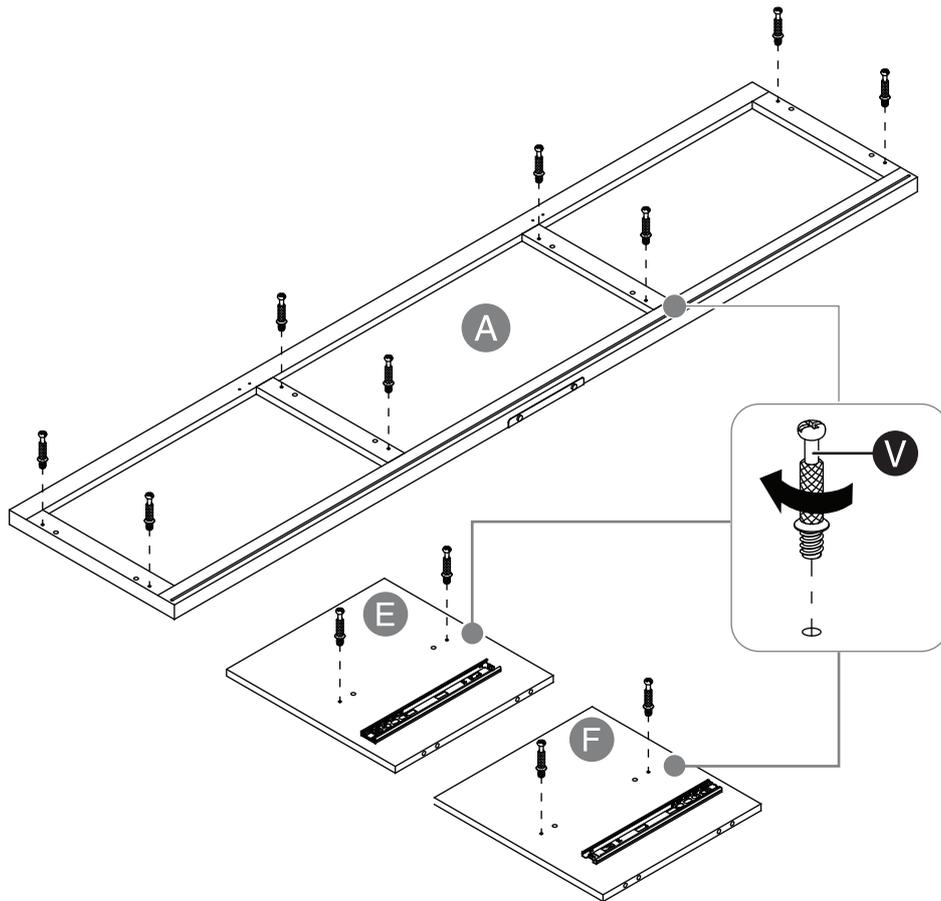


STEP 12: Prepare the side panels, partition panels, and media shelf

You need:

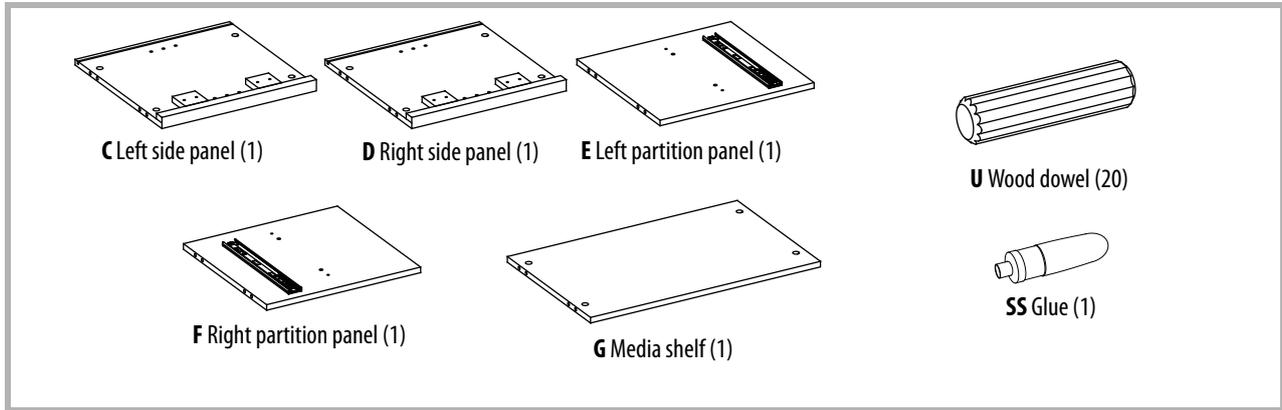


- Glue the large wood dowels (**U**) into the drilled holes on both ends of the side panels (**C** and **D**), partition panels (**E** and **F**), and media shelf (**G**).

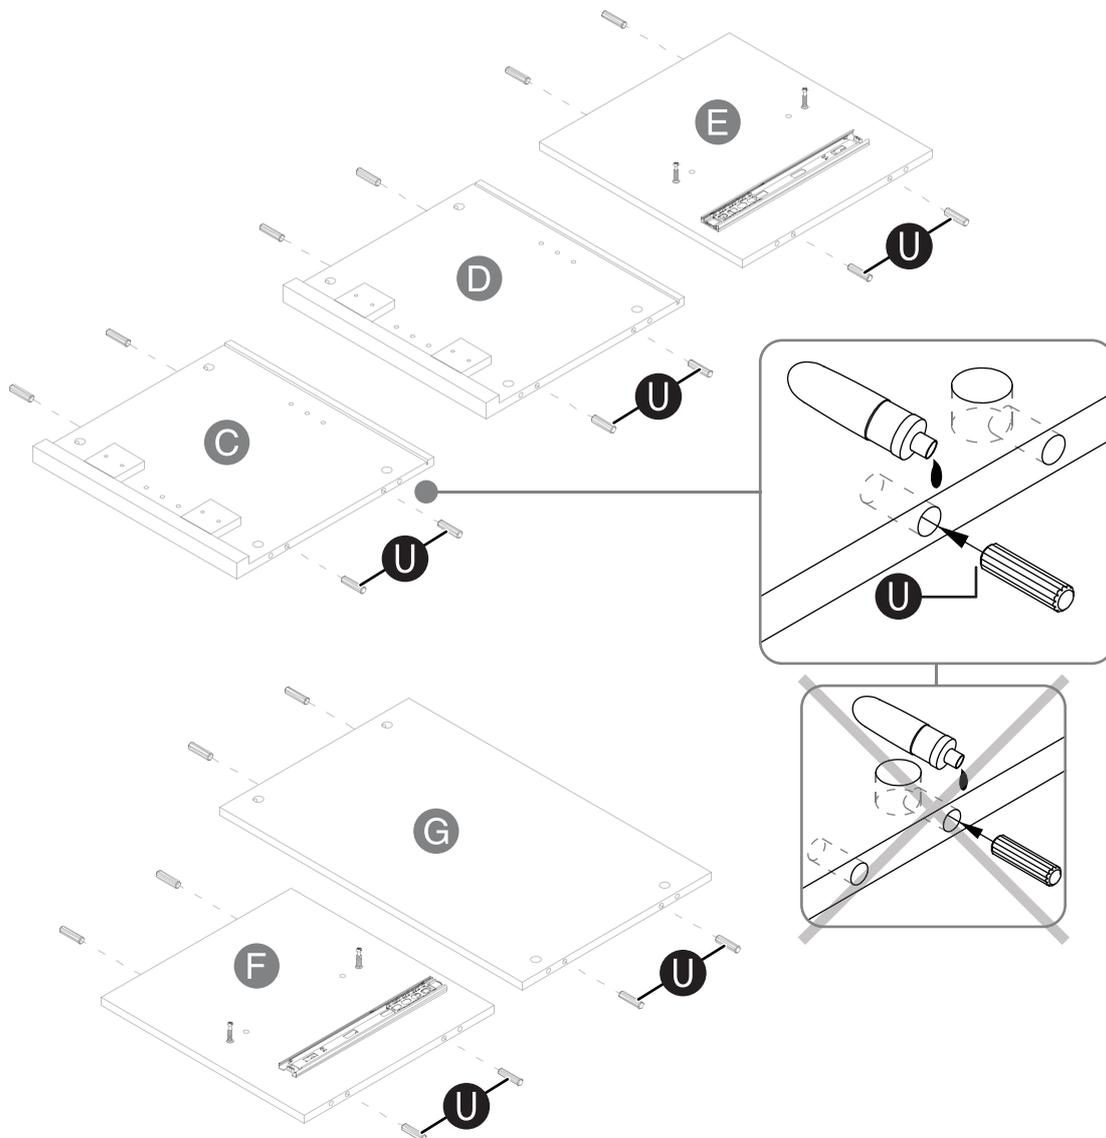



STEP 13: Attach the partition panels to the media shelf

You need:

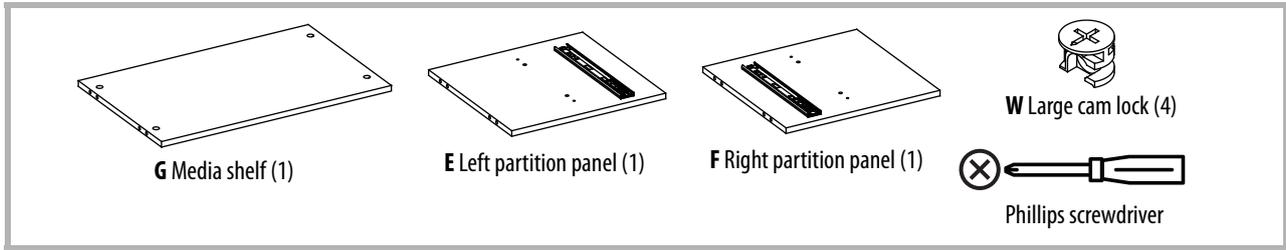


- Attach the media shelf (**G**) between the partition panels (**E** and **F**) by engaging four large cam locks (**W**). The cam screw holes must face inward

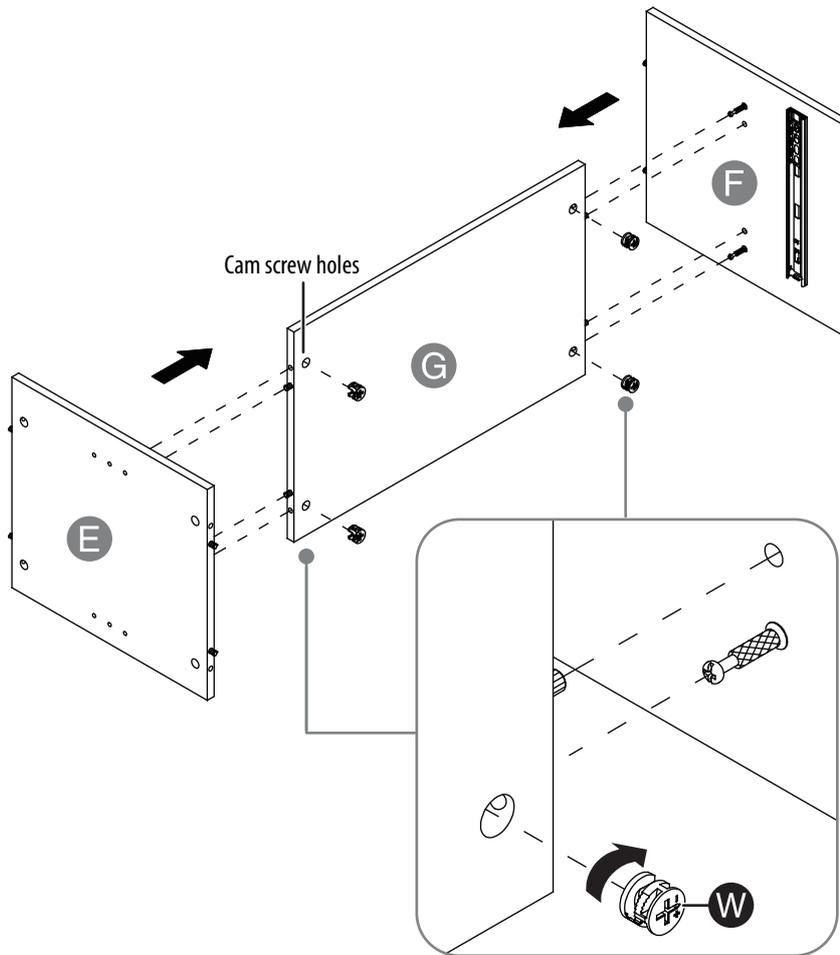

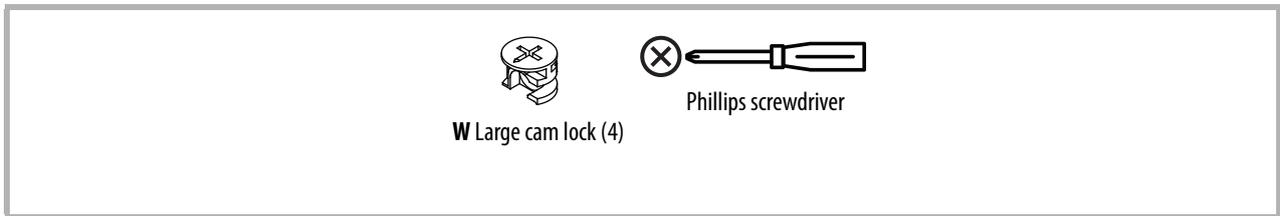
STEP 14: Install the media shelf**You need:**

- Install the media shelf assembly to the bottom assembly by engaging four large cam locks (**W**), using a Phillips screwdriver. The drawer slide opening should face the front edge (without groove) of the bottom panel.

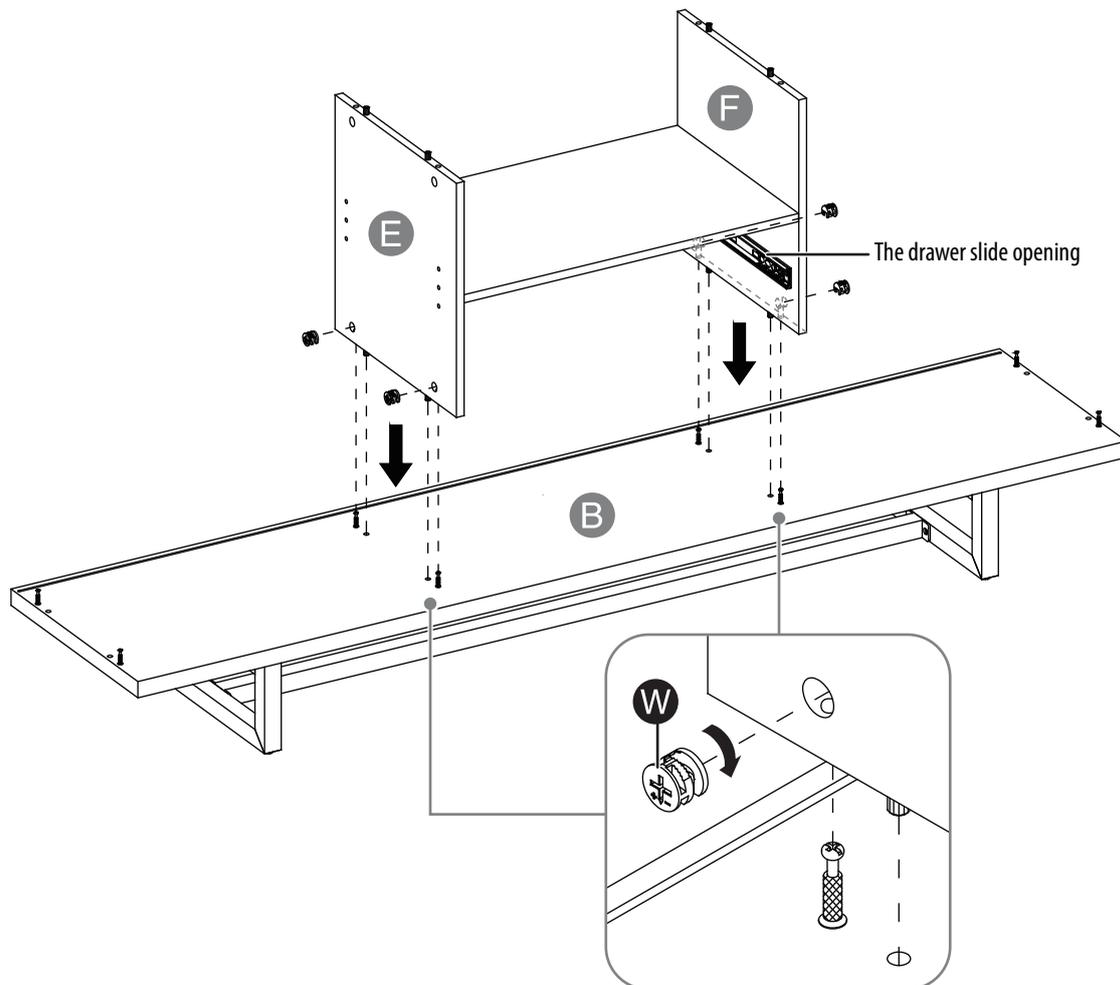



STEP 15: Attach the side panels

You need:

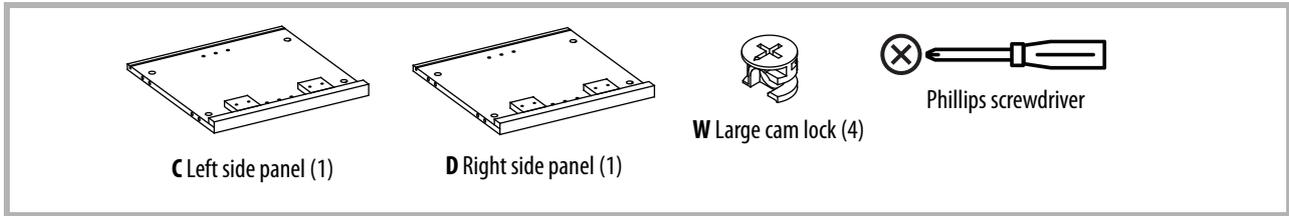


- Attach the side panels (**C** and **D**) to the bottom assembly by engaging four large cam locks (**W**), using a Phillips screwdriver. The grooves in the side panels should line up with the groove in the bottom panel.

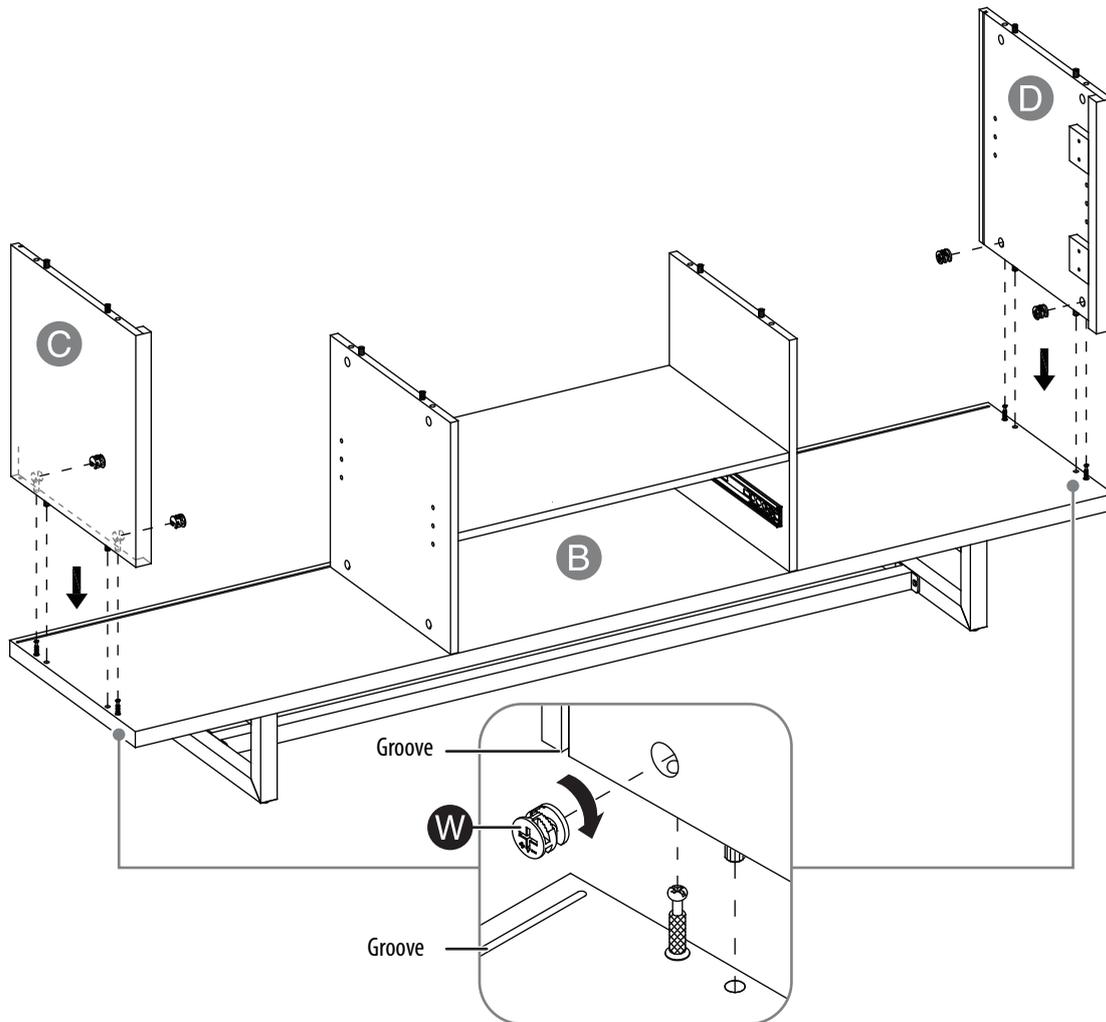

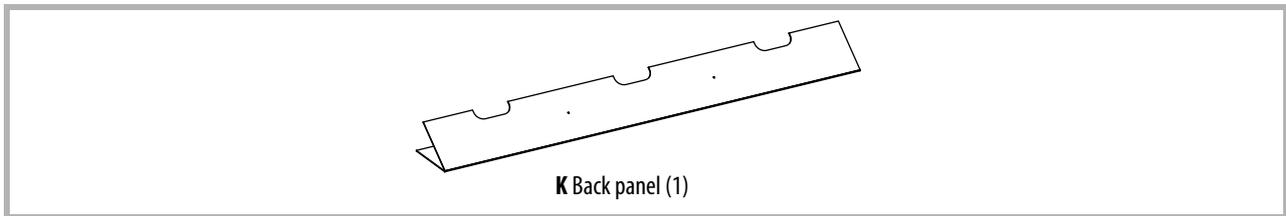
STEP 16: Install the back panel**You need:**

- Unfold the back panel (**K**), then slide it into the grooves on both side panels (**C** and **D**) until fully inserted into the bottom panel assembly. Make sure that the adhesive tape faces backward.

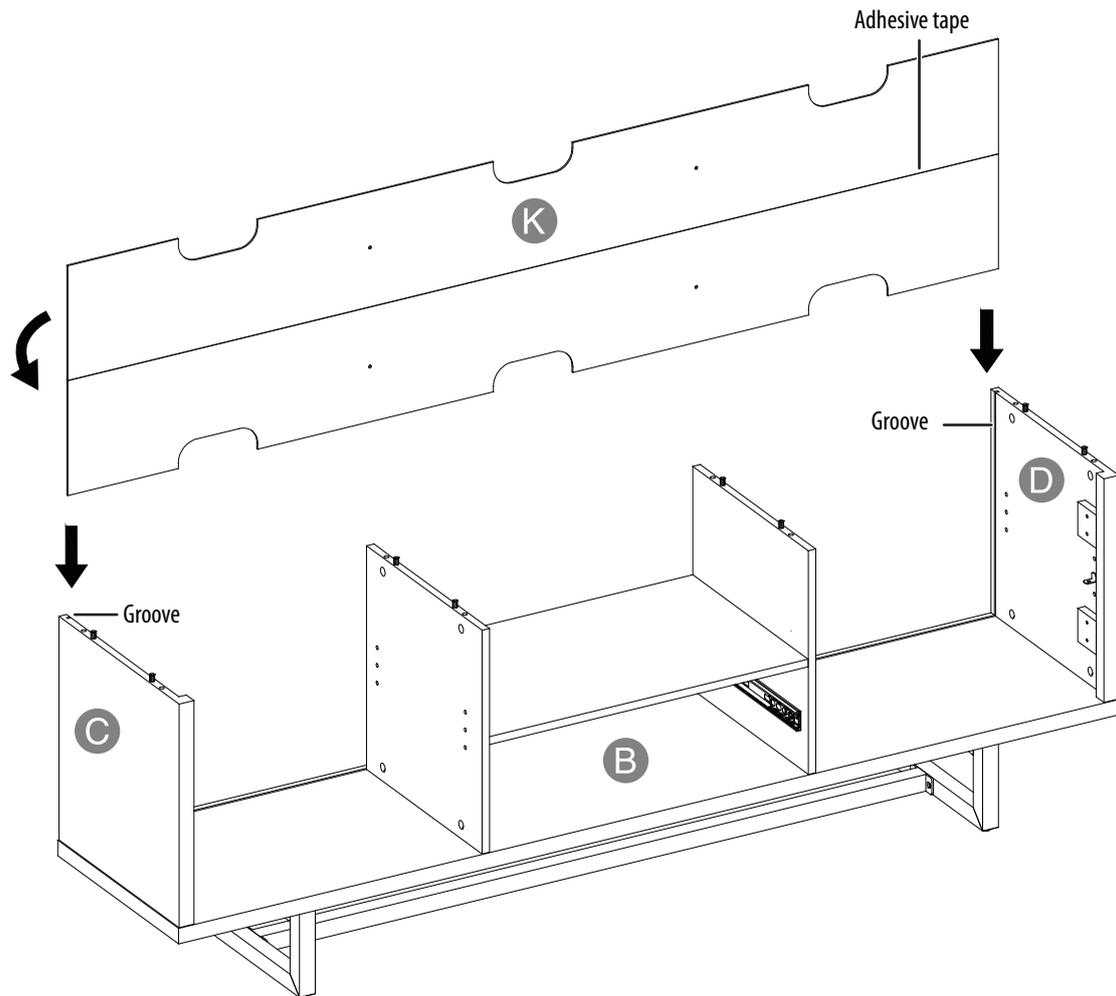



STEP 17: Install the door stoppers

You need:

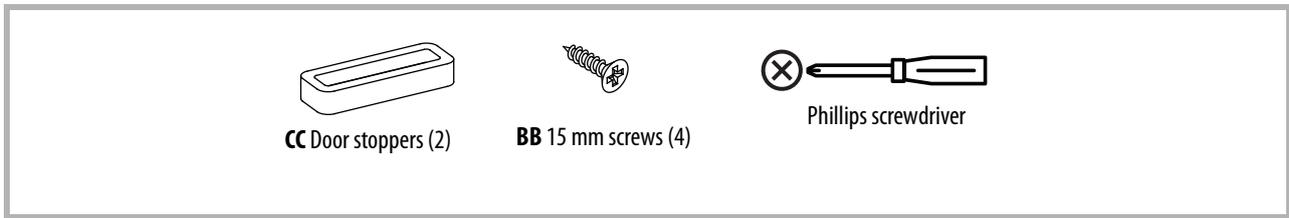


- Using the pilot holes as a guide, fasten two door stoppers (CC) to the top panel (A) with two 15 mm screws (BB) in each, using a Phillips screwdriver.

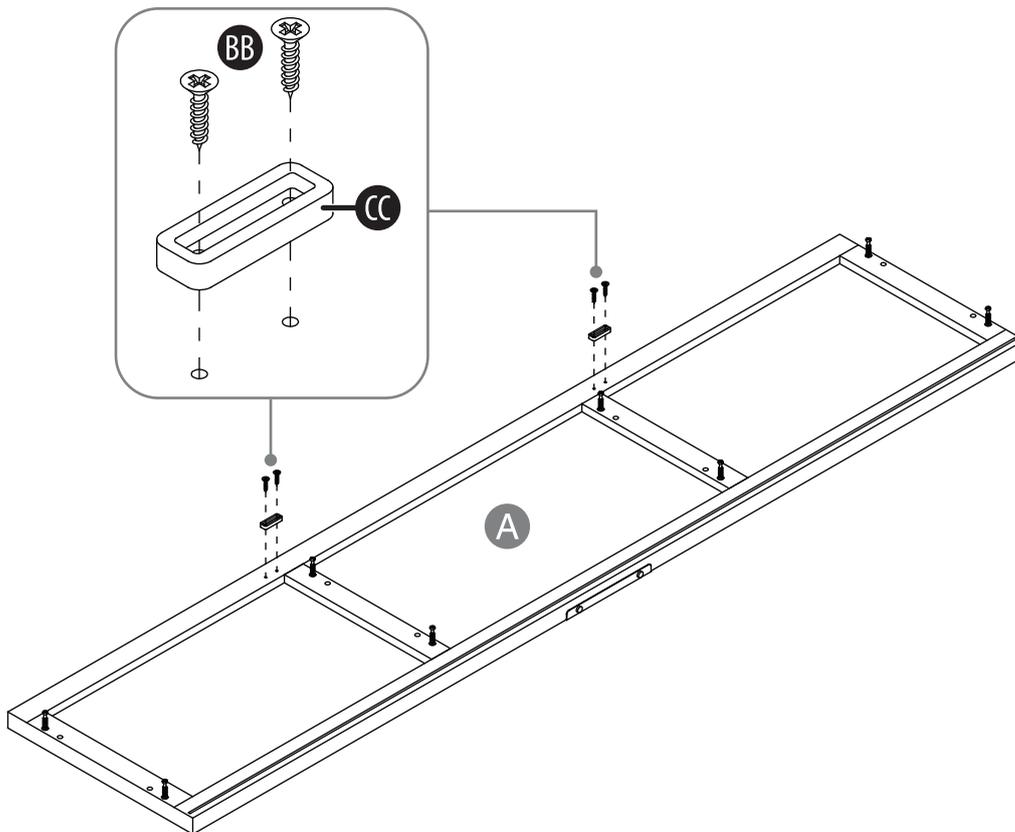

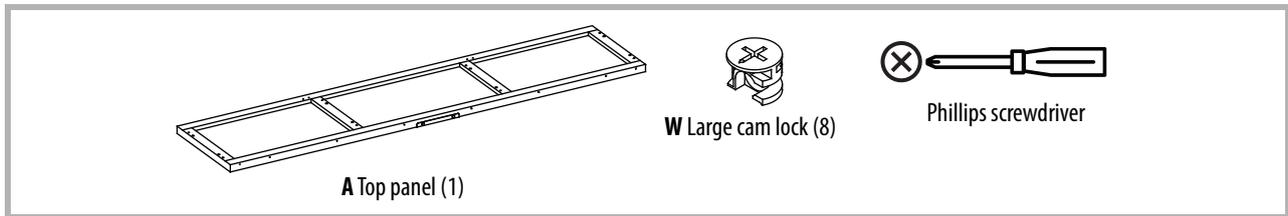
STEP 18: Install the top panel**You need:**

- 1 Using assistance, place the top panel (A) onto the wood dowels (U) on the vertical panels. Make sure that the back panel (K) fits securely into the groove of the top panel (A).
- 2 Secure the top panel (A) into place by inserting eight large cam locks (W) and tightening them with a Phillips screwdriver.

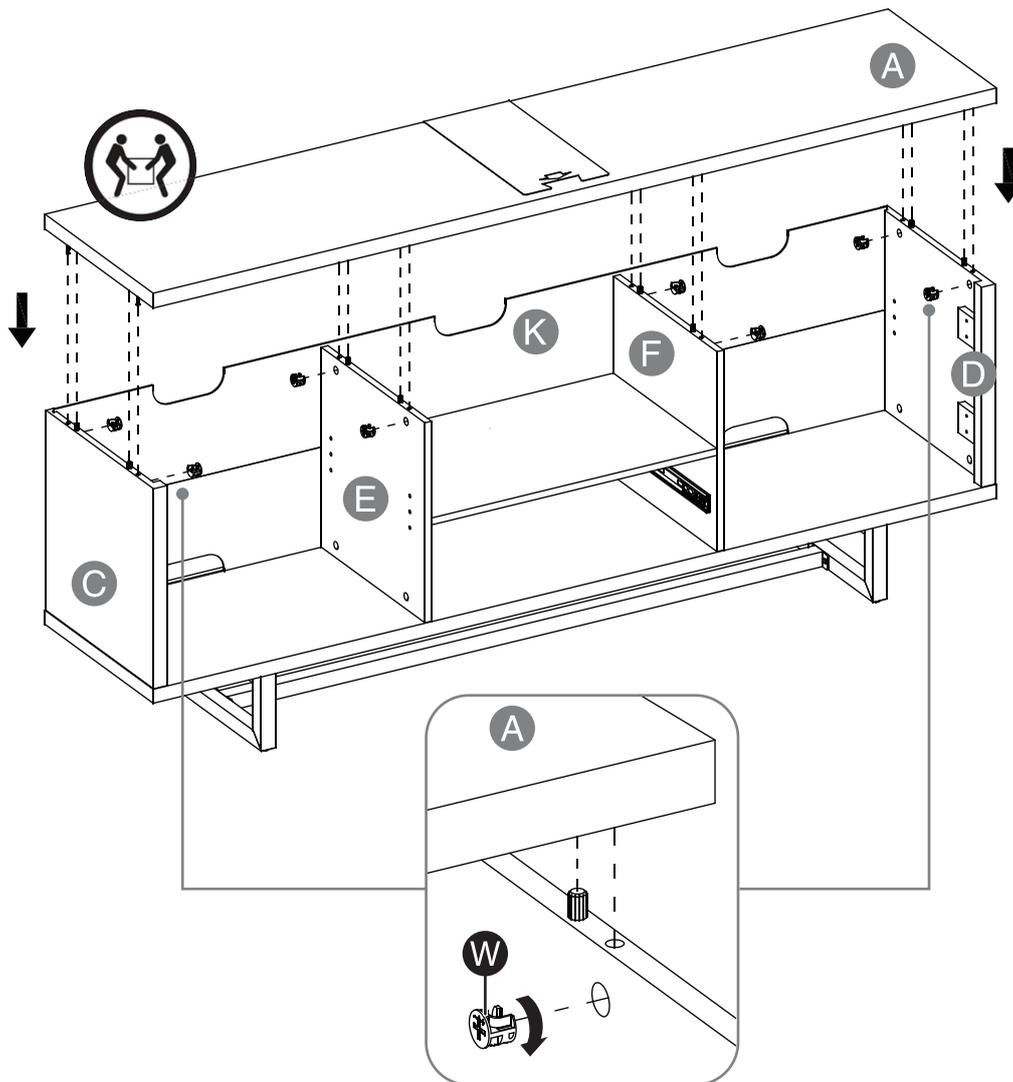



STEP 19: Secure the back panel to the partition panels

You need:

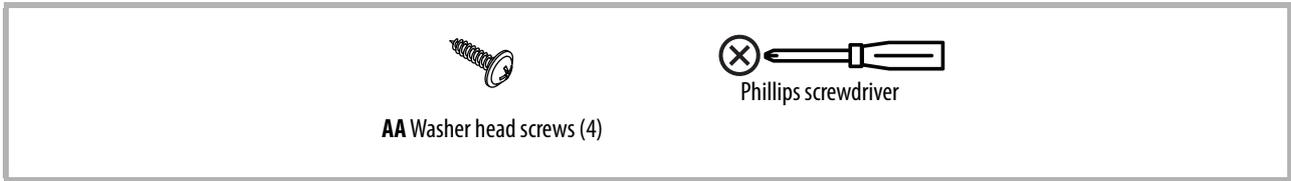


- Insert four washer head screws (**AA**) through the holes in the back panel (**K**) and screw them into the partition panels using a Phillips screwdriver.

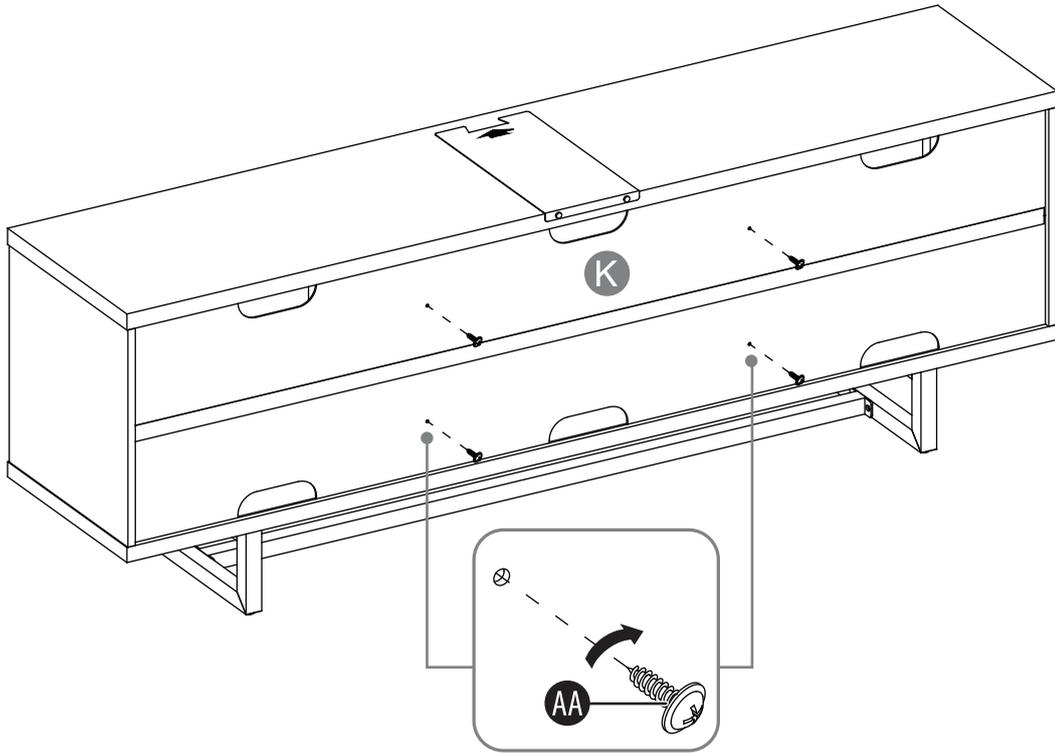

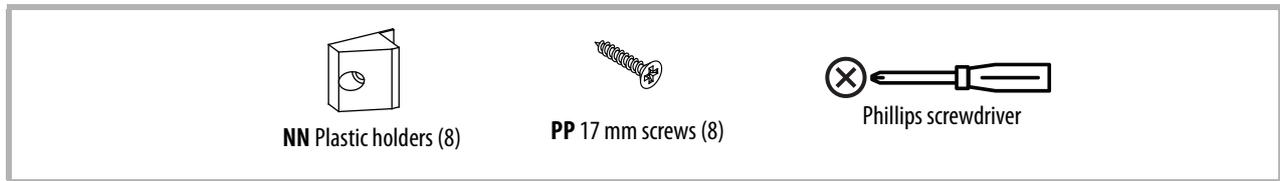
STEP 20: Fasten the back panel**You need:**

- 1 Insert eight plastic holders (**NN**) evenly into the gaps between the back panel (**K**) and frame panels (**A**, **B**, **C** and **D**) as shown.
- 2 Secure the plastic holders into place with 17 mm screws (**PP**), using a Phillips screwdriver. Do not damage the edges.

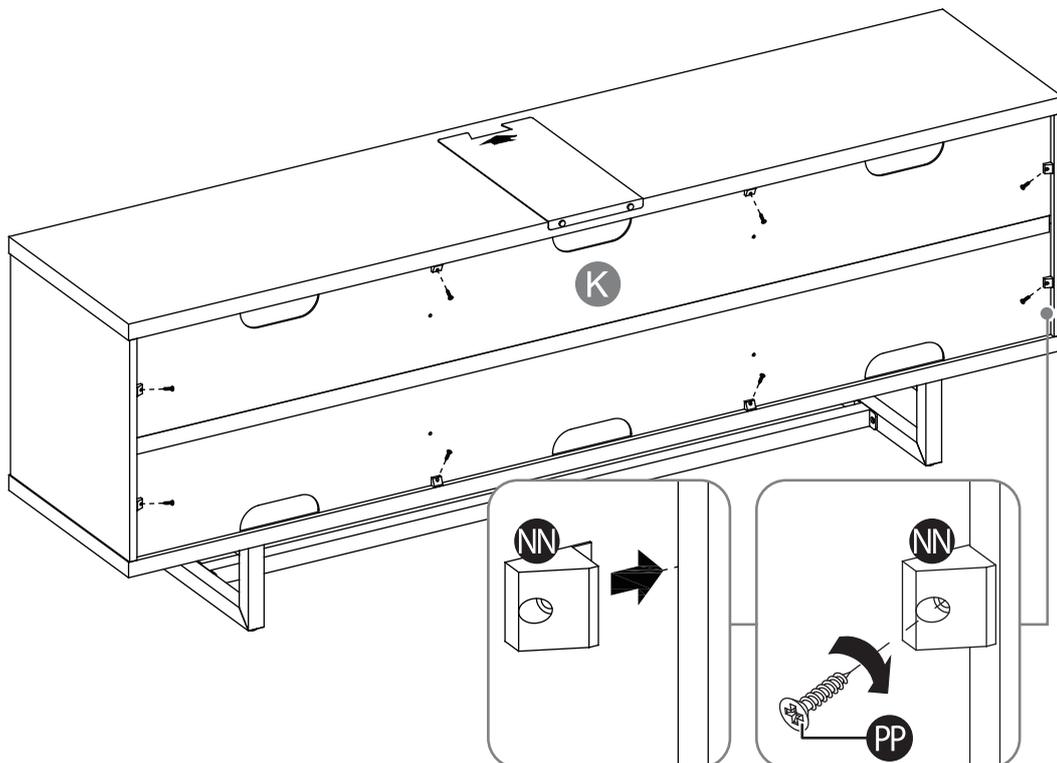



STEP 21: Install the door hinges and handles

You need:

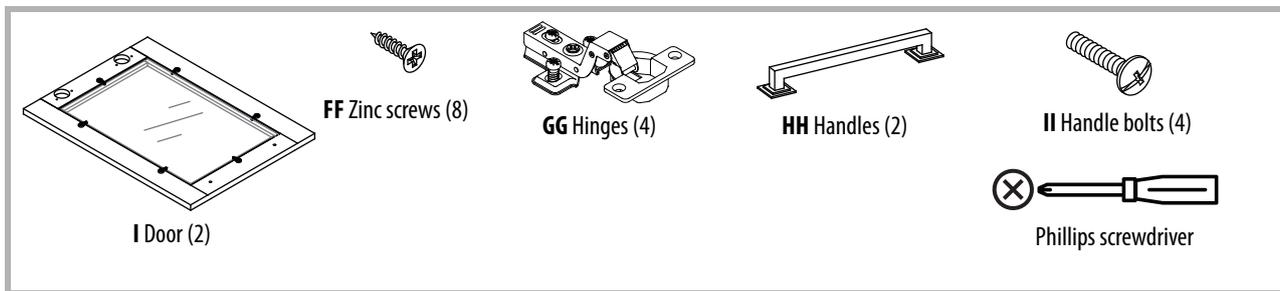

 
- 1 Extend two door hinges (**GG**) and rest the hinge cups onto the cutouts of each door (**I**). Secure the door hinges (**GG**) in place by using two zinc screws (**FF**) for each.
- 2 Attach one handle (**HH**) to the front side of the door (**I**) with two handle bolts (**II**).
- 3 Complete this step once again to assemble the other door (**I**).

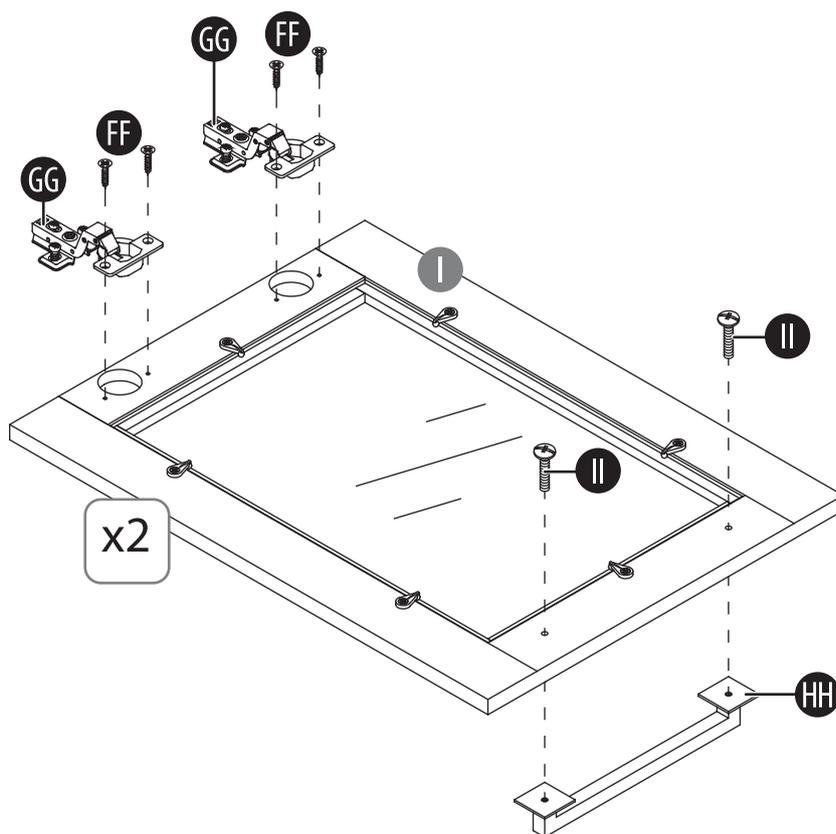

STEP 22: Install the doors**You need:**


Phillips screwdriver

- 1 Align one door (I) to the pre-attached bolts on the two hinges (GG) with the threaded holes on the hinge supports on the left side panel (C), then secure with a Phillips screwdriver.
- 2 Repeat the same process to attach the other door (I) to the right side panel (D).
- 3 Open and close the doors to make sure they are aligned and shut correctly. If necessary, adjust the screws on the hinge arm for a better fit.

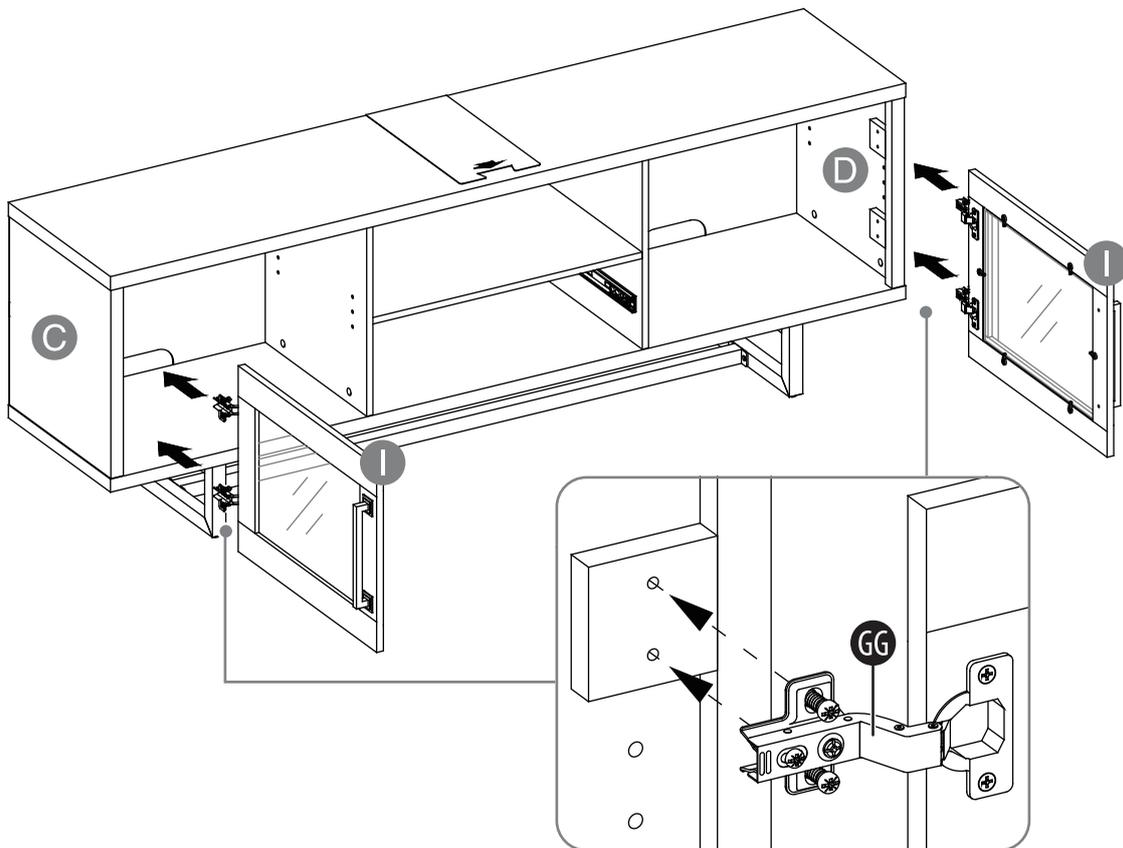


STEP 23: Install the adjustable shelves

You need:

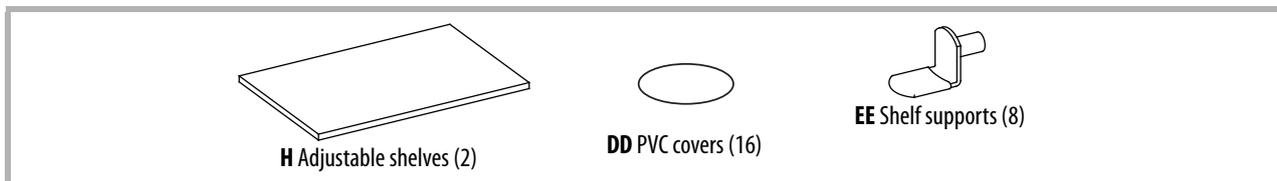


- 1 Place the PVC covers (**DD**) onto the visible cam locks to conceal them.
- 2 Open the doors (**I**) and insert four shelf supports (**EE**) into the holes at the desired height inside each side compartment. Make sure that you place the four shelf supports at the same level so the shelves are not tilted. Tilt and rest the adjustable shelves (**H**) onto the shelf supports.

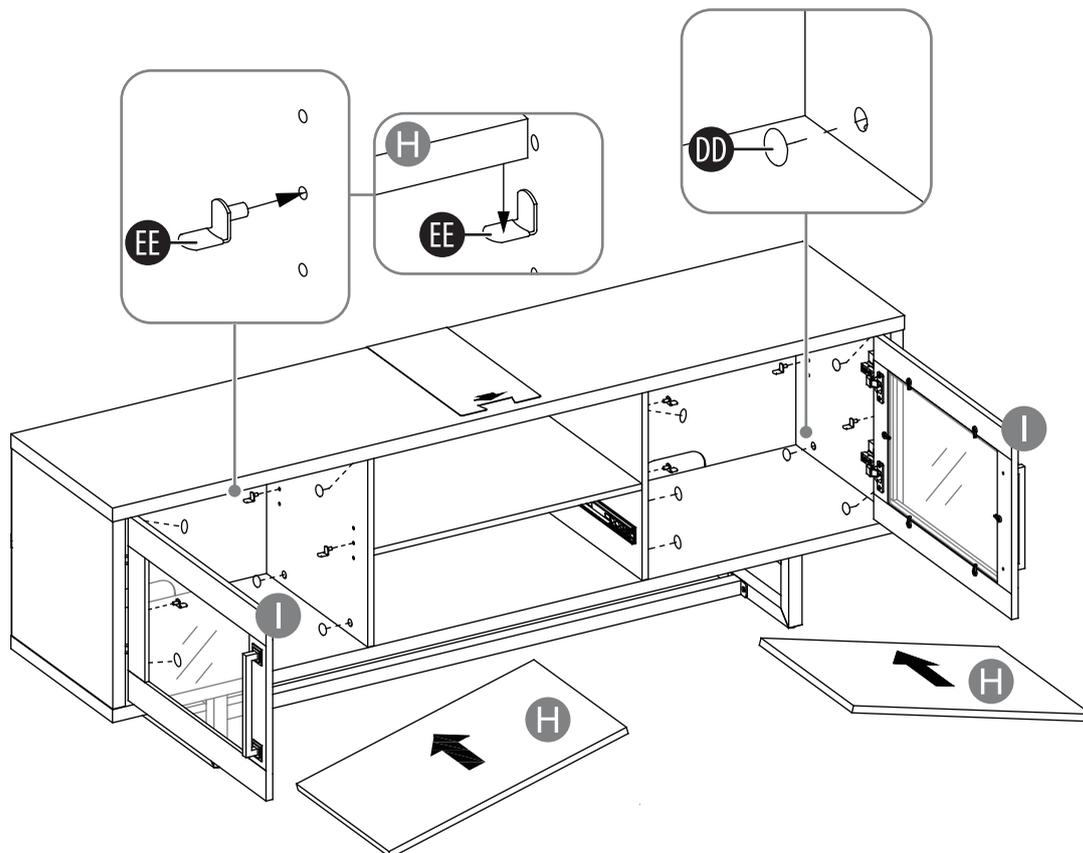

STEP 24: Insert the drawer


- Extend the ball bearing slide tracks on the partition panels (**E** and **F**) all the way forward (including ball bearing cart), then align the slide runners on the assembled drawer with the slide tracks and push the drawer carefully inside until it stops.

Tip: If the drawer does not go in smoothly, take it out and repeat the step. If you need to remove the drawer, pull the drawer all the way out, then simultaneously push the plastic release lever on the ball bearing slides up on one side and down on the other side, and then pull it completely out.

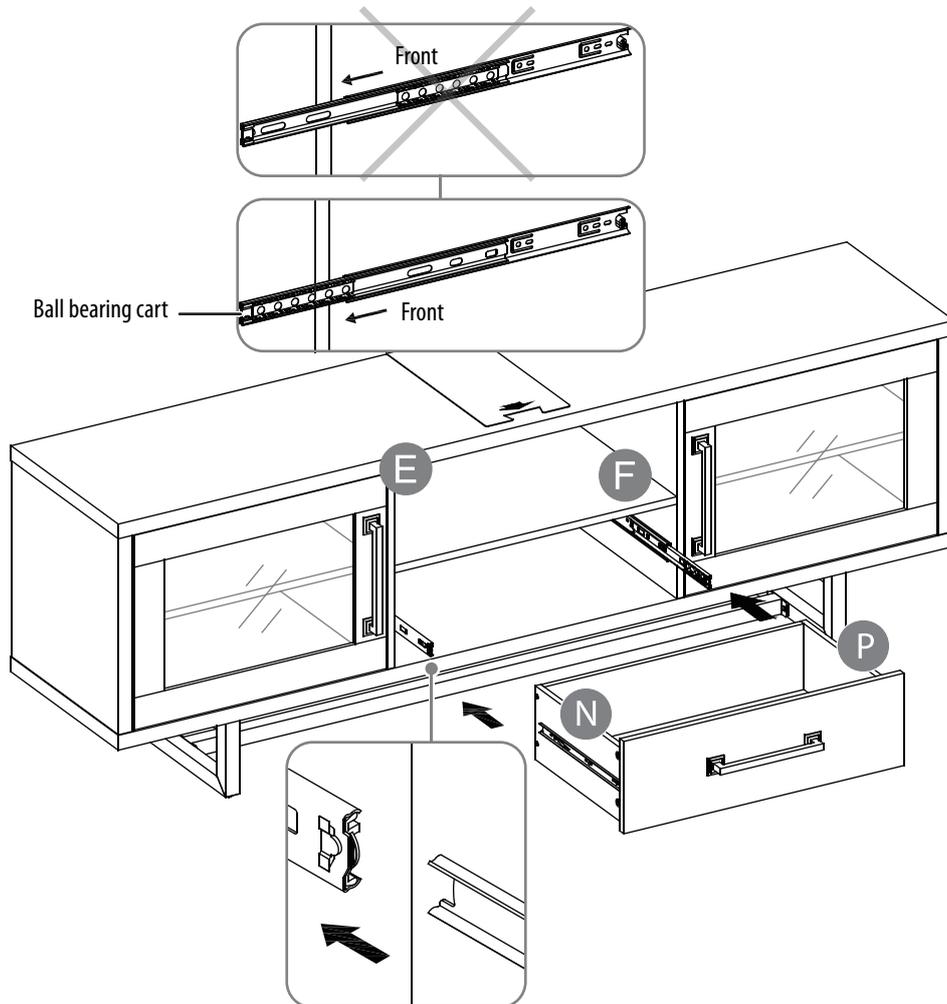

STEP 25: Attach the stopper to the top panel

You need:

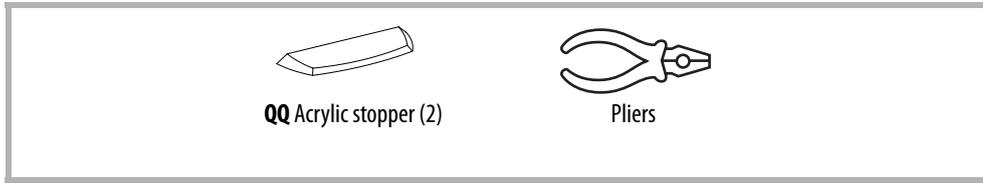


If you place your TV on top of your console, you must follow these instructions to prevent your TV from tipping. Otherwise, skip to [STEP 27: Position the TV console and install the tipping restraint on page 34](#).


If your TV has one stand:

- 1 Remove the paper backing from the stopper (QQ), then place it in the stopper cut-out template on the top panel (A). Press down on the stopper (QQ) to help it stick.
- 2 On the back of the top panel (A), carefully pull out the thumb tacks to remove the stopper template.

If your TV has two stands:


- 1 On the back of the top panel (A), carefully pull out the thumb tacks to remove the stopper template.
- 2 Align the template at the position where one of your TV's stands or one of the feet will be located.
- 3 Remove the paper backing from the stopper (QQ), then place it in the stopper cut-out template on the top panel (A). Press down on the stopper (QQ) to help it stick.
- 4 Repeat this process to attach the second stopper.

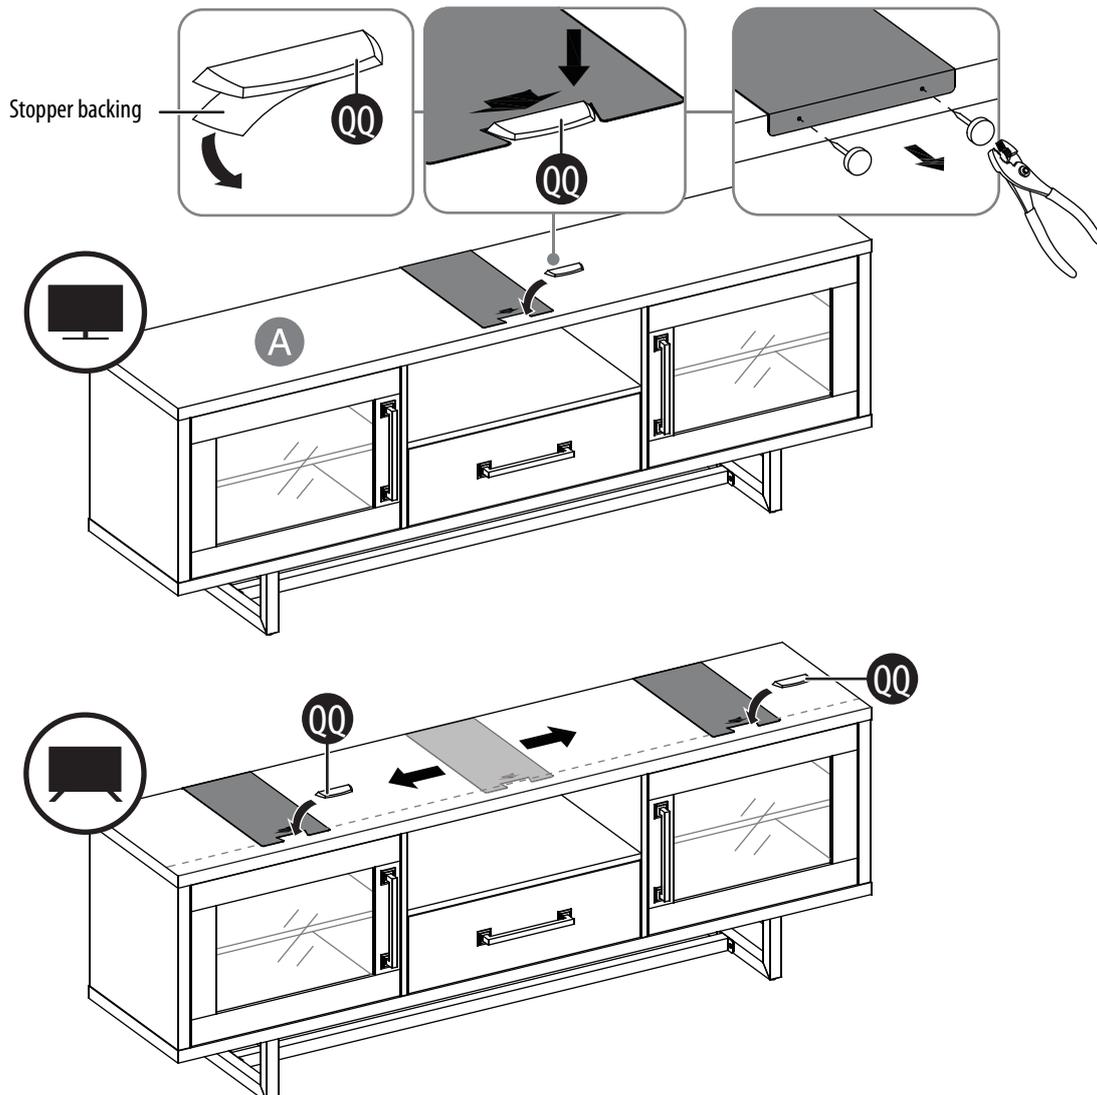

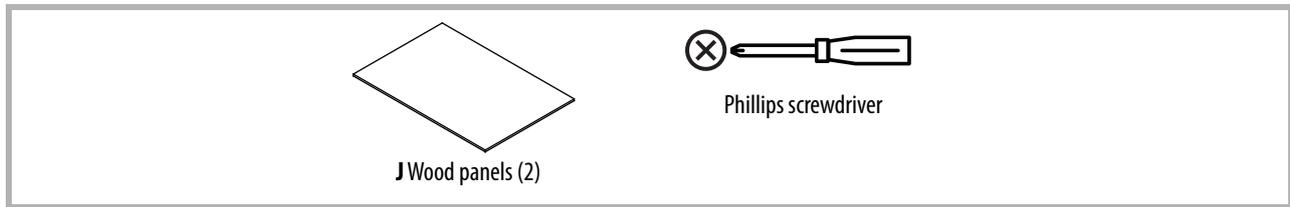STEP 26: Change the door panel**You need:**


Follow these steps if you want to change your console's door panels from glass to wood. Otherwise, skip this step.

- 1 Rotate the clips to remove the old panel. Loosen the screw on each of the clips if necessary
- 2 Insert the new panel, then rotate the clips and tighten the screws to secure the panel in the door frame.
- 3 Repeat this process to replace the other door panel.

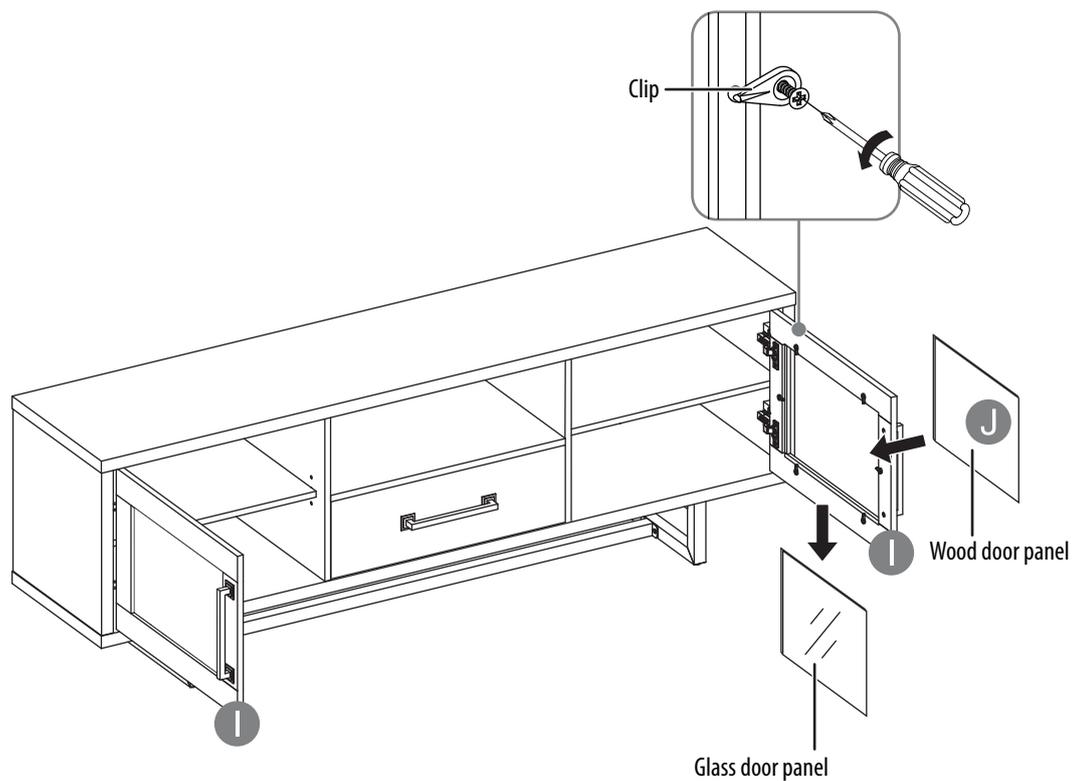


STEP 27: Position the TV console and install the tipping restraint

You need:

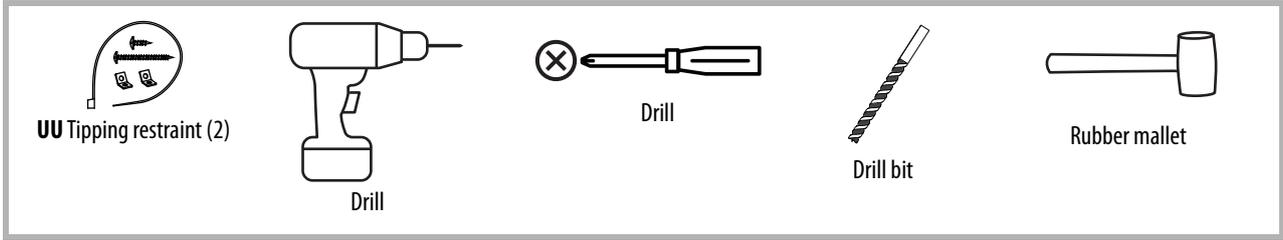

- 1 Position the assembled console against the wall where you plan to use it.
- 2 Adjust the leveling feet to level the TV console.
- 3 Follow the instructions printed on the bag containing the tipping restraint hardware kit (**UU**) to attach the restraint hardware to the wall and the console.

WARNING: It is very important that the tipping restraint be installed correctly. Failure to do this could result in your TV console falling forward, resulting in damage to equipment or personal injury.

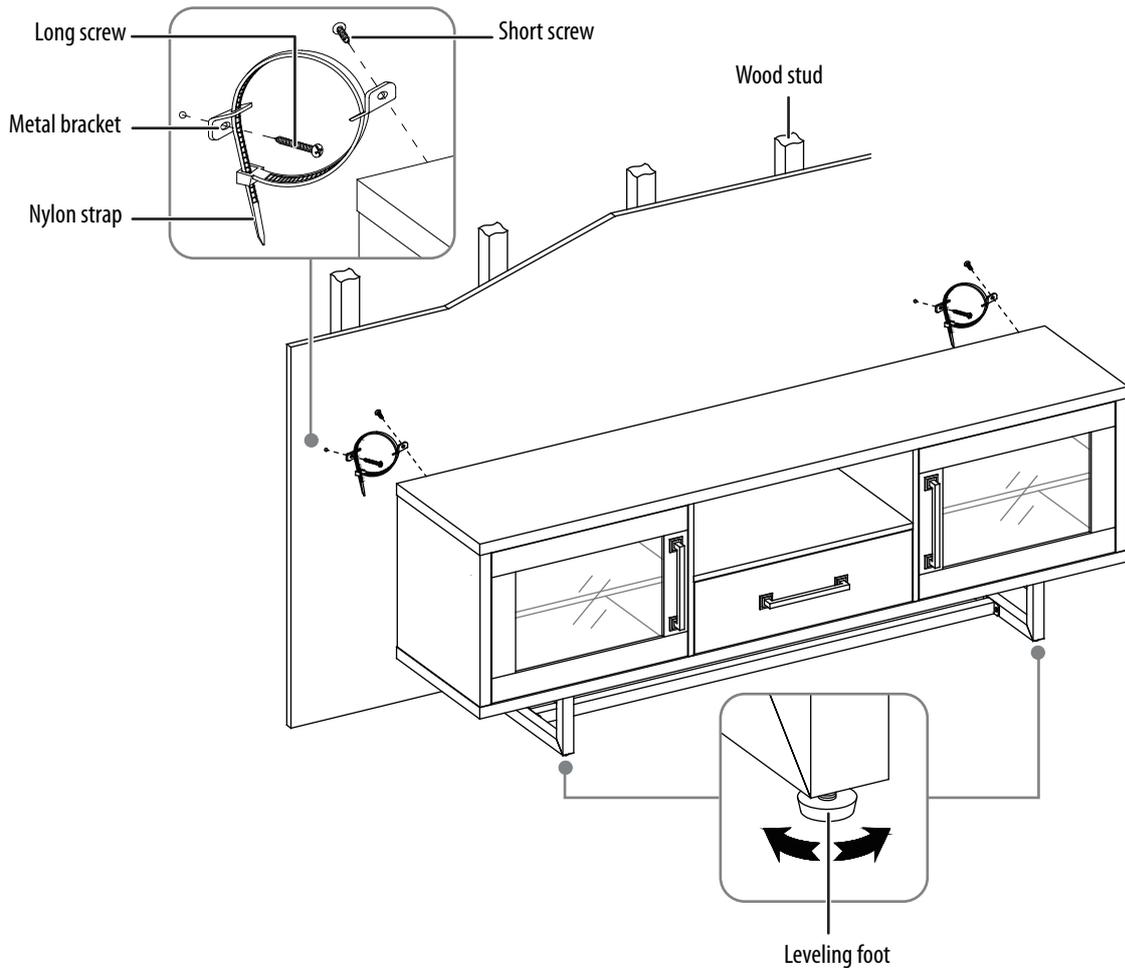

Maintaining your TV console

Wood/Laminate

- Use your favorite type of furniture polish.
- Do not spray polish directly onto the stand. Spray onto a soft cloth, then wipe the stand.
- Always test any polish in a discrete location first, such as the back of the stand, to make sure that there is no adverse reaction.
- Dust frequently with a soft cloth.
- Never slide objects across surfaces. Lift objects from the top surface rather than dragging them across the finish when moving them.
- Do not expose your stand to direct sunlight, drying heat sources, or dampness.
- Clean spills immediately with a soft, damp cloth.
- Use a protective pad when using your stand as a writing surface (especially when using a ballpoint pen).

Glass

- Use a commercial liquid glass cleaner and a soft cloth.
- Do not use harsh powders or any other abrasive substances because they can scratch the glass.
- Dust frequently with a soft cloth.

Specifications

Maximum overall weight	415 lbs. (187.8 kg)
Maximum top panel weight	135 lbs. (61.2 kg)
Maximum shelf weight	50 lbs. (22.6 kg)
Maximum drawer weight	30 lbs. (13.6 kg)
Maximum TV weight	135 lbs. (61.2 kg)
Maximum screen size	80"
Overall dimensions (H xWx D)	24.3 x 70 x 16.6 in. (61.6 x 177.8 x 42.3 cm)
Drawer dimensions (H xWx D)	6.5 x 21.7 x 12.5 in. (16.5 x 55.2 x 31.7 cm)
Shelf dimensions (Wx D):	22 x 13.6 in. (55.8 x 34.5 cm)
TV stand weight:	106.7 lbs. (48.5 kg)

ONE-YEAR LIMITED WARRANTY

Definitions:

The Distributor* of Insignia branded products warrants to you, the original purchaser of this new Insignia-branded product ("Product"), that the Product shall be free of defects in the original manufacturer of the material or workmanship for a period of one (1) year from the date of your purchase of the Product ("Warranty Period").

For this warranty to apply, your Product must be purchased in the United States or Canada from a Best Buy branded retail store or online at www.bestbuy.com or www.bestbuy.ca and is packaged with this warranty statement.

How long does the coverage last?

The Warranty Period lasts for 1 year (365 days) from the date you purchased the Product. Your purchase date is printed on the receipt you received with the Product.

What does this warranty cover?

During the Warranty Period, if the original manufacture of the material or workmanship of the Product is determined to be defective by an authorized Insignia repair center or store personnel, Insignia will (at its sole option): (1) repair the Product with new or rebuilt parts; or (2) replace the Product at no charge with new or rebuilt comparable products or parts. Products and parts replaced under this warranty become the property of Insignia and are not returned to you. If service of Products or parts are required after the Warranty Period expires, you must pay all labor and parts charges. This warranty lasts as long as you own your Insignia Product during the Warranty Period. Warranty coverage terminates if you sell or otherwise transfer the Product.

How to obtain warranty service?

If you purchased the Product at a Best Buy retail store location or from a Best Buy online website (www.bestbuy.com or www.bestbuy.ca), please take your original receipt and the Product to any Best Buy store. Make sure that you place the Product in its original packaging or packaging that provides the same amount of protection as the original packaging.

To obtain warranty service, in the United States call 1-888-BESTBUY or in Canada call 1-866-BESTBUY. Call agents may diagnose and correct the issue over the phone.

Where is the warranty valid?

This warranty is valid only in the United States and Canada at Best Buy branded retail stores or websites to the original purchaser of the product in the country where the original purchase was made.

What does the warranty not cover?

This warranty does not cover:

- Customer instruction/education
- Installation
- Set up adjustments
- Cosmetic damage
- Damage due to weather, lightning, and other acts of God, such as power surges
- Accidental damage
- Misuse
- Abuse
- Negligence
- Commercial purposes/use, including but not limited to use in a place of business or in communal areas of a multiple dwelling condominium or apartment complex, or otherwise used in a place of other than a private home.
- Modification of any part of the Product, including the antenna
- Display panel damaged by static (non-moving) images applied for lengthy periods (burn-in).
- Damage due to incorrect operation or maintenance
- Connection to an incorrect voltage or power supply
- Attempted repair by any person not authorized by Insignia to service the Product
- Products sold "as is" or "with all faults"
- Consumables, including but not limited to batteries (i.e. AA, AAA, C, etc.)
- Products where the factory applied serial number has been altered or removed
- Loss or Theft of this product or any part of the product
- Display panels containing up to three (3) pixel failures (dots that are dark or incorrectly illuminated) grouped in an area smaller than one tenth (1/10) of the display size or up to five (5) pixel failures throughout the display. (Pixel based displays may contain a limited number of pixels that may not function normally.)
- Failures or Damage caused by any contact including but not limited to liquids, gels or pastes.

REPAIR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS YOUR EXCLUSIVE REMEDY FOR BREACH OF WARRANTY. INSIGNIA SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR THE BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, INCLUDING, BUT NOT LIMITED TO, LOST DATA, LOSS OF USE OF YOUR PRODUCT, LOST BUSINESS OR LOST PROFITS. INSIGNIA PRODUCTS MAKES NO OTHER EXPRESS WARRANTIES WITH RESPECT TO THE PRODUCT, ALL EXPRESS AND IMPLIED WARRANTIES FOR THE PRODUCT, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE WARRANTY PERIOD SET FORTH ABOVE AND NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, WILL APPLY AFTER THE WARRANTY PERIOD. SOME STATES, PROVINCES AND JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE.

Contact Insignia:

1-877-467-4289

www.insigniaproducts.com

INSIGNIA is a trademark of Best Buy and its affiliated companies.

*Distributed by Best Buy Purchasing, LLC

7601 Penn Ave South, Richfield, MN 55423 U.S.A.

©2021 Best Buy. All rights reserved.

INSIGNIA™

www.insigniaproducts.com

1-877-467-4289 (U.S. and Canada) or 01-800-926-3000 (Mexico)

INSIGNIA is a trademark of Best Buy and its affiliated companies.

Distributed by Best Buy Purchasing, LLC

7601 Penn Ave South, Richfield, MN 55423 U.S.A.

©2021 Best Buy. All rights reserved.

V1 ENGLISH
21-0285