

INSIGNIA™



Please see www.insigniaproducts.com for the latest Quick Start Guide and troubleshooting.

 
QUICK SETUP GUIDE

Media Remote for Xbox® Series X & S and Xbox® One

NS-XB14KRMT

PACKAGE CONTENTS


- Media remote
- AAA batteries (2)
- Quick Setup Guide



Before using your new product, please read these instructions to prevent any damage.


FEATURES

 - The media remote for Xbox Series X & S and Xbox One is designed to control your Blu-ray movies, apps, videos, and more.

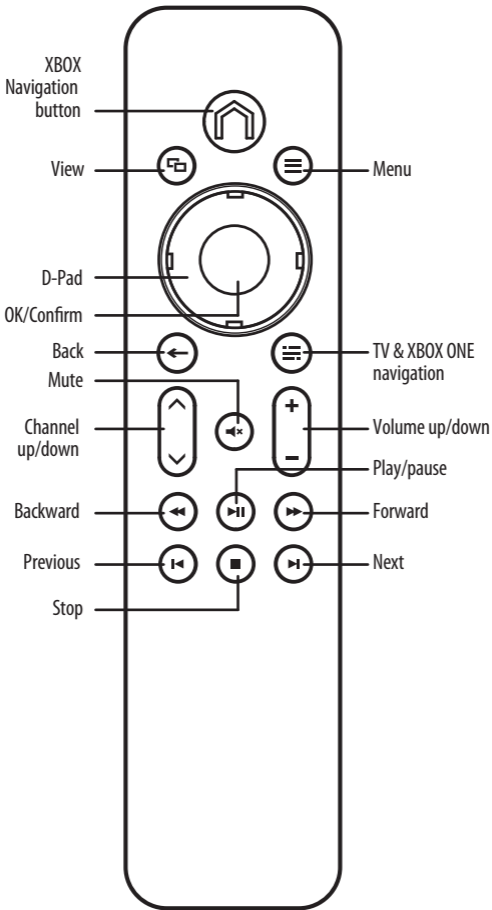


SETTING UP YOUR MEDIA REMOTE

 1 From the back of the remote, slide off the battery compartment door.

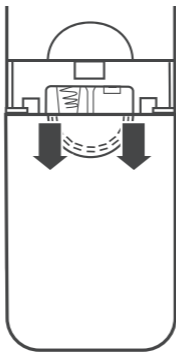

 2 Place the two AAA batteries (included) into the battery compartment. Make sure that the batteries are in the correct position as shown below.

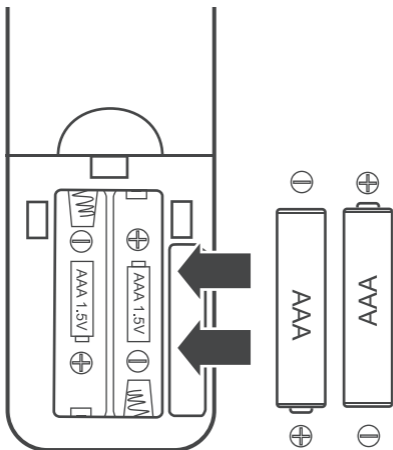

SETTING UP THE MEDIA REMOTE ON XBOX ONE

- 1 Press the top X navigation button on the remote to access the Xbox One main menu.
- 2 Select **Settings** to access the Xbox One settings menu.
- 3 Select **TV & OneGuide** from the Xbox One settings menu, then follow the screen prompts to complete all the button setting functions.

Note: **TV & OneGuide** allows you to change channels on your compatible cable or satellite box. To control your TV power and volume, you'll need to configure your console to control your TV.

- 4 Go back to the Xbox One main menu and you should be ready to use the media remote.

SETTING UP THE MEDIA REMOTE ON XBOX SERIES X & S

 
- 1 Press the top X navigation button on the remote to access the Xbox Series X & S main menu.
- 2 Select **Settings** to access the Xbox Series X & S settings menu.
- 3 Follow the screen prompts to complete all the button setting functions.

Notes: The Setup process for Xbox Series X & S may differ, please refer to the instruction from Xbox Series X & S system.

- 4 Go back to the Xbox Series X & S main menu and you should be ready to use the media remote.

USING THE MEDIA REMOTE

- The media remote uses infrared (IR) technology to communicate with the console. For your remote control to communicate with your console most effectively, the media remote should be within 30 feet (9 meters) and should be pointed at the front of the console as shown.

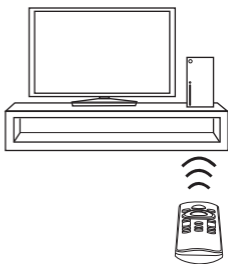

SAFETY INFORMATION/CAUTION

- Never dispose of batteries in a fire.
- Do not use batteries other than those specified, and always replace with the same type of battery.
- Do not mix old and new batteries.
- Insert batteries with the plus and minus ends in the correct direction.
- Remove batteries when they have reached the end of their life, or if the remote control is to be stored for an extended period of time.

SPECIFICATIONS

Power source	AAA batteries (2)
External dimensions (W×H×D)	Approximately 2 × 6.9 × .9 inches (50 × 175 × 22.5 mm)
Wireless technology	Infrared radiation
Operating temperature	41°F~95°F (5°C~35°C)

TROUBLESHOOTING

The media remote has no power or functionality.

If your remote does not perform any functions, replace the batteries with fresh ones. Make sure that they are placed in the right position.

The media remote will not work with certain apps.

Make sure the Infrared transmitter is not blocked or in a cabinet.

The media remote is designed to work with most apps. However, some apps may not be designed for use with the media remote. Use your Xbox One controller for these apps.

LEGAL NOTICES

FCC information

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

ICES-003 statement

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

ONE-YEAR LIMITED WARRANTY

Visit www.insigniaproducts.com for details.

CONTACT INSIGNIA:

For customer service, call 1-877-467-4289 (U.S. and Canada)

www.insigniaproducts.com

Other parties' marks are the property of their respective owners.

INSIGNIA is a trademark of Best Buy and its affiliated companies.

Registered in some countries. Distributed by Best Buy Purchasing, LLC,
7601 Penn Ave South, Richfield, MN 55423 U.S.A.,

©2020 Best Buy. All rights reserved.

Made in China

English V2-20-0826