

尺寸：210*145MM

80克书纸

黑白印黑



MODEL NO. **RPJ275**

1080p FULL HD PROJECTOR

INSTRUCTION MANUAL



Ideal for dark viewing environments for optimal performance.

Please note: Projector brightness is measure in ANSI lumens. Your viewing environment is the deciding factor on how many lumens your projector needs.

PLEASE READ BEFORE OPERATING THIS EQUIPMENT

This product has been manufactured and sold under the responsibility of Curtis International Ltd.

RCA, the RCA logo, the two dogs (Nipper and Chipper) logo, are registered trademarks or trademarks of Technicolor (S.A.) or its affiliates and are used under license by Curtis International Ltd.

Any other product, service, company, trade or product name and logo referenced herein are neither endorsed nor sponsored by Technicolor (S.A.) or its Affiliates.

Contents

Safety Instructions & FCC Warning	02
Package Listing	03
Remove & Close The Lens Cover	03
Boot Operation Guide	04
Distance Between The Projector And Screen	04
Viewing Options	05
Placing Your Projector On Ceiling	05
Adjust the Vertical Location	06
Adjust the Focus and Keystone	06
Functional Overview	07
Controls of Remote	08
Install Remove Battery Of Remote	08
Connection Instructions	09
--Select an input source	09
--HDMI device connection	09
--Multimedia connection	11
--AV video device connection	11
--Audio devices connection	11
Using Photo Mode Menu	12
Using Music Mode Menu	13
Using Movie Mode Menu	14
FAQ	15
Remove the compartment cover.....	16
Specifications	17
Warranty card	18

Safety Instructions & FCC Warning

Important Safety Instructions

● Please use the included AC power cable to power the machine. Only use the included accessories specified by the manufacturer.

● It is normal for the machine to generate heat during operation. To prevent overheating, do not block the ventilation openings.

● **CAUTION:** Do not look straight into the projector lens while on, as it may cause serious eye damage. Do not touch the lens.

● Clean only with a dry cloth.

● To reduce the risk of fire or electric shock, do not expose the device to rain or moisture. Objects filled with liquids, such as vases, should not be placed on these devices, as it may lead to potential accidents that damage the device.

● Protect this device from overexposure to direct sunlight, heat, big temperature fluctuations, and moisture. Avoid extreme temperatures. The suitable operations and storage temperature for this device and its accessories are 0°C to 35°C / 0°F to 95°F.

● Avoid any type of impact, as it may damage the internal components.

● Do not make any repairs to this device by yourself. Our company will not cover the warranty if self-repair efforts were undertaken.

● Please contact the seller for technical support when the product has any type of problem, Contact details are revealed at the end of this manual.



FCC Warning

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

 
● Reorient or relocate the receiving antenna.

● Increase the separation between the equipment and receiver.

● Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

● Consult the dealer or an experienced radio/TV technician for help.

Package Listing

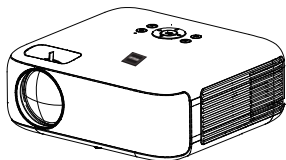

Projector



Power Adapter



Lens Cover



 
Remote Control




User Manual

Remove & Close The Lens Cover

Remove the lens cover before using

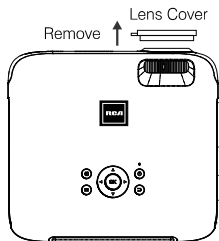

 
Close the lens cover when unit not using

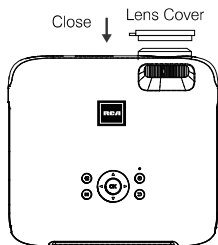


Boot Operation Guide

TURN ON

 
- 1) Plug the projector into a power source.
Indicator light: Red.
- 2) Press the power button . Indicator light: **White**
- 3) The projector turned on after 5 seconds.

TURN OFF


- 1: Turn off the power button 
- 2: Unplug the power adapter.

Note

Please turn off the projector before unplugging the power source, so as not to affect the life and operation of the projector.

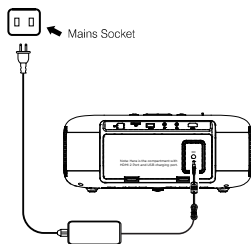

 Distance Between The Projector And Screen

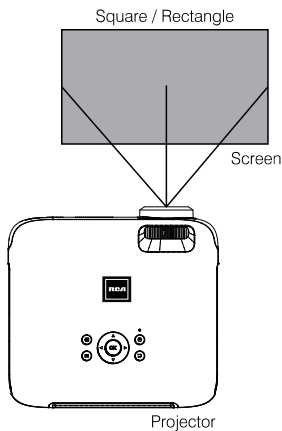


Projection Distance	2m	3m	4m	5m	7m
Projection Size	60 inch	95 inch	135 inch	160 inch	220 inch
Light, brightness, etc. will affect the projection distance, this data is for reference only.					
Projection Position					
It is recommended to place the projector in front of the center of the screen.					

Viewing Options


The projector can be used to project onto a wall or screen, mounted from the ceiling or on a table. When projecting from the rear position, a special screen will be needed (not included) to display the image. Be sure to aim the remote at the sensor on the front or rear of the projector.



 
Front Table

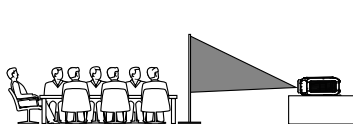

Rear Ceiling

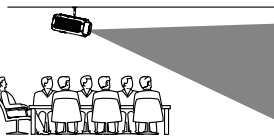 

Front Ceiling

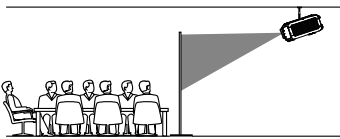 



Rear Ceiling

Placing Your Projector On Ceiling

When installing the projector in the ceiling, please purchase a projector mount recommended by an installation professional and follow the instructions that come with the mount.



Before installing the projector in the ceiling, please check to make sure the ceiling structure can support the weight of the projector and the mount. If in doubt, please ask the advice from an installation professional.

  NOTE: Projector mount and screw(s) not included

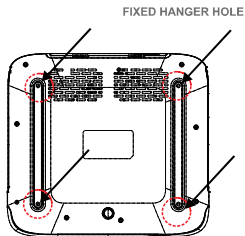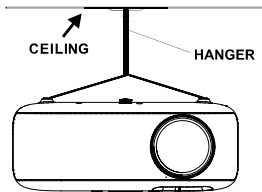

Adjust the Vertical Location

  Follow below picture to adjust the vertical location

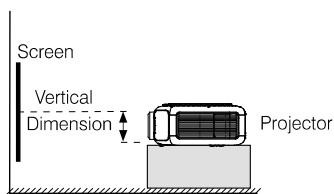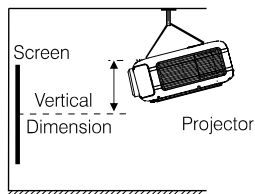


Adjust the Focus and Keystone

- As shown in Picture, Rotate the edge of the lens until you get a clear picture.

Note: Please avoid touching the lens.



 If you touch it accidentally, Please wipe with the cleaning cloth in the accessory bag.

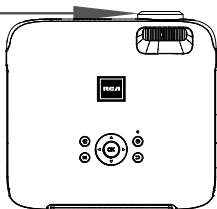FOCUS ADJ.KNOB
Step 2: Adjust A to get the
clearest picture.




- Keystone Correction on the remote control


Path1: On the remote control, press  or .

Path2: Click "SETUP" -select "Option"-click "Keystone Correction"-Adjust by Up  and down  keys on remote control.

 Functional Overview

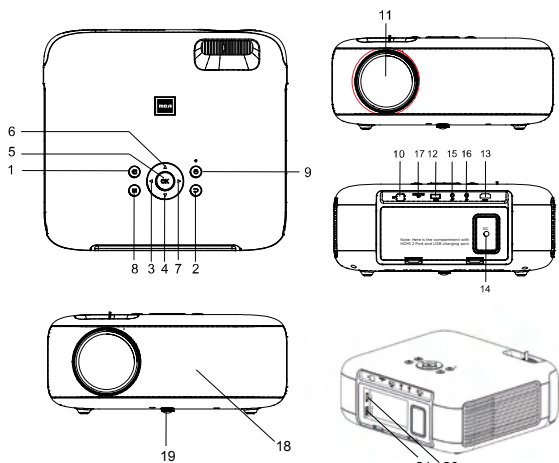

 1. Source
2. Return
3. Left
4. Down
5. OK
6. UP
7. Right
8. Menu
9. Power On/Off
10. IR Window
11. Lens
12. USB Port
13. HDMI 1 Port
14. DC IN Plug
15. AV IN Port
16. Headphone out or Audio out
17. Micro SD Port
18. IR window (Front side)
19. ANGEL ADJ. Knob
20. HDMI 2 Port
21. USB charging Port (Only for charging Streaming stick, stick not included)

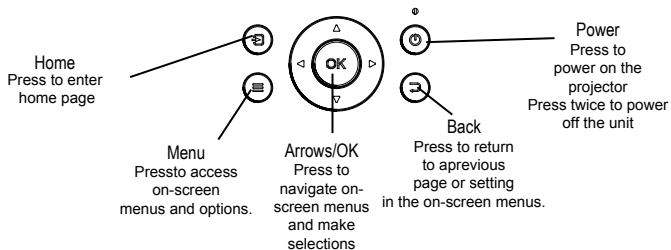

Controls of Remote




	Power	Press to power ON. Press and hold to power OFF.
		Press for keystone correction. 0to ± 18
		Press for digital zoom 0~10
	Play/Pause	Press to play or pause an individual chapter or track
	Arrows/OK	Press to navigate and confirm selections in Settings and other menus
	MENU	Press to access projector Settings
	GoTo Number Keypad	This button does not apply for this model.
	MUTE	Press to mute volume
	back/fwd	Press to reverse or fast forward during playing video/music
	VOL+/VOL-	Press to adjust audio level.
	SOURCE	Press to enter home page
	EXIT	Press to exit menus.
	ZOOM	Press to adjust the aspect ratio during playing video (16:9/ 4:3)

Install Remove Battery Of Remote

Remove the battery compartment cover on the back of your remote by carefully sliding to open. The battery cover can then be lifted away. Fit the correct batteries (**2XAAA batteries not included**), referring to the polarity markings. Finally, replace the cover.

NOTE:

 - Batteries shall not be exposed to excessive heat such as sunshine, fire.
- **Make sure that the batteries are installed correctly.**
- **Only same or equivalent type batteries are recommended.**
- Do not dispose of batteries in fire, battery may explode or leak. Do not try to recharge a battery.
- Do not mix old and new batteries.
- Do not mix alkaline, standard(carbon-zinc), or rechargeable (ni-cad,ni-mh,etc) batteries.

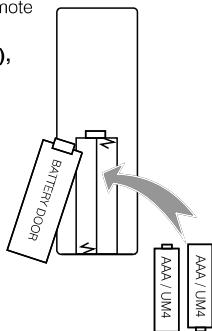

Connection Instructions

Select an input source

You will see the picture below when the projector is turned on.

You can choose among the different input sources (Movie/ Music/ Photo /AV/ HDMI1/ HDMI2) by pressing the arrows buttons (UP/DOWN/ LEFT /RIGHT) on the projector touch panel or remote control.

You can connect different devices with the projector, according to the following connection instructions.



 
Interface

HDMI device connection

The projector can connect to devices with HDMI input function. It is compatible with laptops, DVD players, Blu-ray players, Chromecast, TV Stick, etc. An HDMI cable is not included .

The projector is equipped with 2 HDMI input ports,


- 1)If you connect your devices to the projector via “HDMI 1” port, please click “HDMI 1” input souce.
- 2)If you connect via “HDMI 2” port, please click “HDMI 2” input souce.

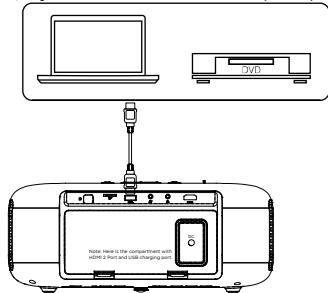

Note: In rare cases, if the projector’s speaker has no sound when playing a DVD movie in a player connecting to the HDMI input, please check the player’s digital audio settings and make sure it is set to “Auto” mode or “PCM” mode

Multimedia connection

 Insert USB / Micro SD card into the corresponding slots (as shown in the picture).
Select “MOVIE”, “MUSIC”, “PHOTO” to enter the content you want to play.

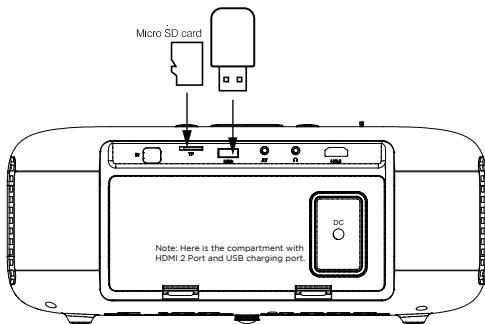


Note: Compatible 4K , be able to play the 4K file via HDMI , USB and Micro SD (only up to 4K/30FPS, and streaming rate 50Mb)




AV video device connection

  Connect the projector AV interface with the AV cable , as is shown in the pictures.

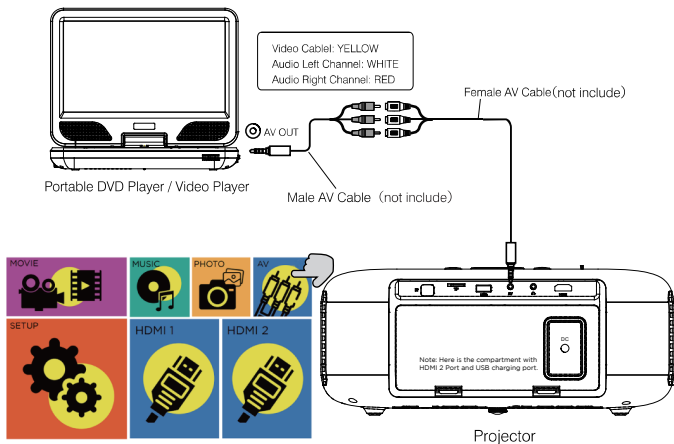


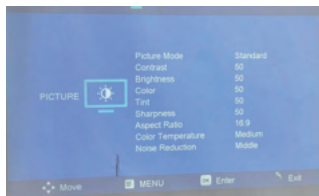 
Audio devices connection


The projector can connect to a headphone and to a wired audio system using a 3.5mm jack (not include)

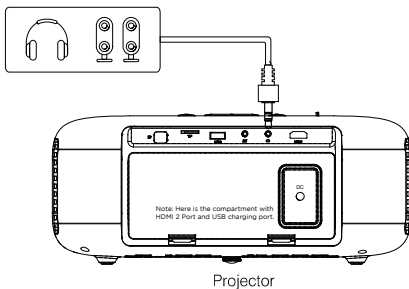

Using Photo Mode Menu

Press  button to enter projector menu. Press again to previous status.




Use  buttons to select manual page.


This manual will be shown on the upper right of the screen.

- 1. Picture Mode**
Select User , Dynamic, Mild or Standard
- 2. Contrast ,Brightness, etc**
Set Picture Mode to " User " to adjust these settings
- 3. Color Temperature**
Select Warm ,Cool, or Medium.
- 4. Aspect Ratio**
Select 16:9, 4:3
- 5. Noise Reduction**
Select Off, Low , Middle , High


Aspect Ratio	
4:3	The signal in a 4:3 aspect ratio projection image
16:9	The signal in a 16:9 aspect ratio projection image

Using Music Mode Menu

Press  button to enter projector menu. Press again to previous status.

Use  buttons to select manual page.

 
This manual will be shown on the upper right of the screen.

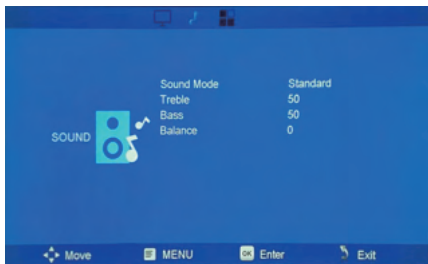


- 1. Sound Mode**
Select Music, Movie, User, Sports ,or Standard
- 2. Treble, Bass**
Set Sound Mode to “ User “ to adjust these settings
- 3. Balance**
Adjust the audio balance : -50 ~ 50

Sound Mode - User	Parameter
Treble	0-100
Bass	0-100

Using Movie Mode Menu

Press  button to enter projector menu. Press again to previous status.



Use  buttons to select manual page.

This manual will be shown on the upper right of the screen.

- 1. OSD Language**
Select different language, Follow below figure.
- 2. Projection Mode**
Select Desktop Front , Desktop Rear, Ceiling Front , Ceiling Rear.
- 3. Keystone correction**
Select 0~ +-18
- 4. Digital Zoom**
Select 0~10
- 5. Factory Reset**
Select Y or N.
- 6. Information**
Display the unit information as below

Model: RPJ275

SN:RPJ275

RCA

SW Ver: V7.0

LOGO: RCA

Spanish	French	German	Italian
Portuguese	Polish	Russian	Danish
Finnish	Swedish	Turkish	Greek
Norwegian	Hungarian	Slovakian	Croatian
Serbian	Czech	Dutch	Romanian
English	Japanese	Korean	

FAQ

Q: The projector is not turning on.

A: Please be sure that the AC power cable is plugged in tightly, and press the power switch on the projector's panel or use the remote control to turn it on.

Q: The projector is turned on, but no image is displayed

- A: ①Please make sure your device is connected to the projector correctly.
②Check the lens cover has been removed.
③Check if the input signal source is correct, and then switch into projection mode, Wait for a while and operate it again.
④Please make sure that the video source is equal or under 1080P.
⑤ If it is still not working, please contact us for further support.

Q:The Lamp (Bulb) switches off after a period of time.

- A:1. Leave the projector to cool for a few moments.
2. Once cooled, check if anything is blocking the ventilation vents.
3. Turn on the projector.

If the issue persists please contact us.

Q: When playing a video, is see the image but I hear no sound

A: If you connect to your laptop via a HDMI adapter. The audio cable of the adapter needs to be plugged into the audio output port from your laptop to the projector using a 3.5mm audio jack.

Q: The projection is not bright enough

A: We recommend using the projector in a relatively dark environment to bring out the best image brightness.

This project is designed for Home Entertainment and not recommended for Power point or other business presentations.

Q: Spots on the screen.

Using a vacuum cleaner to dean the lens. If cleaning does not resolve things, please contact your support provider for further assistance.

Q: I get a blurry image?

A: The recommended projection distance is 3-5m. Please adjust the Keystone correction to get a rectangular image first, then adjust the Focus to get a clear image.

The optimal focus is obtained when the pixels are clearly visible. If the projection size is too large, the focus near the screen edges may be less sharp than at the screen center.

Q: My projector noise is too loud, is it broken?


A: The projector noise comes from the fan of its cooling system . Projector generates heat during operation as the light bubble produces strong light to make a bright image. It is normal for the projector to make a loud noise. Brighter the image .louder the sound is. You can place the projector far from where you are, or you can connect a louder speaker to the projector to cover up the noise.

Q: Can you adjust the brightness/Sharpness of the video?

A: Path: Set up (Click "Source")-Picture-Picture Mode(Choose "User")-Adjust via remote control .For non-professionals, we recommend using the default value.

Remove the compartment cover

Please see the illustration and remove the compartment cover on the back of the projector by pulling out carefully . And you'll find here is with HDMI 2 port and USB charging port .

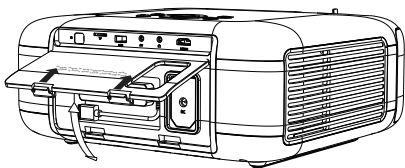 

Specifications

Light Source Type	LED
Display Native Resolution	1920 x 1080P
Supported Video Resolution	1080p,1080i,720p,576i,480p,and 480i
Power Input Connect Included Adapter	DC 19V 9A
Included Adapter Connect DC input of the unit	Input AC 100-240V, 50/60Hz Output DC19V ,9A
Display Color	6000K--9000K
Dolby Sound	Not Supported
Keystone	±30°
Connect Types	HDMI / USB / Micro SD Card / AV / Audio
Input	HDMI*2 / AV*1 / Micro SD Card *1 / USB*1
Output	Headphone out *1
USB Port	Support USB device up to 1TB
Micro SD Card	Support Micro SD Card up to 1TB
Supported image format	*.jpg*.png*.bmp
Supported audio formats	*.mp3*.wma*.ogg*.aac*.flac
Supported video formats	.avi*.flv*.rmvb*.mkv*.mp4*.mov*.mpg*.mpeg*.ts*.tp*.vob 4K (only up to 4K/30FPS, and streaming rate 50Mb)
Weight	3.94kg
Dimension	304.5*103*253mm

For service assistance and product information, please call: **1-800-968-9853**.

Pour obtenir assistance et information appelez: **1-800-968-9853**.

Curtis International Ltd.

7045 BECKETT DRIVE, UNIT 15,

MISSISSAUGA, ON, L5S 2A3 www.curtisint.com

To make a warranty claim, do not return this product to the store. Please email support@curtiscs.com or call 1-800-968-9853.

90 day Warranty

This product is warranted to be free from defects in material and workmanship for a period of ninety (90) days from the date of original purchase. During this period, your exclusive remedy is repair or replacement of this product or component found to be defective, at our option; however, you are responsible for all costs associated with returning the product to us. If the product or component is no longer available, we will replace with a similar one of equal or greater value. Prior to a replacement being sent, the product must be rendered inoperable or returned to us.

This warranty does **not** cover glass, filters, wear from normal use, use not in conformity with the printed directions., or damage to the product resulting from accident, alteration, abuse, or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase is required to make a warranty claim. This warranty is void if the product is used for other than single-family household use or subjected to any voltage and waveform other than as on the specified rating on the label (e.g., 120V~60Hz).

We exclude all claims for special, incidental, and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the purchase price. **Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty.** This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental, or consequential damages, so the foregoing limitations may not apply to you.

For faster service, locate the model, type, and serial numbers on your appliance.