

 
QUICK SETUP GUIDE

Charge and Play Kit

NS-GXBOCK101 / NS-GXBOCK101-C /
NS-GXBOCK101-C2 / NS-GXBOCK102 /
NS-GXBOCK102-C

PACKAGE CONTENTS


- Rechargeable battery pack
- USB charge cable (10 feet)
- *Quick Setup Guide*




Before using your new product, please read these instructions to prevent any damage.

SETTING UP YOUR CHARGE AND PLAY KIT

 
- 1 Open the battery cover and insert the rechargeable battery pack into the battery compartment as shown below.

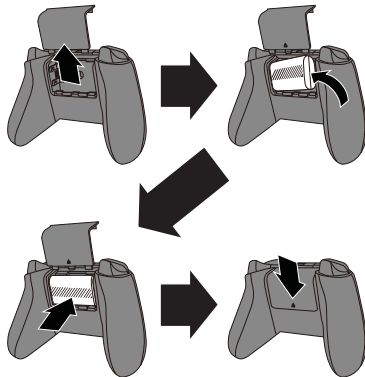

 - 2 Plug the USB Charge Cable (Micro USB plug) into the Xbox® One controller.

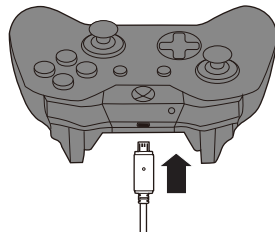


 - 3 Plug the USB Charge Cable (USB plug) into one of the open USB ports on the Xbox One console.

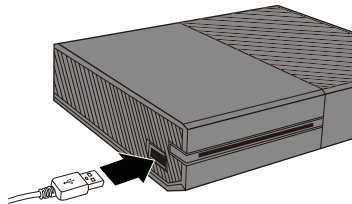

Status light information:

STATUS LIGHT	DESCRIPTION
Amber	Charging
White	Fully charged

 

LEGAL NOTICES

FCC Information

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio

frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

ICES-003 statement

CAN ICES-3 (B)/NMB-3 (B)

ONE-YEAR LIMITED WARRANTY

Visit www.insigniaproducts.com for details.

CONTACT INSIGNIA:

For customer service, call
1-877-467-4289 (U.S. and Canada) or
01-800-926-3000 (Mexico)
www.insigniaproducts.com

Microsoft and Xbox One are registered trademarks of the Microsoft group of companies.

INSIGNIA is a trademark of Best Buy and its affiliated companies

Distributed by Best Buy Purchasing, LLC
7601 Penn Ave South, Richfield, MN 55423 U.S.A.

©2016 Best Buy. All rights reserved.

Made in China