


# CD-13 COMPACT DRYER

User Manual

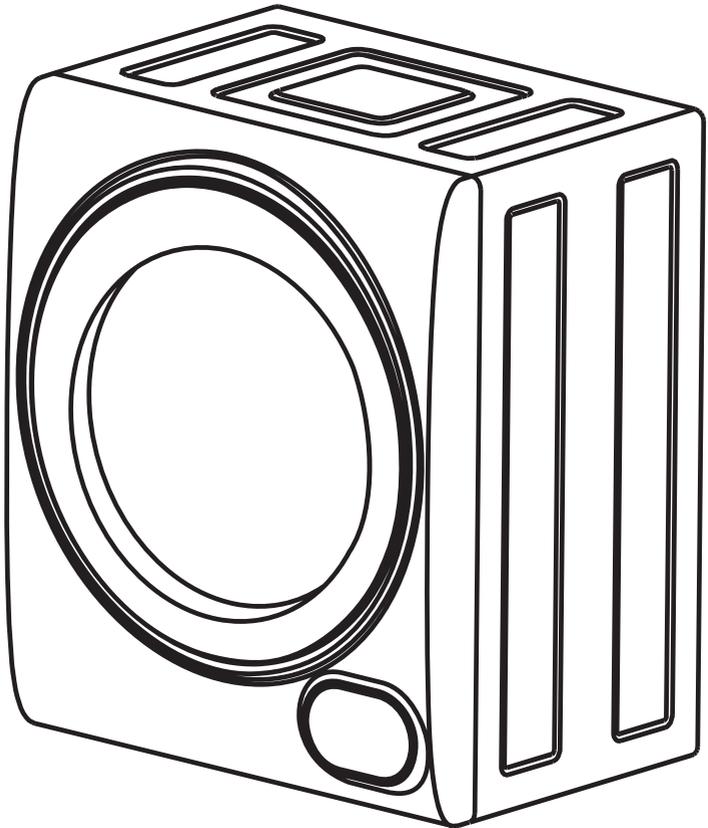

[support@homyd.com](mailto:support@homyd.com)



1-833-632-0897(US)



# Contents

|   |    |
|---|----|
| Important Safety Instructions             | 01 |
| Key Components and Structure              | 04 |
| Setting up and Powering Your Refrigerator | 05 |
| Touchscreen Panel Introduction            | 06 |
| Bluetooth Connection                      | 08 |
| Helpful Tips                              | 10 |
| Error Codes                               | 11 |
| FAQs                                      | 13 |
| Troubleshooting                           | 15 |
| Specs                                     | 16 |
| Warranty Policy                           | 17 |

# IMPORTANT SAFETY INSTRUCTIONS

-  Read and review the instructions to understand the operation and use of the product.
-  Indicates a hazard. If the warning contained in this symbol is ignored, it could result in personal injury, death, or substantial property damage.
-  Avoid contact with hot surfaces. Always use hand protection to avoid burns.
-  Please do not connect the machine to the power source when transportation damage occurs. For indoor and home use only.

## Warnings

*Failure to follow these instructions could result in property damage, personal injury, or death, resulting from electric shock, fire, or burns. When using electrical appliances, basic safety precautions should always be followed, including the following:*

## Child Safety

1. Keep the dryer and its cord out of the reach of children.
2. This product is not a toy. Keep it out of children's reach.
3. **DO NOT** allow children to climb on or enter the dryer to prevent suffocation or other injuries.
4. **DO NOT** allow children to operate the appliance. Close supervision is required when the appliance is used near children.
5. Cleaning and maintenance should not be performed by children.

## Power Connection

6. **Never** use the machine in damp or wet environments to avoid electric shock.
7. Regularly inspect the appliance and power cord. **DO NOT** use the dryer if the power cord or plug is damaged.
8. Ensure the power cord is dry and not pinched or damaged. **DO NOT** place a portable power strip or power supply behind the device.
9. This device must be grounded, use a 110-120V, 60Hz grounded outlet, and ensure that it is used on a dedicated circuit.
10. **DO NOT** use adapters or extension cords, and **DO NOT** remove the grounding plug.
11. **DO NOT** connect to a switched outlet.

## Fire and Overheating Prevention

12. Place the dryer in a well-ventilated area and avoid blocking vents or placing it in an enclosed space. Maintain **at least 6 inches** of clearance around the unit.
13. **Never** cover the dryer or place it near a heat source, such as an open flame or heater.
14. **Avoid** exposing the dryer to direct sunlight while in use, as excessive heat buildup may cause a malfunction or be dangerous.
15. To prevent a fire hazard, **DO NOT** place the unit near a gas or electric stovetop.

## Installation and Transport

16. When moving or transporting the dryer, keep it upright to prevent damage to the machine.
17. **DO NOT** use it in a moving vehicle or boat. **DO NOT** use it outdoors. Improper use may cause injury.

## Usage Instructions

18. This device can be used by persons with reduced physical, sensory or mental abilities or lack of experience and knowledge. However, they must be supervised or instructed on safe use and must understand the hazards involved.
19. Make sure all pockets are empty, zip or button clothes, and turn them inside out before putting them in the dryer.
20. **DO NOT** put items that have been stained with substances such as cooking oil, acetone, alcohol, gasoline, kerosene, stain removers, turpentine, wax, and wax removers directly into the tumble dryer.
21. Put the appropriate amount of clothes to be dried in the dryer at one time.
22. Before starting the device, check whether the clothes are stuck in the doorway and ensure the dryer door is closed correctly.
23. Dark clothes should be dried separately from light clothes to prevent cross-color contamination.
24. Before drying, check that the stains on the clothes have been removed; otherwise, the heat of the dryer may cause the stains to remain permanently.
25. Clothes of similar fabrics should be dried together. It is recommended to put delicate small clothes in a mesh bag and avoid overloading the dryer for best results.
26. The maximum drying capacity of the dryer is 4.0 kg, so **DO NOT** overload it. The dryer is only suitable for drying textile materials that have been washed in water.
27. **DO NOT** use the dryer to dry bras with underwires to avoid damage to the device or clothing.

28. When changing the direction of rotation, the dryer may pause for a few seconds. This is normal and helps to evenly heat and prevent clothing from tangling.
29. **DO NOT** add other clothes to be dried during the drying process. This may cause the clothes to tangle and cause uneven drying.
30. If you need to dry large items such as blankets, it is recommended to open the dryer door regularly during the drying process and shake the clothes before returning them to the dryer to ensure even drying.
31. Drying time may vary depending on factors such as material, fluffiness, dryer capacity, etc.
32. Please remove the clothes immediately after drying and hang them. Iron the clothes if necessary.
33. It is recommended to use the "cooling" mode of the dryer to reduce the temperature of the clothes and reduce the risk of burns.
34. **DO NOT** touch the intake during the drying cycle due to high temperatures.

## Maintenance and Cleaning

35. Unplug the power cord before cleaning. The lint filter must be installed every time you dry. The lint filter must be cleaned before each use.
36. **DO NOT** use thinners, gasoline, or alcohol.
37. **DO NOT** use harsh or abrasive cleaners, which this may damage the dryer.
38. **DO NOT** use any type of spray cleaner when cleaning the interior.
39. Regularly check the power cord for wear or damage. If you find any problems, please replace the power cord promptly or contact customer support.
40. **DO NOT** clean the dryer with water.
41. Clean the air intake filter regularly.

## Other Important Safety Notes

42. **DO NOT** expose the dryer to rain or other water sources.
43. If the machine shows any signs of abnormality (for example, strange noises, smoke, or unusual odors), immediately disconnect the power supply and contact a qualified technician. Do not attempt to repair it yourself.

44. **NEVER** try to modify the dryer. Doing so may create serious safety risks.
45. If the device requires repair, consult a certified technician. Do not attempt to repair it yourself.


## **Risk of Fire or Explosion**


*Dispose of the unit in accordance with federal or local regulations. Follow all handling instructions to ensure safe handling.*

- **DO NOT** place plants containing vegetables or cooking oils or items contaminated with hair care products in the tumble dryer.
- **DO NOT** stop the tumble dryer during the drying process unless all items are promptly removed and spread out to dissipate heat.
- **DO NOT** machine dry items made of foam rubber or similar textured rubber materials.
- Repairs must be performed by trained personnel.
- Clean and maintain the unit regularly according to the Cleaning and Maintenance section of this manual.

# KEY COMPONENTS AND STRUCTURE

- ① Door with Transparent Window
- ② Sealing Rubber Gasket
- ③ Drum
- ④ Lint Filter
- ⑤ Air Intake Filter
- ⑥ Control Panel
- ⑦ Exhaust Outlet
- ⑧ Back Cover
- ⑨ Power Cord

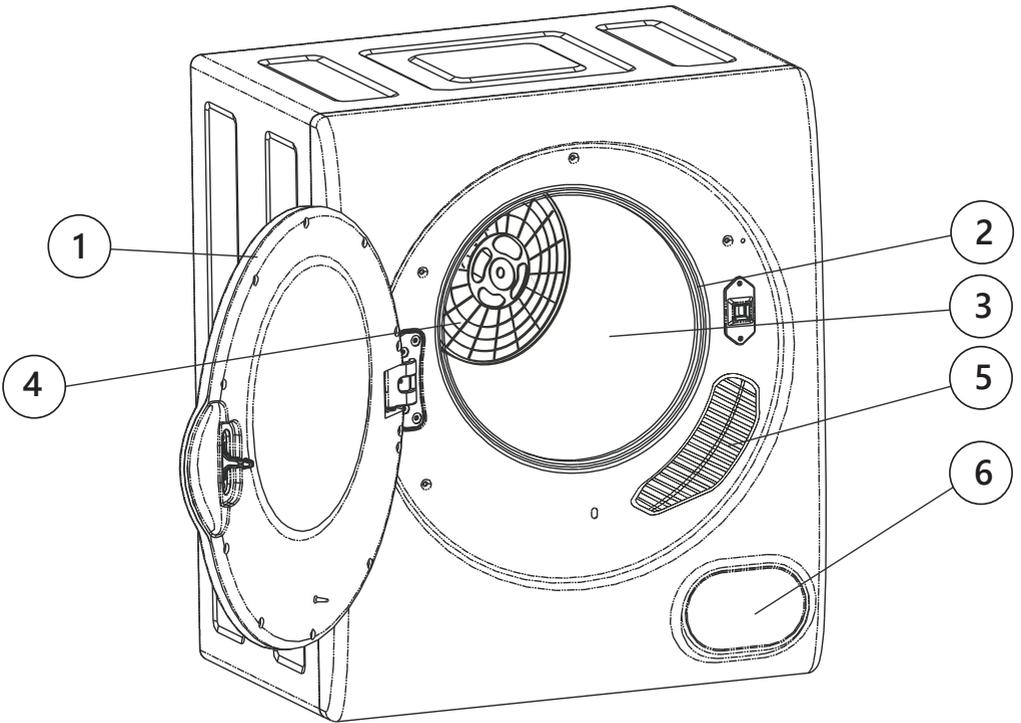

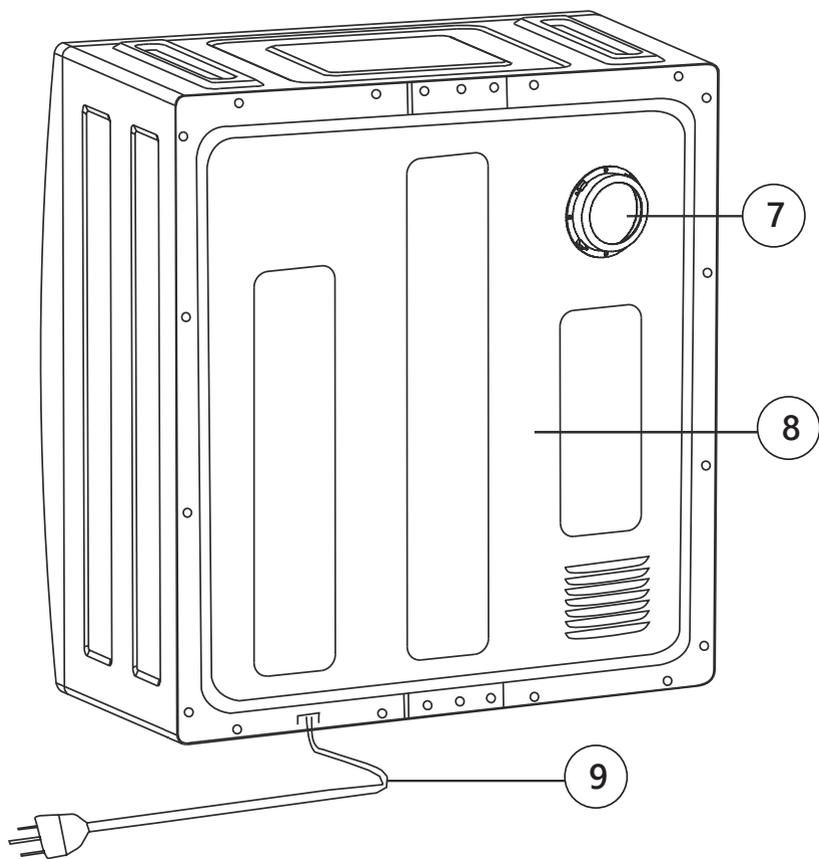

## Accessories



Clamp x 1



Hanging  
Brackets x 2



Plastic  
Spacers x 2



Exhaust  
Connector x 1



Exhaust  
Tube x 1




12mm-long  
Screws x 4



25mm-long  
Screws x 4

# TOUCHSCREEN PANEL INTRODUCTION

## Control Panel Functions

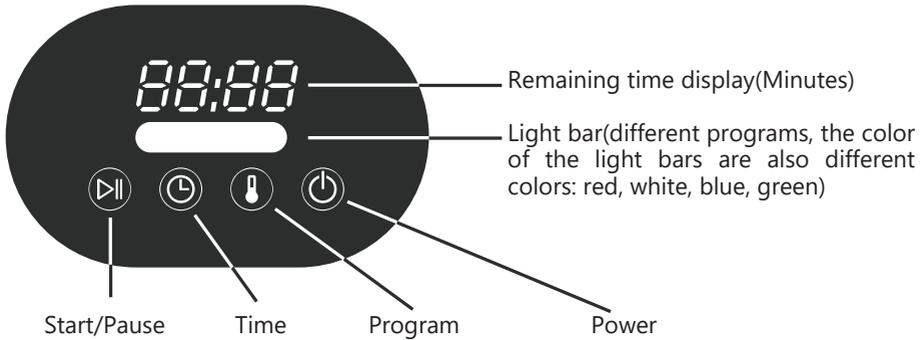

### "POWER" Button

Press once to turn on the machine when it is off.

\*When the power cord is connected to the socket, the power button is slightly lit, and you can see the location of the power button.

\*After touching the power button, other buttons and descriptions on the control panel appear, and the dryer enters standby mode.

### "PROGRAM" Button

#### A: Strong Drying:

- Select this program, the light bar turns **RED**, and the remaining time defaults to 150. In the process of running the program, the heater's full power for heating clothes and drying automatically shuts down.
- Generally used to dry larger-size clothing.

#### B: Intelligent drying:

- Select this program, the light bar turns **LIGHT BLUE**, and the remaining time is displayed as "200". In this program, the heater's full power for heating clothes and drying automatically shuts down.

### C: ECO drying:

- Select this program, the light bar turns BLUE, and the remaining time is displayed as "ECO." The dryer will enter energy-saving mode. ECO mode intelligently adjusts the run time using a humidity sensor. For the first 140 minutes, the dryer will not heat, but will use air circulation for initial drying, with a maximum run time of 210 minutes.  
*\*ECO mode is suitable for small loads of laundry weighing up to 3 lbs (1.36 kg).*

### D: Normal drying:

- When this program is selected, the light bar turns **GREEN**, and the remaining time is displayed as "90". In this mode of operation, the heater is on at half-power heating and runs the set time after the shutdown. This mode has two functions: ironing and drying. The ironing function set time is generally not more than 90 minutes after the shutdown, which will still contain moisture and easy ironing; the drying function set time is generally not less than 120 minutes, generally used for small-sized clothing or a small amount of clothing.

### "TIMER" Button

Press Once: Press to increase by 20 minutes, up to no more than 200 minutes.

During the dryer's operation, you must first touch the "Start/Pause" button to pause the dryer, and then touch the key to change the time.

In the "Intelligent drying" and "ECO drying" programs, you cannot change the time.

\* When the remaining time is greater than 180 minutes, touch this button, and the remaining time jumps to 20 minutes.

### "START/PAUSE" Button

Press once to start or pause the dryer operation.

\*Touch the button to start the dryer when the program and time are set.

\*Touch the button to pause the dryer to change the time or procedure while the dryer is running.

# Set up the Dryer

## 1. Unpack and Inspect

Remove all external and internal packaging, including the carton, foam padding, and the protective foam inside the machine. Check if all accessories are included. If anything is missing, please contact Customer Service (*email support@homyd.com or call us at +1-833-632-0897*).

## 2. Prepare the Dryer


Remove all tape and adhesive strips from the machine; remove the accessories inside. Clean the interior cabinet with a damp cloth.

## 3. Position the Dryer





A. Place the machine in a well-ventilated area, and place it horizontally on a flat surface away from direct sunlight and heat sources (such as stoves, furnaces, and radiators). Ensure that there is at least **15 cm (about 6 inches)** of clearance between the air outlet and any obstructions.

B. Position the Dryer on the wall steps:

- Determine the dryer position on the wall and mark the required bracket position.
- Fix the wall hanging brackets/hooks (2 supplied) to the wall securely (e.g., into the stud). If it is too wide (more than 450mm), fit a timber slat between the studs to mount the brackets onto the stud position.

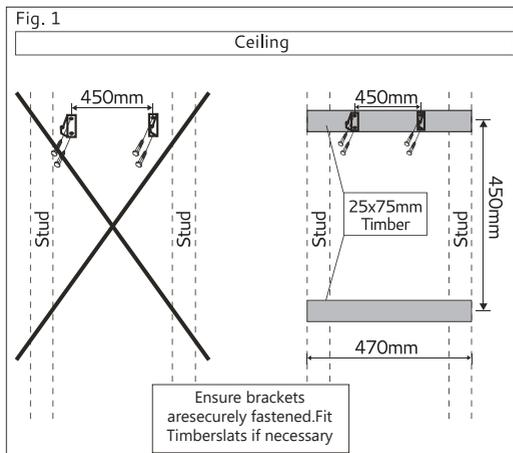

- c. To install the hanging brackets to timber, start at Fig 2.
  - d. Align hanging brackets and fasten 25mm long screws(provided) tightly. Fig 2.
  - e. Please adjust the direction of the exhaust connector, then match the exhaust connector to the connector. Please refer to Fig 3.
  - f. Turn the exhaust connector clockwise until it inserts into the connector's groove.
  - g. Use the 4 X 12mm screws (provided) to fix the 2 spacers as per Fig 4.
  - h. With assistance,mount the dryer on the wall bracket. See Fig.5.
- \* For easy installation, a minimum of 50mm is needed between the top of the dryer and the ceiling.
- \*The dryer cannot be used upside down.

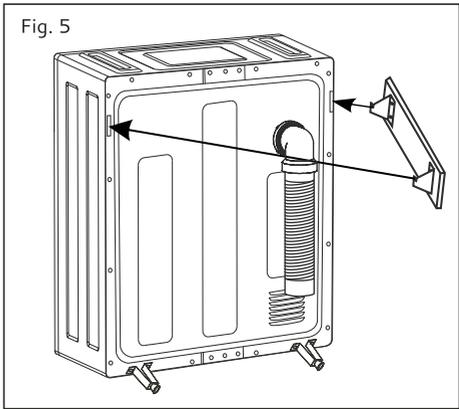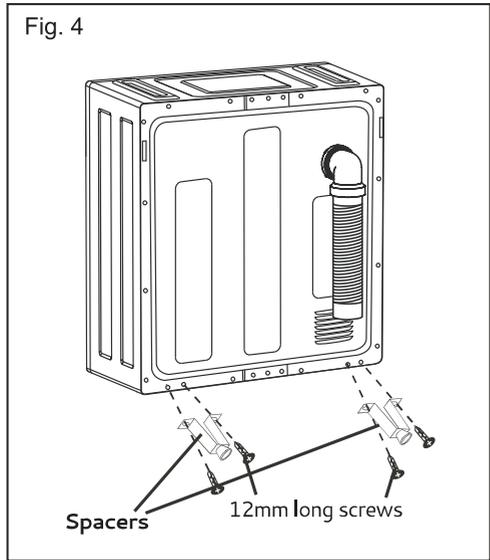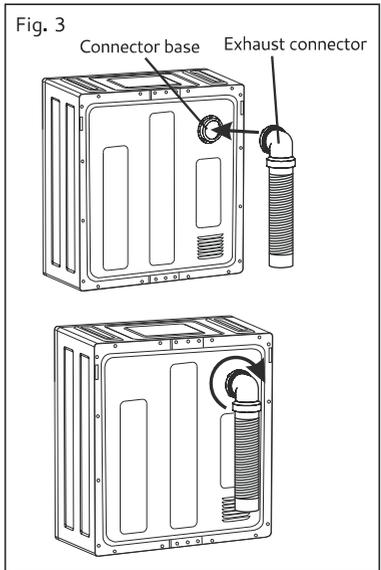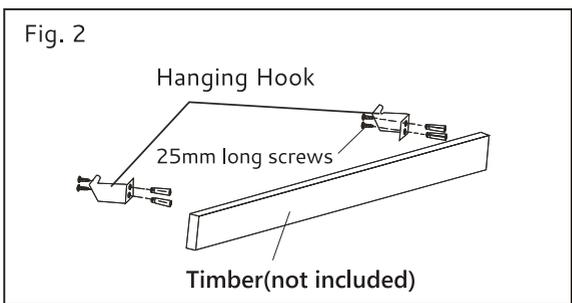

## 4. Plug Accessibility

Place the device where the plug can be easily inserted, and ensure the machine is grounded before use.

### Note: Grounding Method

For safety reasons, this product must be grounded. Use the provided grounding plug and plug into a compatible grounding outlet. If not, contact a qualified electrician for installation.

# CLEANING YOUR DRYER

## 1. Daily Cleaning


Clean all parts that come into contact with clothes, especially the lint filter. Here are the detailed steps for cleaning:

### Note:

*Before cleaning, be sure to disconnect the power supply.*


### Remove the Filters

Hold the lint filter and gently twist it from side to side. Then, pull it outward with your fingers and align it with the four holes around the exhaust mask to remove it. (Shown in Fig 1)

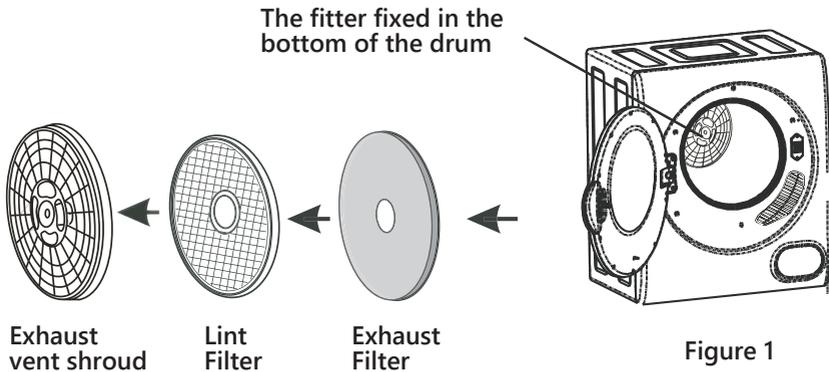

### Clean the Filters

Separate the 'exhaust vent shroud,' 'lint filter,' and 'exhaust filter.' Use a soft brush or vacuum cleaner to remove lint from the lint filter and exhaust filter. Avoid damaging the filters. ( Shown in Fig 2)

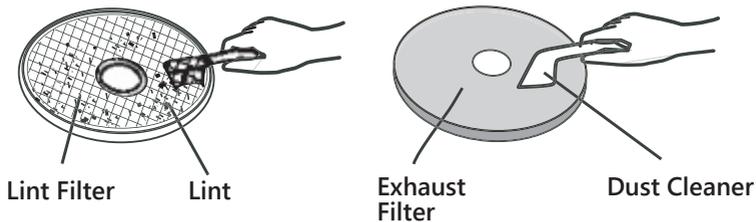

### Reinstall the Filters

After cleaning, reinstall in the following order: 'Exhaust Filter → Lint Filter → Exhaust Vent.' Align the center groove in the filter with the icon on the drum can and ensure it is inserted correctly at the front. ( Shown in Fig 3)

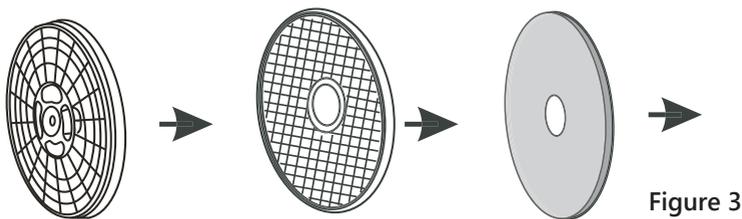


Figure 3

*The filter fixed to the bottom of the drum should also be cleaned with a soft brush.*

## 2. Deep Cleaning

The air intake filter should be cleaned at least once a month.

### Clean method:

Hold the top and bottom of the air intake shroud and pull outward to remove it.

Take out the filter inside the shroud and clean it with a soft brush.

Reassemble and reinstall it in the same way as before.

Regularly cleaning the filter can ensure drying efficiency, keep the dryer clean, prevent clogging, and extend the service life of the machine.

We recommend cleaning the lint filter **after each use**. In addition, the air intake filter and the dryer's interior surfaces that come into contact with clothes should be thoroughly cleaned **at least once a month**.

## CORRECT DISPOSAL OF THIS PRODUCT



When the unit is taken out of service, its disposal and the handling of its materials must comply with national regulations.

# FAQs

## 1. How do I clean the filter?

- We recommend cleaning the lint filter after each use. If you use the dryer frequently, perform a routine cleaning after each use and a deep cleaning at least every month.

## 2. Why does the dryer drum pause for a few seconds and then change direction?

- This is normal. It's to ensure even heating of clothes and to prevent them from tangling.

## 3. Why does the Control Panel Not Respond When Powered On?

- Please verify power supply functionality by checking if other household appliances are operating normally. If the problem still persists, please contact Customer Service (email [support@homyd.com](mailto:support@homyd.com) or call us at +1-833-632-0897).

## 4. Will this dryer hold blankets and comforters?

- Yes, you can use the Strong drying cycle for blankets and comforters but do not exceed the dryer's maximum load capacity.

## 5. Can I put the dryer in a cupboard with a lid?

- We strongly advise against installing the dryer in enclosed cabinets. For optimal operation and safety: Ensure adequate ventilation around the unit and avoid confined spaces that might restrict airflow.

## 6. What is the maximum temperature when the machine is running?

- The maximum temperature is 140 °F.

# TROUBLESHOOTING

| Problem                                    | Possible Cause  | Solution  |
|--|---|---|
| <b>Noise</b>                               | The dryer is not placed horizontally or mounted in balance. | Please check and make sure that the dryer is placed horizontally or mounted in balance.   |
|  | The dryer shell is deformed during transport.               | Please contact the after-sales team to replace the item.  |
|  | The internal structure is loose.                            | Please contact the after-sales team to replace the item.  |
| <b>Dryer does not start</b>                | There may be a power failure.                               | Try again when there is power.  |
|  | The power plug is not inserted firmly.                      | Insert the power plug firmly.   |
|  | The door is not closed properly.                            | Ensure the door is completely closed.   |
| <b>Drum does not turn</b>                  | The power plug is loose.                                    | Please check and insert the power plug firmly. If it does not resolve the issue, please check if the display still works and contact the after-sales team for assistance.   |
| <b>The laundry is not thoroughly dried</b> | The front and back filters are clogged.                     | Clean the filter.   |
|  | There are too many items in the dryer.                      | Avoid overloading(fill drum to half capacity maximum).  |
|  | The laundry was twisted whilst drying.                      | Untangle the items and re-dry.  |
|  | The dryer is placed in a small and badly ventilated area.   | Place the dryer in a well-vented area.  |
| <b>Automatic Shutdown</b>                  | Too many continuous drying times.                           | Please unplug the dryer for 2 hours and then plug it back for a try. If that does not resolve the issue, please check the vent in the back that is blowing cold or hot air and contact the after-sales team for assistance. |

|  |  |   |
|--|--|---|
| <b>Water Leakage</b>                         | Clothes are moist before being put into the dryer. | Before putting the clothes in the dryer, they need to be spun dry in the washing machine. |
| <b>Parts Missing or Need to be Replaced.</b> | Any parts missing or broken.                       | Please contact the after-sales team for spare parts.                                      |
|  | The filter wool needs to be replaced.              |   |

## SPECS

| Specification        | Value             |
|----------------------|-------------------|
| SKU                  | CD002-350WH-USZX  |
| Model                | CD-13             |
| Rated Input          | 1400W             |
| Voltage/Frequency    | 120V/60HZ         |
| Wet Clothes Capacity | 21.1LBS           |
| Dry Clothes Capacity | 13.2LBS           |
| Product Dimensions   | 24.0*22.2*26.8 in |
| Net/Gross Weight     | 54.9/72.31 lbs    |

# WARRANTY POLICY

## 1-Year Limited Warranty

**Toll-Free Call: 1-833-632-0897(US) Mon to Fri, 9AM - 6PM ( ET )**

**Email: support@homyd.com**

Thank you for choosing our products. We provide a 1-Year Limited Warranty for items purchased through our official channels. Please kindly note that this warranty is for the original purchaser and is non-transferable. If you purchase from an unauthorized seller, please get in touch with them directly.

We are committed to ensuring that our products are free from defects in materials and workmanship for one year from the date of purchase, as long as they are used under normal household conditions and maintained according to the User Manual. **Please note that certain conditions and exclusions apply:**

Should you find any defects in the original product or its non-wearable parts, we will be happy to repair or replace the item within one year of purchase. If a replacement is necessary, the warranty period will continue from the original purchase date. Please be aware that normal wear and tear or damage due to mishandling, accidents, or failure to follow instructions are not covered. However, replacement parts are available for purchase. Feel free to contact us for more information.

Please also note that this warranty does not cover damage caused by exposure to liquids or foreign materials, unauthorized repairs or modifications, or use in commercial or non-household environments (unless specified for commercial use).

If you encounter any issues with your product, we are here to help. You can reach us by phone at **1-833-632-0897(US)** or email us at **support@homyd.com**. For certain product categories, we also offer the option to upgrade your warranty to our VIP service.

Our friendly phone support team is available from **Monday to Friday, 9 AM - 6 PM (ET)**. To assist you more efficiently, please have your product with you when you call. We aim to respond to emails within 24 business hours. If you don't receive a reply after sending us an email within this time frame, kindly check your spam folder to ensure you don't miss our response.

In addition to the one-year warranty, we also offer lifetime technical support. After the warranty period, service is still available at an additional cost. Please don't hesitate to contact us with any questions or concerns.

**SKU: CD002-350WH-USZX**

**MODEL: CD-13**

