

Chair Assembly Instructions

Estimated Assembly Time in Minutes

☆ <15 ★ <45 ☆ 60+

Your chair comes packaged in one box.





DO NOT use any sharp objects to open plastic wrapped components as damage to product or components may result.

Carefully remove all of the components from the packaging and set aside for assembly. Assemble on a soft surface to prevent scratching the finish.



Parts List		Hardware List	
A 1 x Seat		* E 4 x Long Bolts	 M8 x 80mm
B 1 x Back		* F 4 x Short Bolts	 M8 x 60mm
* C 2 x Back Legs		* G 8 x Flat Washers	 M8 x 22 x 1.5mm
* D 2 x Front Legs		* H 8 x Lock Washers	 M8 x 12 x 2mm
* D1 2 x Washers		* I 1 x Hex Key	 M6 x 77x 27mm
		* Replaceable Parts	
		Hardware bag can be found inside seat deck.	

Assembly

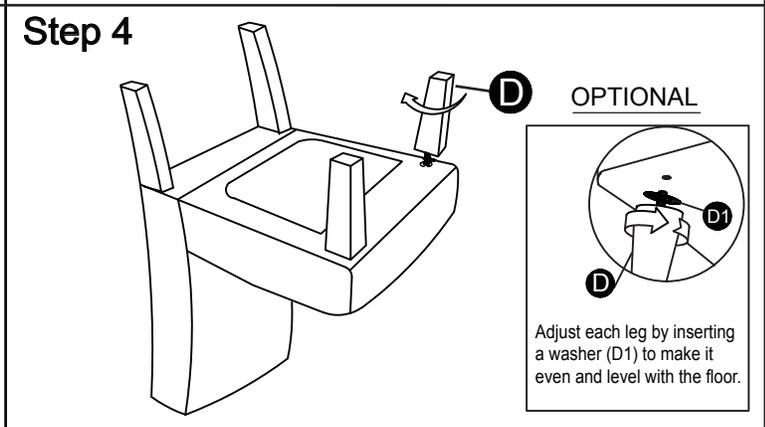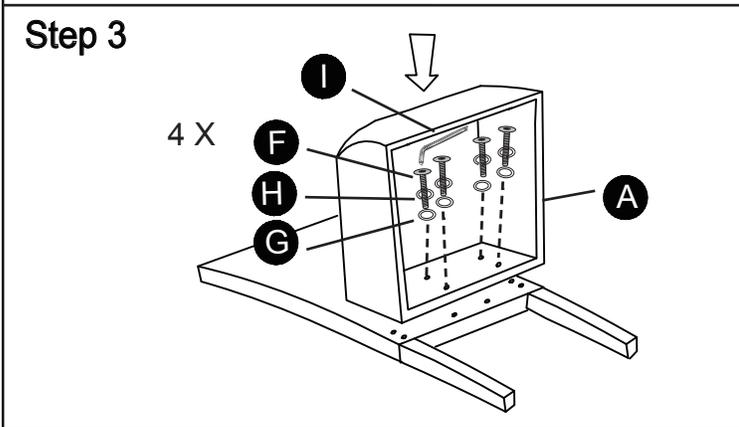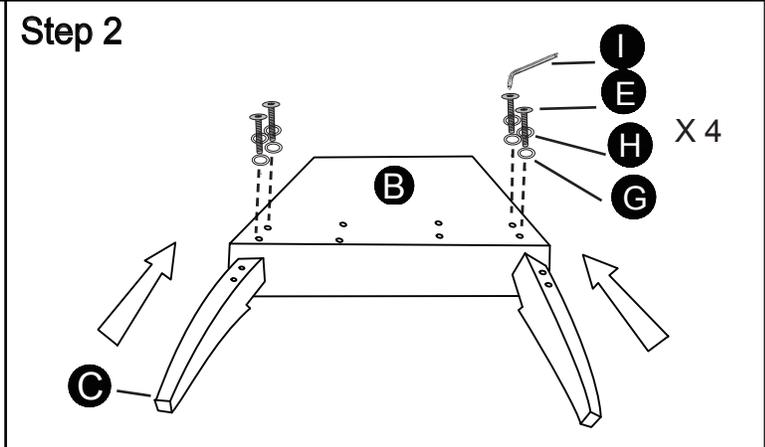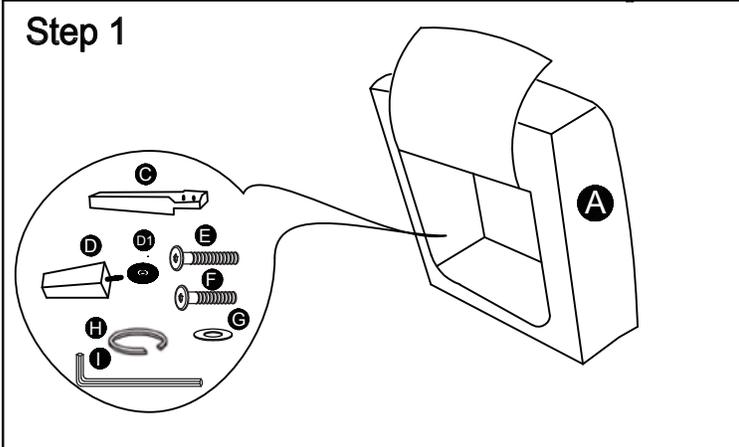

Your chair style may differ from images. Care for your furniture by periodically tightening all bolts using the included hex key.

About your furniture piece:

- Softening of foam is natural and will happen over time with use.
- Fabric will fade or discolor in direct sunlight. Minimize exposure to direct sunlight to extend the life of your furniture.
- Wood grain, knots, streaks, and color variation occur naturally in wood and are not considered defects.

CAUTION: Tighten all components securely before use. Failure to do so may result in personal injury.

Customer Support: 866-238-0531
Mon-Fri 8:00am - 4:30pm CST
customerservice@furniturequestions.com