

Introduction to product features

INSTRUCTION MANUAL

1. The transparent kettle is made of high borosilicate glass material, which is high visibility and easy cleaning;
2. Hidden 304 stainless steel heating chassis, certified for food safety, odorless and non-toxic;
3. Adopting computer chip control, high-precision temperature control, multiple protections, safety, convenience, and energy saving;
4. It can achieve multiple tasks such as boiling water and brewing tea;
5. The newly designed base supports 360 degree placement and rotation of the kettle, making it convenient and aesthetically pleasing to use.



Deposit

Place this product on a horizontal, dry, and stable surface.
This product cannot be placed or stored near other heat sources.




Common faults and issues

Fault phenomenon	Possible causes	Handling methods
E1	Is pot body properly placed?	Reposition
E9	Is it no water burning?	Fill water and retry
OU	Is it no water burning?	Fill water and retry
Boiling water need longer time and making abnormal noises	Is there any scale to remove?	Remove the scale
Switch button unresponsive	Temperature sensing device not cooled down	Try again after dry burning and temperature cooling


Page -1-

Page -2-

⚠ Attention

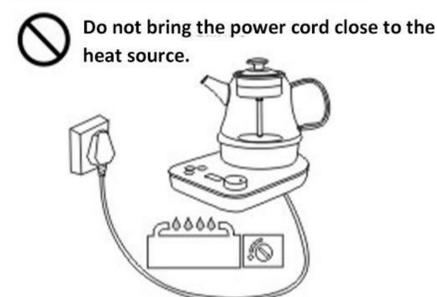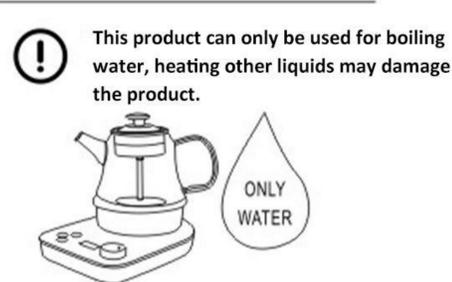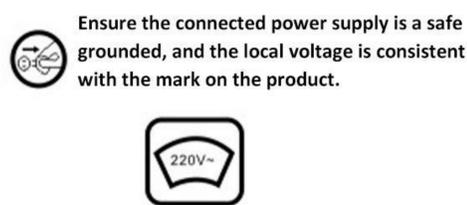

⚠ Attention

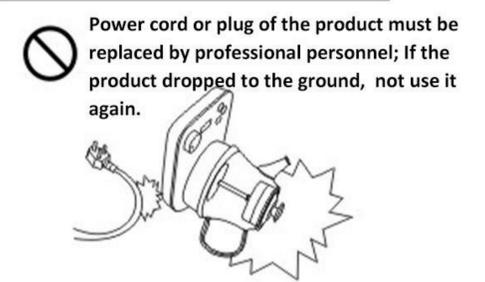

Page -3-

Page -4-

Product usage method

First use

1. Place the base on a dry, stable, and easy to clean desktop;
2. Before using this product for the first time, please remove all attachments (such as labels) from the body to avoid danger;
3. Before formal use, boil water once. After the water cools down, thoroughly clean the inside and spout of the kettle to ensure cleanliness and hygiene;

Note: When boiling water for the first time, foam may emerge from the spout and lid of the kettle, which will disappear after cleaning.

Normal use

Attention: Unattended operation of this product is prohibited.

1. Open the lid of the kettle and fill it with water, keeping the water level between the minimum and maximum marked lines;
2. Put tea leaves or contents to be steamed into a container;
3. Cover the pot lid to avoid the risk of burns;
4. Place it on the base for use;
5. When ready together, press the knob to switch on, and set "Boil" key to start work.

Page -5-

Cleaning and environmental protection

clean

1. Be sure to disconnect the power plug before cleaning;
2. Steel wool, abrasive cleaning agents, or corrosive liquids should not be used to clean products;
3. Do not immerse the tea cooker and base in water for cleaning;
4. Use warm water and a soft cloth with harmless cleaning agents for cleaning.

Removing scale

1. Inject 3/4 of the highest water level into the pot and boil the water;
2. After cutting off the power, add white vinegar (with a concentration of 8%) and reach the highest water level;
3. Keep for 12 hours;
4. Pour out the solution and rinse it thoroughly with clean water;
5. Inject clean water again and bring to a boil;
6. Pour out boiling water and clean it with clean water; If there is still scale, repeat the above steps.

Attention: Other descaling agents can also be used, and descaling can be carried out according to the operation method of this descaling agent.

Matters needing attention

All content of this project is related to safety, please be sure to comply with it.

The precautions in this item are mainly for the correct use of this product. The precautions explain the degree of danger, harm, and possible accidents that may occur.

Page -7-

Operational functions

This Product has eight work mode programs.

1. Press Knob key to switch "Off" and "On(standby)" mode after power connected;
2. Touch the "Func" key to select work mode, then the corresponding working mode indicator light will light up:
 - ☉ Customize light on: The product first boils the water, and then boils the tea according to the previously set timer and heat value; At this time, you can touch the time "+" / "-" button to adjust the timer at any time, and change the tea boiling power value by rotating the knob; After setting the timer and firepower value, they are memorized; In Customize work mode, screen displays timer countdown; After boiling tea ended, enter the holding mode;
 - ☉ "Pu'er", "Flower Tea", "Black Tea", "Oolong", "Fruit" light on: the product first boils the water, and then boils the tea according to the pre-set timer and heat; At this point, you can touch the "+" / "-" button to adjust the timer at any time, and change the tea boiling power value by rotating the knob; Note that the timer and power values modified at this time cannot be remembered; In these work modes, screen displays timer countdown; After boiling tea ended, enter the holding mode;
 - ☉ "Boil" light is on: start the boiling water function, the screen displays real-time temperature, and switches to holding mode when heated to 100 °C;
 - ☉ "Hold" light is on: the product maintains the water temperature at the previously set temperature for 2 hours; When in the holding state, you can touch the "+" or "-" button to change the holding temperature; After setting the temperature, configs are memorized;
3. Any time in executing tasks, touch "Func" key to stop to standby mode.
4. After 30 seconds of shutdown or 3 minutes of standby, the screen will turn off.

Page -6-

The explanation is divided into two levels: warning and attention.

1. Before using the product, please carefully read this manual and keep it safe for future reference.
2. Please check whether the product has been operated and whether the accessories are complete after unpacking.
3. If the power cord is damaged, in order to avoid danger, it must be replaced by professional personnel from the manufacturer's maintenance department or similar department.
4. Children and individuals with disabilities are advised to use this product under the supervision of a guardian.
5. If a malfunction occurs, the power plug should be immediately unplugged and defective products should not be placed in working condition.

Warning: Failure to follow the user manual may pose a danger.

Attention: Violating regulations may damage your belongings, property, and even endanger your personal safety.

Do not carry out modifications. Non professional repair personnel are prohibited from disassembling and repairing, otherwise accidents such as fire, electric shock, and injury may occur.

Please keep this product out of the reach of children or individuals with disabilities. Children and individuals with disabilities should use this product under the supervision of their guardians.

Page -8-