

FEATURES

- The dust blower removes loose dirt that can scratch your lens.
- The lens cleaning pen has a soft brush on one end to remove dust and a cleaning pad on the other end to remove oil and fingerprints.
- The cleaning tissues remove oil and fingerprints. Do not add cleaning solution to tissues and do not reuse tissues.
- The microfiber cloth can be used to clean the lens or LCD screen.
To clean the cloth, wash it in mild detergent or warm water.

PACKAGE CONTENTS

- Lens cleaning pen (with soft brush and cleaning pad)
- Dust blower
- Lens cleaning tissues (50 sheets)
- Liquid cleaning solution
- Microfiber cleaning cloth
- *Quick Setup Guide*

PT-CCK21

UNIVERSAL CLEANING KIT FOR DIGITAL CAMERAS/ CAMCORDERS QUICK SETUP GUIDE

TO CLEAN YOUR CAMERA OR CAMCORDER LENS

- 1 Remove any loose dirt on the lens and the surrounding edges with the dust blower.
- 2 Gently brush the lens and edges with the brush on the lens cleaning pen to remove small particles of dust.
- 3 Gently wipe the lens and surrounding edges with the cleaning pad on the lens cleaning pen or with a cleaning tissue. You can adjust the pad on the pen to clean hard to reach areas.

Caution: Only use the outer side of the lens pen cleaning pad. The pad is not reversible. Using the inner side with the seam could scratch the lens.

- 4 Gently wipe the LCD screen with the microfiber cloth to remove fingerprints, etc.

Note: You can apply a small amount of the liquid cleaning solution to the microfiber cloth to help clean the lens or LCD screen. Do not apply the liquid cleaning solution directly to the lens, LCD screen, pad side of the lens cleaning pen or cleaning tissues.

- 5 Gently dry the lens or LCD screen and surrounding edges with the microfiber cloth.
- 6 Let the lens or LCD screen sit for several minutes to make sure it is dry.

ONE-YEAR LIMITED WARRANTY

CONTACT PLATINUM

For customer service, call 1-800-499-3964.