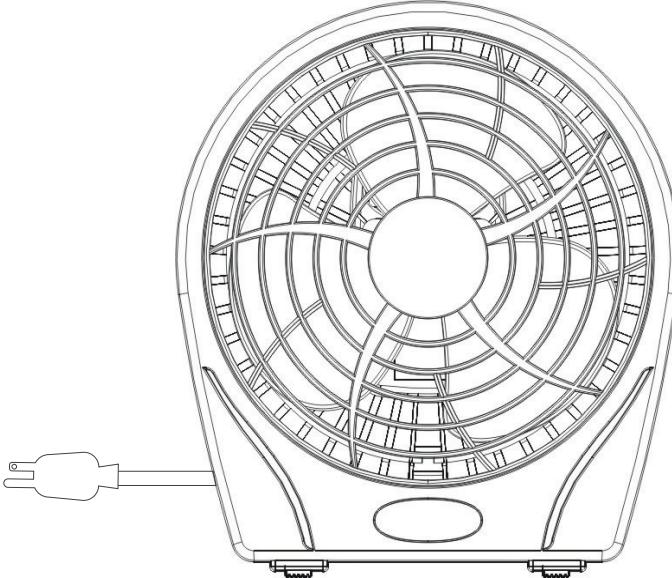


QUICK SETUP GUIDE

9" Table Fan

NS-F9T7-BL / NS-F9T7-MT / NS-F9T7-GY /
NS-FT9GR8 / NS-FT9BK8 / NS-FT9PK8

PACKAGE CONTENTS

- 9" personal fan
- *Quick Setup Guide*

IMPORTANT SAFETY INSTRUCTIONS:

PLEASE READ AND SAVE THESE IMPORTANT INSTRUCTIONS

WHEN USING ELECTRICAL APPLIANCES, BASIC PRECAUTIONS SHOULD ALWAYS BE FOLLOWED TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, AND INJURY TO PERSONS, INCLUDING THE FOLLOWING:

- Read all instructions before using this product.
- Use this fan only as described in this *Quick Setup Guide*. Any other use not recommended by the manufacturer may cause fire, electrical shock, or injury to person, and may void the warranty.
- Always unplug the unit before assembling, disassembling, or cleaning.
- Always unplug unit when not in use, when moving from one location to another, and before cleaning.
- To disconnect, grip the plug and pull it from the wall outlet. Never yank the cord.
- The use of attachments not recommended or sold by the appliance manufacturer may cause hazards.
- Avoid contact with moving parts.
- DO NOT operate this fan with a damaged cord or plug, after a malfunction, or is dropped or damaged in any manner. Discard the fan or return the unit to Best Buy, Inc. for examination, electrical or mechanical adjustment, or repair.
- Do not operate this fan in the presence of explosive and/or flammable fumes.
- Do not place the fan or any parts near an open flame, or cooking or other heating appliance.

- Extreme caution is necessary when the fan is used by or near children or invalids and whenever the fan is left operating and unattended.
- This product is intended for household use only and not for commercial or industrial use. Do not use outdoors.
- Always use on a dry level surface.
- Do not operate if the fan housing is removed or damaged.
- A loose fit between the AC outlet and plug may cause overheating of the plug. Have a qualified electrician replace the outlet.
- This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded or returned to an authorized service facility for examination and/or repair.
- DO NOT run the cord under carpeting. Do not cover the cord with throw rugs, runners or the like. Do not route the cord under furniture or appliances. Arrange the cord away from traffic area and where it will not be tripped over.
- DO NOT open to clean the blades.
- This fan is equipped with a polarized alternating current line plug (a plug having one blade wider than the other). To reduce the risk of electric shock, this plug fits into the polarized power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact a qualified electrician to replace the obsolete outlet. Do not attempt to defeat the safety feature.
- NEVER connect the fan to any power sources other than a 120 volt alternating current polarized outlet.
- **Warning:** To reduce the risk of electric shock, DO NOT use this fan with any solid-state speed control and DO NOT insert a finger or any object into grill.

OPERATING INSTRUCTIONS

- 1 Carefully remove your fan from the box (save the carton for off-season storage).
- 2 Make sure that the switch is in the OFF position before plugging the fan into the outlet.
- 3 Place the fan on a firm, level surface.
- 4 Plug the power cord into any standard 120VAC~60Hz outlet.
- 5 Turn on the switch located on the back of the fan. Slide the switch to set the speed you want.

CLEANING/MAINTENANCE




- Before cleaning, be sure to turn off and unplug the fan.
- Carefully wipe the fan with a soft, damp cloth. Be very cautious near the motor.
- DO NOT immerse the fan in water and never allow water to drip into the motor housing.
- Never use gasoline, benzene, or thinner to clean the fan. This will damage the surface of the fan.
- After cleaning, be sure to completely dry the fan with a cloth or towel before using it.
- Before putting the fan in storage, clean it thoroughly, cover it with a vinyl bag, and store it in a cool and dry place. We recommend using the original (or appropriately sized) box.

FUSE REPLACEMENT

If your fan stops working, you may need to replace the fuse (not included).

Warning: Risk of fire. Do not replace the attachment plug. It contains a safety device (fuse) that should not be removed. Discard the product if the attachment plug is damaged.

- 1 Grasp the plug and remove it from the outlet. Do not unplug it by pulling on the cord.
- 2 Open the fuse cover by using your finger and thumb to slide the fuse access cover away from the cord.
- 3 Remove the fuse by carefully prying it out.
- 4 Replace fuse only with a 5 Amp, 125 Volt fuse.
- 5 Close the fuse access cover by sliding it toward the cord.

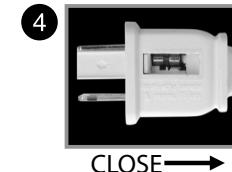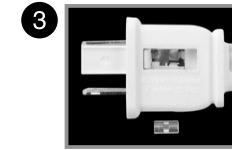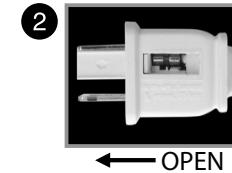

ONE-YEAR LIMITED WARRANTY

Visit www.insigniaproducts.com for details.

CONTACT INSIGNIA

For customer service, call 1-877-467-4289 (U.S. and Canada) or 01-800-926-3000 (Mexico)
www.insigniaproducts.com

SPECIFICATIONS

- **Dimensions (D x W x H):** 4.5 x 10 x 11.4 in. (11.5 x 25.5 x 29 cm)
- **Volts:** 120V, 60Hz
- **Speeds:** 2 speeds

INSIGNIA is a trademark of Best Buy and its affiliated companies.
Distributed by Best Buy Purchasing, LLC
7601 Penn Ave South, Richfield, MN 55423 U.S.A.
©2016 Best Buy. All rights reserved.
Made in China