

PACKAGE CONTENTS


- 6' micro USB charging cable
- Controller grip
- *Quick Setup Guide*

FEATURES

- Grips make your PS4 controllers more comfortable to hold
- Silicone material helps you grasp your controller securely
- 6' charging cable for more reach during gameplay

ATTACHING THE CONTROLLER GRIP

- Slide the handles of your PS4 controller into the controller grip, then carefully pull the controller grip around the top of the controller.

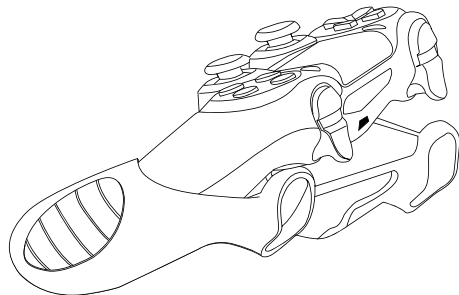


CHARGING YOUR PS4 CONTROLLER

- 1 Make sure that your PS4 is turned on or in rest mode.
- 2 Connect the USB charging cable from your PS4 console to your controller.

To check your controller's charge level:

- When your PS4 console is turned on, press and hold the **PS** button. The controller's battery level is displayed on the screen.
- When your PS4 console is in rest mode, the controller's light bar blinks orange while charging. When charging is complete, the light bar turns off.

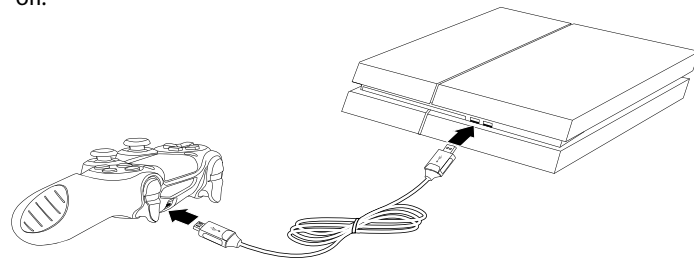

SPECIFICATIONS

Charging cable length	6 ft. (1.8 m)
Controller grip material	Silicone
Grip colors	Black

TROUBLESHOOTING

Controller won't charge

- Make sure that the charging cable is correctly and securely connected to your controller and PS4.
- Make sure that the charging cable is not damaged.
- Make sure that your PS4 is turned on or in resting mode.

ONE-YEAR LIMITED WARRANTY

For complete warranty, visit www.insigniaproducts.com.

CONTACT INSIGNIA

1-877-467-4289 (U.S. and Canada) or 01-800-926-3000 (Mexico)

www.insigniaproducts.com

Manufactured and distributed under license by Sony Computer Entertainment America LLC.
“PS,” “PlayStation” and “DUALSHOCK” are registered trademarks of Sony Computer Entertainment Inc.

“PS4” is a trademark of the same company.

INSIGNIA is a trademark of Best Buy and its affiliated companies.

Registered in some countries.

Distributed by Best Buy Purchasing, LLC

7601 Penn Ave South, Richfield, MN 55423 U.S.A.

©2015 Best Buy. All rights reserved.

Made in China