

Package contents


- PS4 Vertical Stand
- *Quick Setup Guide*

Features


- Holds the PS4 securely in place
- Vertical position saves space
- Creates easy access to ports
- Easy locking mechanism

Setting up your game console

- 1 Unplug all cables connected to the PS4 system.
- 2 Locate the front marking on the bottom of the stand and the front of the PS4 system.

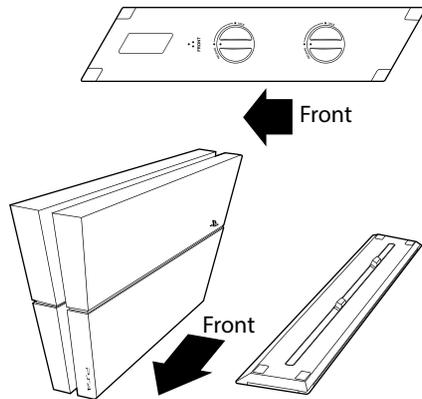


- 3 Locate the two circular dials on the bottom of the stand and make sure that they are in the RELEASE position.

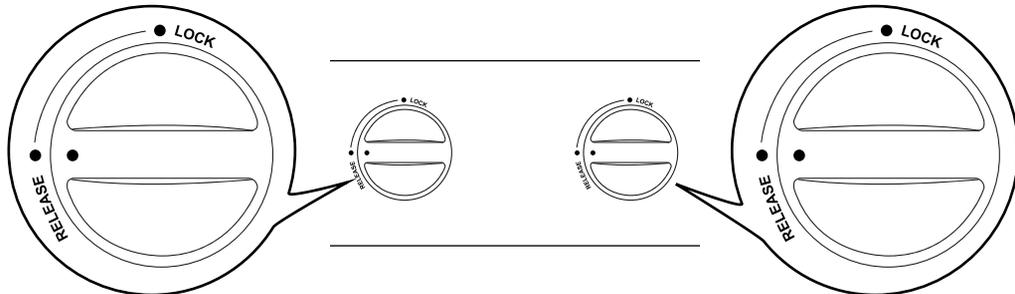


Before using your new product, please read these instructions to prevent any damage


- 4 Carefully set the PS4 system and stand on a table with the bottoms facing up, then attach the stand to the PS4 system. The front of the stand and PS4 system should be facing the same direction and the posts on the stand are inserted into the PS4 system.

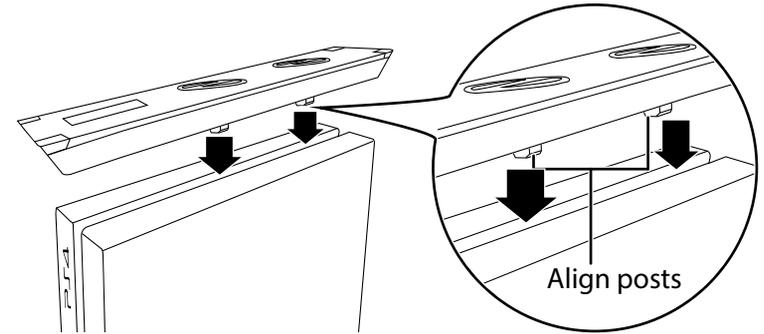



- 5 Make sure that the stand is correctly aligned and flush to the bottom of the PS4 system.

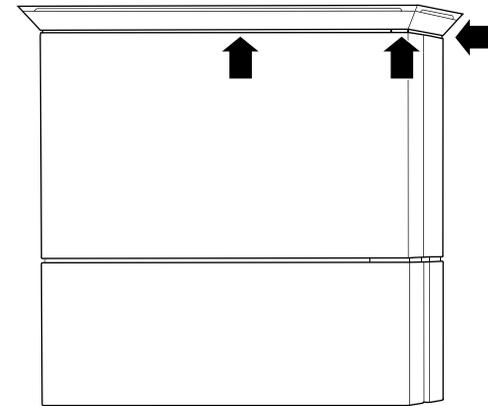

- 6** Locate the two circular dials on the bottom of the stand and turn them to the LOCK position.

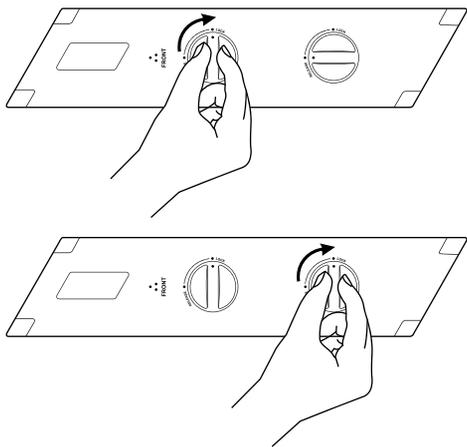

- 7** Place the PS4 system and stand upright and reattach all cables to the PS4 system (use two hands and caution when performing this function).

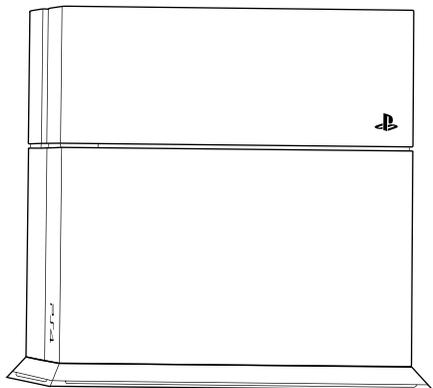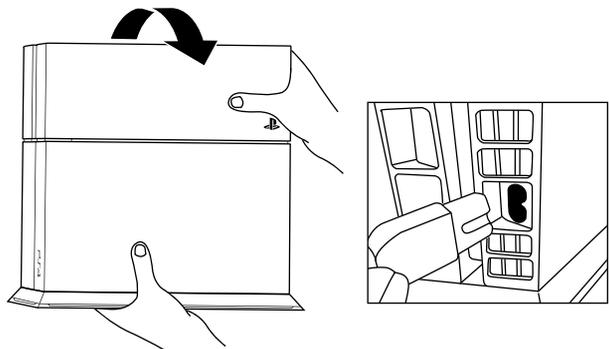

90-day limited warranty

Visit www.rocketfishproducts.com for details.

Contact Rocketfish:

For customer support, call 1-800-620-2790 (U.S. and Canada) or 01-800-926-3010 (Mexico)

www.rocketfishproducts.com

Manufactured and distributed under license by Sony Computer Entertainment America LLC. "PS" and "PlayStation" are registered trademarks of Sony Computer Entertainment Inc. "ROCKETFISH" is a trademark of the same company.

ROCKETFISH is a registered trademark of BBY Solutions, Inc. Registered in some countries. Distributed by Best Buy Purchasing, LLC, 7601 Penn Ave South, Richfield, MN 55423 U.S.A. ©2013 BBY Solutions, Inc. All Rights Reserved.