

QUICK SETUP GUIDE

64" Photo Video Tripod

NS-DTRP65

PACKAGE CONTENTS

- Tripod
- Quick-release plate
- Carrying case
- *Quick Setup Guide*

FEATURES


- Supports cameras with standard 1/4"-20 tripod mount up to 6.6 lbs. (3.0 kg)
- Aluminum legs and center column for minimal weight and maximum strength
- Collapses to a length of 25.2" (64 cm) for Easy storage and transportation



#	ITEM	DESCRIPTION
1	Quick-release plate	Mount your camera to this plate, then mount this plate to the tripod.
2	Leveling bubble	Allows for precise leveling of the tripod for perfect alignment.
3	Pan locking knob	Locks the tripod head so that it will not rotate horizontally.
4	Locking knob	Locks the center column in place.
5	Crank handle	Raises and lowers the center column.
6	Quick-release plate locking lever	Secures the quick-release plate to the tripod.
7	Vertical tilt lock knob	Adjust vertical tilt up to 90 degrees.
8	Horizontal tilt lock handle	Adjust the horizontal tilt.
9	Locking collar	Locks the tripod legs in place to provide maximum stability and strength.
10	Flip-lever leg locks	Lift to adjust leg height, then close to lock.
11	Universal ball rubber foot	Rubber feet with ball design for ground leveling provide a secure, non-marring footing for your tripod.

SETTING UP YOUR TRIPOD

- 1 Open the flip-lever leg locks on each leg. Extend the leg sections from the top down (thickest section first) to reach the height you want.
Note: Adjusting the thickest leg sections first gives your tripod more stability and support.
- 2 Close the flip-lever leg locks to lock each leg at the desired length.
Caution: Securing a leg lock incorrectly can cause a leg to retract unexpectedly and could result in damage to the tripod or attached camera.
- 3 Loosen the locking collar on the center column, then spread the legs to the preset angle. Set the tripod on a firm surface. Tighten the locking collar to stabilize your tripod.
- 4 Adjust the height of the center column by turning the locking knob counterclockwise, turning the crank handle until the center column is at the height you want, then tightening the knob. Turn the locking knob clockwise to lock the center column in place.

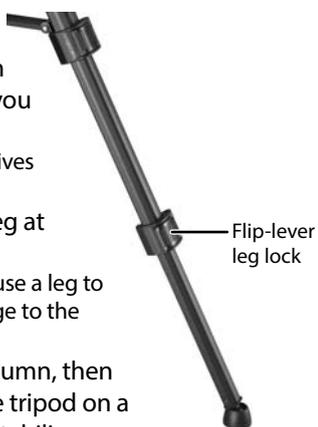

ATTACHING YOUR CAMERA

- 1 Hold the quick-release plate locking lever open, then lift the mounting plate to remove it.



- 2 Align the bottom of your camera or camcorder with the 1/4" mounting screw and indexing pin (if necessary) on the plate (the rounded side of the plate should face the camera lens), then secure your camera or camcorder to the plate with the screw. The screw should be tight. The indexing pin retracts if it is not required.
- 3 Open the quick-release plate locking lever and slide the mounting plate onto the tripod head. Push the quick-release plate locking lever to the left until it stops to secure the plate.

USING YOUR TRIPOD

- 1 Point one camera leg at your subject so you can stand between the other two legs.
- 2 To adjust vertical tilt, loosen the vertical tilt lock knob, rotate the plate up to 90 degrees, then tighten the knob.
- 3 To adjust horizontal tilt, turn the horizontal tilt lock handle counterclockwise, tilt the tripod head, then tighten the handle.
- 4 To pan, turn the pan locking knob counter-clockwise, pan the tripod head, then tighten to lock in place or continue panning.
Note: For maximum stability, always make sure that your camera lens is over a leg.

STORING YOUR TRIPOD

- 1 Remove your camera.
Note: You can leave the quick-release plate on your camera or reattach it to the tripod.
- 2 Lower the center column.
- 3 Open the flip-lever leg locks, then push on the legs to close the tripod.
- 4 Collapse the legs, then relock the flip-lever leg locks.
- 5 Store the tripod in the carrying case.

IMPORTANT SAFETY INSTRUCTIONS

- Make sure that all leg locks are correctly tightened and that the legs are fully opened before use.
- Do not carry or transport your tripod with camera equipment attached (for example, over your shoulder or cradled in your arms).
- Do not expose your tripod to excessive heat or cold, or use near any flame or fire.
- Do not oil or grease any part of the tripod.
- Do not use any solvents or thinners to clean your tripod. Use only a mild detergent and wipe dry with a soft, lint-free cloth.
- Do not exceed the load limit of this tripod.
- Do not bend or put excessive pressure on the tripod legs (for example, do not place heavy luggage on the tripod).

SPECIFICATIONS

Maximum height: 64.2 in. (163 cm)
Minimum height: 24.6 in. (62.5 cm)
Folded height: 25.2 in. (64 cm)
Weight: 3.3 lbs (1.48 kg)
Load capacity: 6.6 lbs (3 kg)

ONE-YEAR LIMITED WARRANTY

Visit www.insigniaproducts.com for details.

CONTACT INSIGNIA:

For customer service, call 877-467-4289 (U.S. and Canada) or 01-800-926-3000 (Mexico)
www.insigniaproducts.com

INSIGNIA is a trademark of Best Buy and its affiliated companies
Distributed by Best Buy Purchasing, LLC
7601 Penn Ave South, Richfield, MN 55423 U.S.A.
©2016 Best Buy. All rights reserved.
Made in China