

Things To Be Best With Us



40 INCH TOWER FAN

——— WTF-009D ———

PRODUCT USE GUIDE

INTRODUCTION

Thank you for choosing our fan.

This owner's manual will provide you with valuable information necessary for the proper care and maintenance of your new product.

Please take a few minutes to read it.

TABLE OF CONTENTS

SECTION 1

IMPORTANT INSTRUCTIONS PAGES 3-4

SECTION 2

TECHNICAL PARAMETERS PAGES 5

PRODUCT DIAGRAM PAGES 5

PACKAGE INCLUDES PAGES 6

SECTION 3

BASE ASSEMBLING PAGES 6

FILL THE WATER TANK PAGES 7

ATTENTION PAGES 7

SECTION 4

PANEL CONTROL PAGES 8

REMOTE CONTROL PAGES 9-10

SECTION 5

CLEANING AND MAINTENANCE PAGES 10-12

STORAGE & MAINTAINENCE GUIDELINES PAGES 13

IMPORTANT INSTRUCTIONS


1. To reduce the risk of fire or electrical shock, do not use this product with any solid-state speed control device. To reduce the risk of fire or electric shock and injury to anyone, do not use in a window.
2. Do not soak the main body of the motor in water or rinse under the tap tap.
3. USE this fan only as described in this manual. Other uses are not recommended as it may cause fire or electric shock.
4. To protect against electrical shock, do not place the fan in the window, plug, or cord in water. or spray with liquids.
5. Unplug the fan from the outlet when not in use, when moving the fan from one location to another, and before cleaning.
6. After the machine adds water, place or move and do not tilt or collide. Push it slowly so as to avoid water overflow. It is strictly prohibited to turn it over and place it on the inclined ground to prevent accidents.
7. This machine should not be placed at high temperatures and ultra-low temperatures. The water in the water tank in the hot and summer season is easy to deteriorate and produce odor. Please pay attention to updating the water.
8. When packaging and storage are required, it shall be run with normal air for a period of time so that the evaporator is fully dried to prevent the evaporator odor due to the wet surface.
9. This machine has a strong humidification effect, do not use it in a closed environment, if used in a closed environment, please turn off the cold air function.
10. Add water promptly when the water level is below the lowest water line.
11. Do not operate the fan in the presence of explosive or flammable fumes.
12. Avoid contact with moving fan parts.
13. To disconnect, grip the plug and pull it from the wall outlet. Never yank the cord. Always use it on a dry surface.

14. Do not operate any fan with a damaged cord or plug. discard the fan or return it to an authorized service facility for examination or repair.
15. Arrange the cord away from the traffic area so that it will not be tripped over.
16. The appliance is not to be used by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction.
17. Close supervision is necessary when any appliance is used by or near children. Children should not play with the appliance.
18. Do not leave the fan running unattended.
19. Note: Remove the power before removing the protective housing.

TECHNICAL PARAMETERS

Model No.	WTF-009D
Item Name	40 Inch Tower Fan
Rated Voltage	120V (60Hz)
Rated Power	80W
3 Mode Fan Speeds	Low / Medium / High
3 Breeze Modes	Normal / Natural / Sleep
Max Timer	12 Hours
Max Cap. Of Water	1.32 Gallon
Max Oscillation	50 Degree
Package Size	11.4×9.8×41.3 inch


PRODUCT DIAGRAM

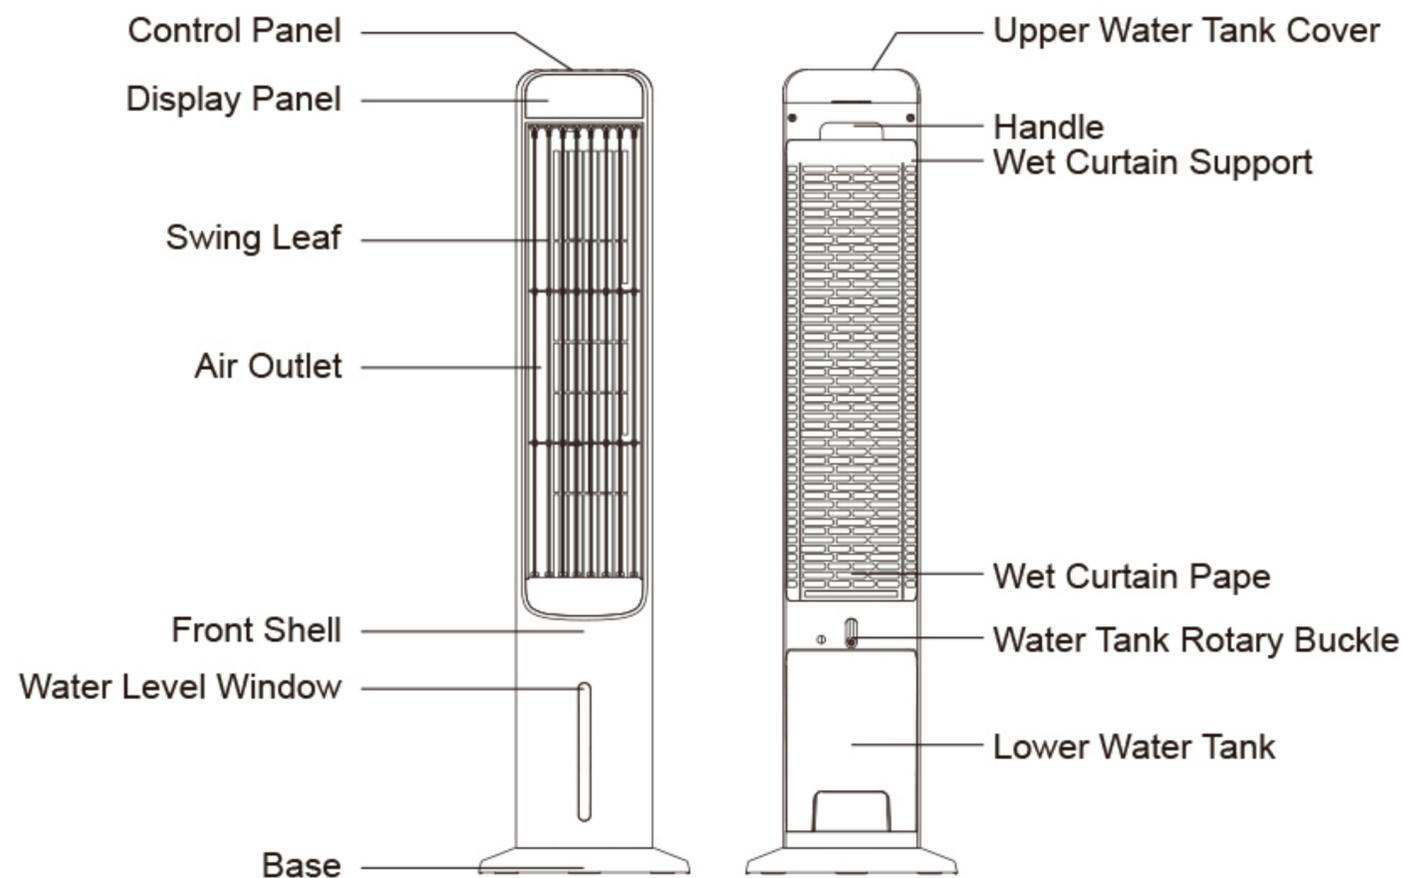


PACKAGE INCLUDE



1X Tower Fan

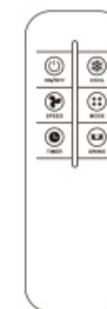

1X Remote Control

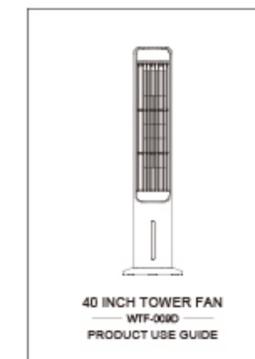

1X Owner's Manual



2X Large Ice Box




2X Small Ice Box




4X 4*18 Screws

BASE ASSEMBLING

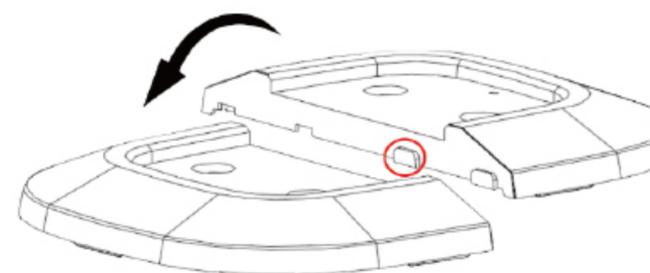

Step 1

Take out the left and right bases in the box, first cross-fasten this buckle, and then rotate downward to make the left and right bases as flat as each other.

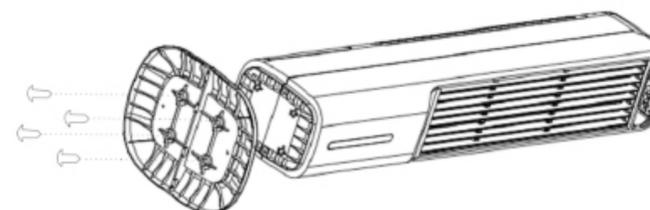


Step 2

Align the positioning holes in the base with the positioning columns above the fuselage, secure, and tighten the screws.

FILL THE WATER TANK

You can add water through the upper tank and the lower tank


- Open the upper water tank cover and add water (Figure).
- Pull out the lower water tank and add water(Figure).

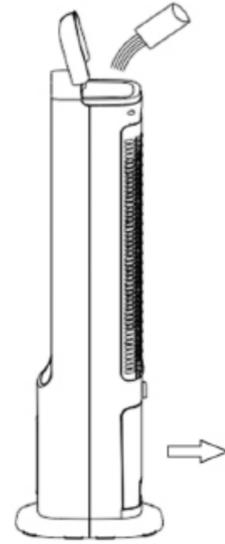


ATTENTION

Observe the water level through the water level window, control the water increase, and pay attention to the following points when adding water:

- For the health of you and your family, you must use clean tap water and unplug it before adding water.
- Do not splash water into the motor and surrounding parts to avoid leakage accidents.
- Make sure the water level in the water tank is between the minimum level (Indicated by " Min ") and maximum level (Indicated by " Max ").
- Please slow down the speed of adding water if you want to add water from the upper tank, otherwise it is easy to spill the water.

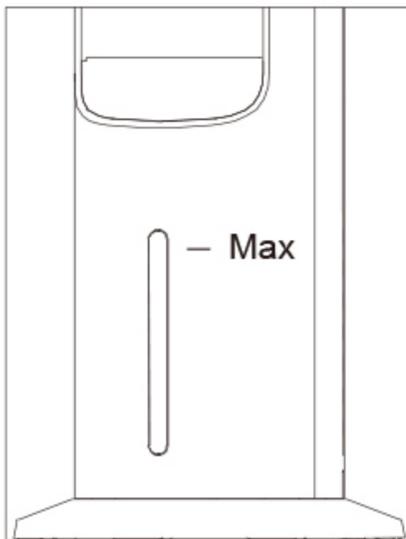


Do not exceed the highest water level

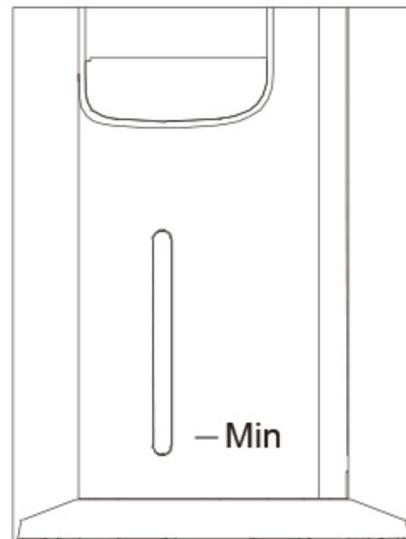

Do not fall below the lowest water level

PANEL CONTROL

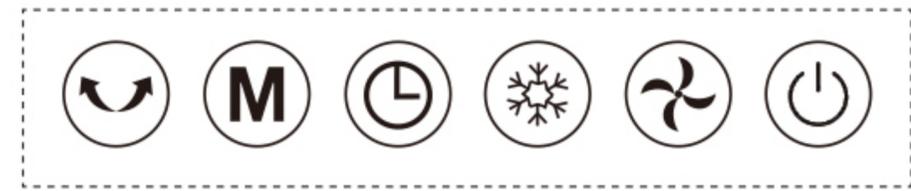



Place the unit on a firm-level surface and plug it into a socket. Power indicator light reminding this product is in standby mode. Turn on , the default setting is at low speed, Turn it again, and the product in standby.

-  On/off Button:
Press the on/off button to switch the fan on or off. After power on, the LED display will show the current room temperature.
-  Speed Button:
Press the button to change the speed between low-> medium-> high. The default speed is low speed.
-  Mode Button:
Press the button to change fan mode between normal mode - natural mode-> sleep mode. Sleep mode: lowers speed every 30 minutes and then stays at the lowest speed. Natural mode: the speed changes randomly.
-  Swing Button:
Press this button to control the left and right swings, and press it again to stop swinging.
-  Timer Button:
Press this button to set the timer, max 12 hours.
-  Cooling Button:
Press this button to open or close the cooling system.

REMOTE CONTROL

NOTE:

Before using the remote control, please install the battery. (Excluding battery)

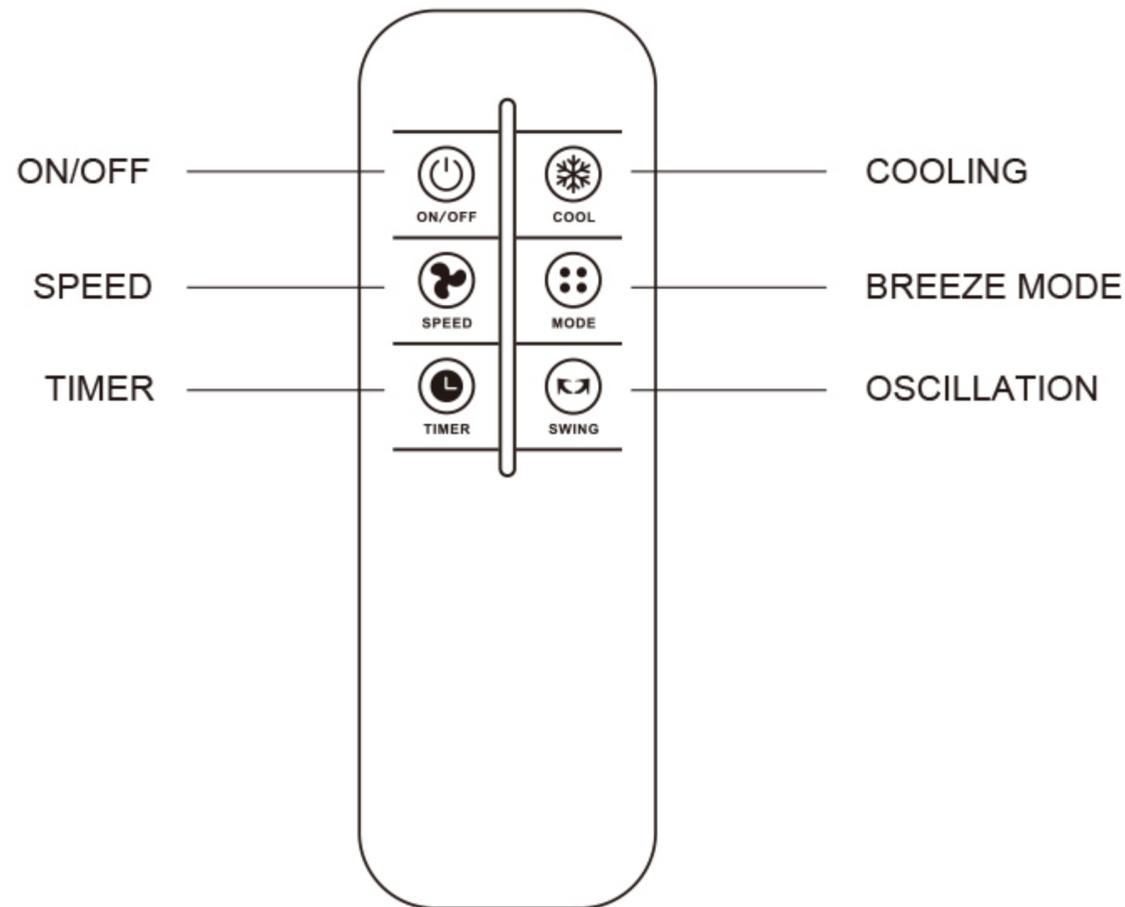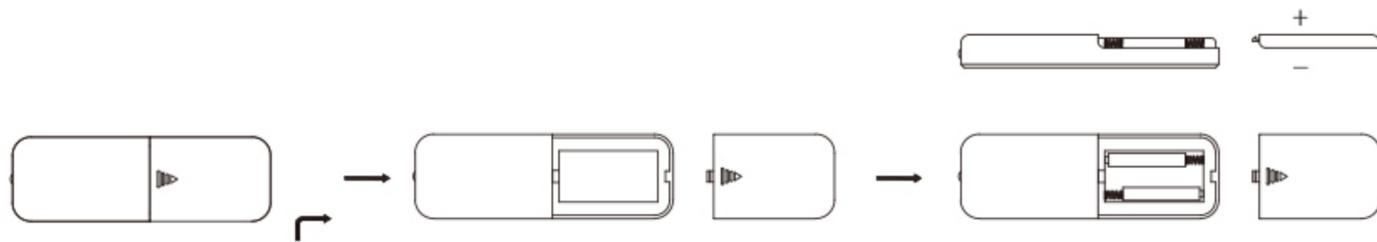

- The remote control must be pointed directly at the receiver on the fan when using. If the remote control is not pointed directly toward the receiver, the range will be decreased.
- The remote control may not operate in a room where heavy machinery is operating.
- Do not block the line of sight between the remote control and the receiver.
- Handle the remote control with care. Do not drop the remote control on the floor or bang it against hard objects.

CLEANING AND MAINTENANCE

Step 1

Rotate the water tank lock from vertical to horizontal, then pull the tank out.



Step 2

Rotate the two white parts and take out the water pump.



Step 3

Tilt up slightly while pulling the tank outward.

Use mild detergent and a soft cloth to clean the water tank and the water tank card slot.

After cleaning, dry the tank and product in a ventilated place away from direct sunlight.



Step 4

Put the pump and drain pipe in the tank.

Snap the water pump into the water tank as shown, and rotate the two white parts to lock the water pump.



Step 5

Push the tank back and rotate the water tank lock from horizontal to vertical.



STORAGE & MAINTENANCE GUIDELINES

1. Be sure to unplug the power cord from the outlet before cleaning.
2. Plastic parts should be cleaned with mild soap and a damp cloth or sponge. Do not submerge the unit in water to clean it. Thoroughly remove soap with clean water.
3. Be sure not to get water or other liquid inside the fan motor.
4. Dry all parts completely before reassembling and reconnecting to a power source.
5. Store the fan in a cool, dry location when not in use. To prevent dust and dirt build-up, use the original packaging to repack the unit.