



RECHARGEABLE WINE OPENER

MD-WORCPU7 / MD-WORCBK7 / MD-WORCGR8

Package contents

- Rechargeable wine opener
- Foil cutter
- Charging base
- Power adapter
- Quick Setup Guide

Features



QUICK SETUP GUIDE

Before using your new product, please read these instructions to prevent any damage.



IMPORTANT SAFEGUARDS

When using electrical appliances, always follow these safety precautions:

- 1 READ ALL INSTRUCTIONS BEFORE USE
- 2 Do not operate the wine opener with a damaged cord or plug, after the appliance malfunctions, or if it is dropped or damaged in any manner. Return the appliance to the nearest Authorized Service Center for examination, repair or electrical or mechanical adjustment.
- 3 To protect against the risk of electrical shock, do not put the wine opener in water or other liquid. This may cause personal injury and/or damage to the product.
- 4 To protect against fire, do not operate the wine opener in the presence of explosive and/or flammable fumes.
- 5 Do not use the wine opener for other than its intended use.
- 6 This product is intended for normal domestic household use only.
- 7 When using or recharging the wine opener, keep your workspace clean and free from potential hazards.
- 8 For indoor use only. Do not expose the wine opener or charging unit to rain or other extreme conditions.
- 9 Never force the wine opener onto a bottle or attempt to speed up the mechanism. The wine opener works best when it is operated at its intended speed.
- 10 Do not touch or adjust the wine opener's mechanism or the corkscrew spiral. Only hold the wine opener by its housing.
- 11 Do not attempt to open bottles if the switch is not working correctly.


- 12 Do not attempt to open the wine opener. It has no user-serviceable parts.
- 13 Never remove the plug from the socket by pulling the power cord.

ATTENTION: The corkscrew is sharp. Handle carefully. Keep hands and utensils out of the wine opener while operating to prevent the possibility of severe personal injury and/or damage to the product or property.

Charging your wine opener

Note: We recommend that you charge your wine opener for at least 16 hours before using it for the first time.

- 1 Plug one end of the adapter cord into the base of the recharging unit and the other end into a wall socket.
- 2 Place the wine opener into the recharging unit, making sure that it is firmly in position and is fully engaged with the recharging connectors.

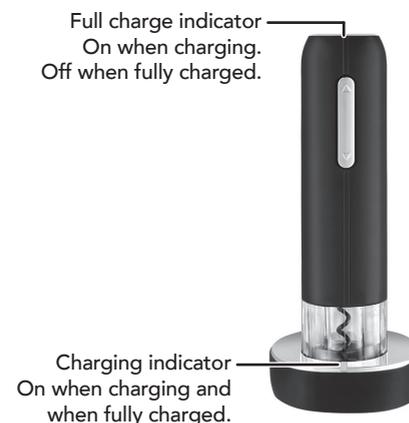

- It takes about 16 hours to charge your wine opener.
- When fully charged, it can open approximately 30 bottles.

Flat size (W×H): 400 × 160 mm.
Folded size (W×H): 100 × 80 mm.



Using the foil cutter

The foil cutter can be stored on the charging base. Before removing the cork you must remove any foil covering the cork.

- 1 Place the foil cutter around the neck of the wine bottle.
- 2 Keep one hand on the lower part of the bottle and turn the foil cutter in a twisting motion to cut the foil.
- 3 Remove the foil to expose the cork surface.

Using your wine opener

- 1 Make sure that your wine opener is charged.
- 2 Remove the foil around the top of the wine bottle using the foil cutter provided.
- 3 Place the wine opener on the top of the wine bottle. Make sure that it remains as upright as possible at all times. If held at an angle, the wine opener will not remove the cork properly.
- 4 Hold the wine opener firmly and press the Extract button. The corkscrew enters the cork, then gradually removes it from the bottle. When the wine opener stops, the cork has been fully removed from the bottle.
- 5 Lift the wine opener away from the bottle. To remove the cork, press the Release button. The corkscrew reverses direction, releasing the cork.





6 Place the wine opener on the charging base when you have finished using it.

Note: This wine opener may experience problems with a small percentage of plastic/synthetic corks and undersized corks. If you experience this, remove the cork manually.

Cleaning your wine opener

- Clean the exterior surface of the product by wiping it with a soft, damp cloth.
- Do not use any abrasive cleaners or solvents, as product damage will occur.
- Do not attempt to clean any inside surfaces of the wine bottle opener.
- We recommend that you always return your wine opener to the charging base so that it is fully charged and available to use at any time.
- Store the set on its base in a clean, dry place when it is not in use.



Troubleshooting

PROBLEM	SOLUTION
LED indicator does not work	<ul style="list-style-type: none"> • Make sure that the power adapter is connected properly. • Make sure that the wine opener is inserted properly into the charging base. • Make sure that if the electrical outlet is working.
Wine opener does not work	<ul style="list-style-type: none"> • Make sure that the wine opener is fully charged.

Specifications

Battery type	Ni-MH, rechargeable, AAA size
Voltage	3.6V (3 batteries of 1.2V) each appliance
Adapter input	100~240V AC 50/60 Hz
Adapter output	DC 6V 80mA
Charging time	Approximately 16 hours
Number of bottles per charge	30

Legal statement

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, maybe cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



One-year limited warranty

Contact Modal:

For customer support, call 1-800-499-3402 (U.S. and Canada)

www.bestbuy.com/modal

MODAL is a trademark of Best Buy and its affiliated companies. Distributed by Best Buy Purchasing, LLC 7601 Penn Ave South, Richfield, MN 55423 U.S.A. ©2017 Best Buy. All rights reserved.

Made in China

