
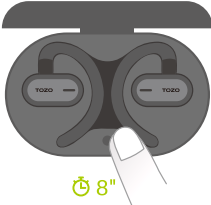


O2快速指引
尺寸：71mm*93mm

4

Reset

When the earphones are placed in the charging case, press and hold the charging case button for 8 seconds to clear the Bluetooth pairing records and restore the factory settings.

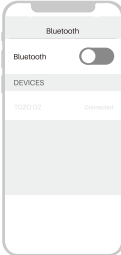

5

Charging

1. Earphone charging:
Simply place the earphones into the charging case to charge them.

2. Charging case charging:
It is recommended to use a 5V output charger to charge the charging case. Insert the Type-C charging cable into the charging port of the charging case to charge it.

«Don't put wet earbuds into the charging case, fully dry off the earbuds before charging.»



Thank you for purchasing the TOZO authentic product.
For more latest products, parts and accessories,
please visit: www.tozostore.com
For any assistance please contact Email: info@tozostore.com


FC

RoHS

CE

TOZO®

www.tozostore.com

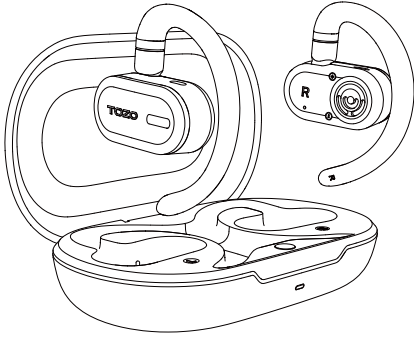

O2 OPEN EAR HEADPHONES

Quick Guide

1

Bluetooth pairing and wearing

Bluetooth pairing

1. Connection inside the charging case: Open the charging case and the blue and white signal lights will flash alternately. Search for the signal [TOZO O2] and connect to it.

2. Connection outside the charging case: Touch the left and right earphones for 3 seconds to turn them on, and then search for the signal [TOZO O2] to connect to it. You can also choose to connect only one earphone for use.

3. After a successful connection, the signal light on the earphones will go off.



Wearing

1. The earphone ear hook can rotate forward and backward, as well as left and right. The touch area is shown in the picture.

2. Adjust the curved part of the rotating earphone to adjust forward, backward, left, and right. Then wear it on the left and right ears respectively, and adjust the earphone's sound outlet to align with the ear canal, as shown in the picture.

2

Smart touch control

EN | JP | DE | FR | IT | ES | NL | SE

X1: Press once X2: Press twice X3: Press three times Hold: Press and hold for 2 seconds

X2

Previous song | 前の曲 | Vorheriges lied | Chanson précédente | Canzone precedente | Canción anterior | Vorig nummer | Föregående låt

X2

Next song | 次の曲 | Nächstes lied | Chanson prochaine | Canzone prossima | Canción siguiente | Volgende nummer | Nästa låt

Hold

Volume down | 音量を下げる | Lautstärke runter | Baisser le volume | Volume basso | Bajar volumen | Volume verminderen | Sänk volymen

Hold

Volume up | 音量を上げる | Lauter | Monter le son | Alza il volume | Sube el volumen | Volume omhoog | Höj volymen

X1

Play/Pause | 再生/一時停止 | Spielen/Pause | Jouer/Pause | Giocare a/Pausa | Tocar/Pausa | Toneelstuk/Pauze | Spela/Paus

X1

Answer | 答え | Antworten | Réponse | Rispondere | Responder | Antwoorden | Svar

Hold

Hang up | 電話を切る | Auflegen | Raccrocher | Appendere | Colgar | Ophangen | Lägga på

Hold

Reject | 拒絶 | Ablehnen | Refuser | Rifiutare | Rechazar | Afwijzen | Avvisa

X3

Activate the voice assistant | 音声アシスタントをアクティブにする | Aktivieren Sie den Sprachassistenten | Activer l'assistant vocal | Attiva l'assistente vocale | Activar el asistente de voz | Activer de stemassistent | Aktiviera röstassistenten

3

Power on/off



EN

Power on:
Open the cover of charging case; or press and hold 3 seconds.

Power off:
Place the earbuds back into the charging case; or press and hold 3 seconds.

DE

Ein:
Öffnen Sie die Abdeckung des Ladekoffers; oder 3 Sekunden gedrückt halten.

Ausschalten:
Legen Sie die Ohrhörer wieder in das Ladeetui; oder 3 Sekunden gedrückt halten.

FR

Allumer:
Ouvrez le couvercle du boîtier de charge; ou appuyez et maintenez 3 secondes.

Éteindre:
Remettez les écouteurs dans l'étui de chargement; ou appuyez et maintenez 3 secondes.

NL

Aanzetten:
Open het deksel van de oplaadcassette; of houd 3 seconden ingedrukt.

Uitschakelen:
Plaats de oordopjes terug in de oplaadcassette; of houd 3 seconden ingedrukt.

JP

電源オン:
充電ケースのカバーを開けます。またはを3秒間押し続けます。

電源を切る:
イヤフォンを充電ケースに戻します。または3秒間押し続けます。

IT

Accensione:
Aprire il coperchio della custodia di ricarica; oppure tenere premuto per 3 secondi.

Spegni:
Rimetti gli auricolari nella custodia di ricarica; oppure tenere premuto per 3 secondi.

ES

Encendido:
Abra la tapa del estuche de carga; o mantenga presionado durante 3 segundos.

Apagado:
Vuelva a colocar los auriculares en el estuche de carga; o mantenga presionado durante 3 segundos.

SE

Ström på:
Öppna locket på laddningsfodralet; eller tryck och håll ned 3 sekunder.

Stäng av:
Sätt tillbaka öronsnäckorna i laddningsfodralet; eller tryck och håll ned 3 sekunder.