


BOT300W



Gesture Controlled Robot

Instruction Manual for BOT300W-v2365-01

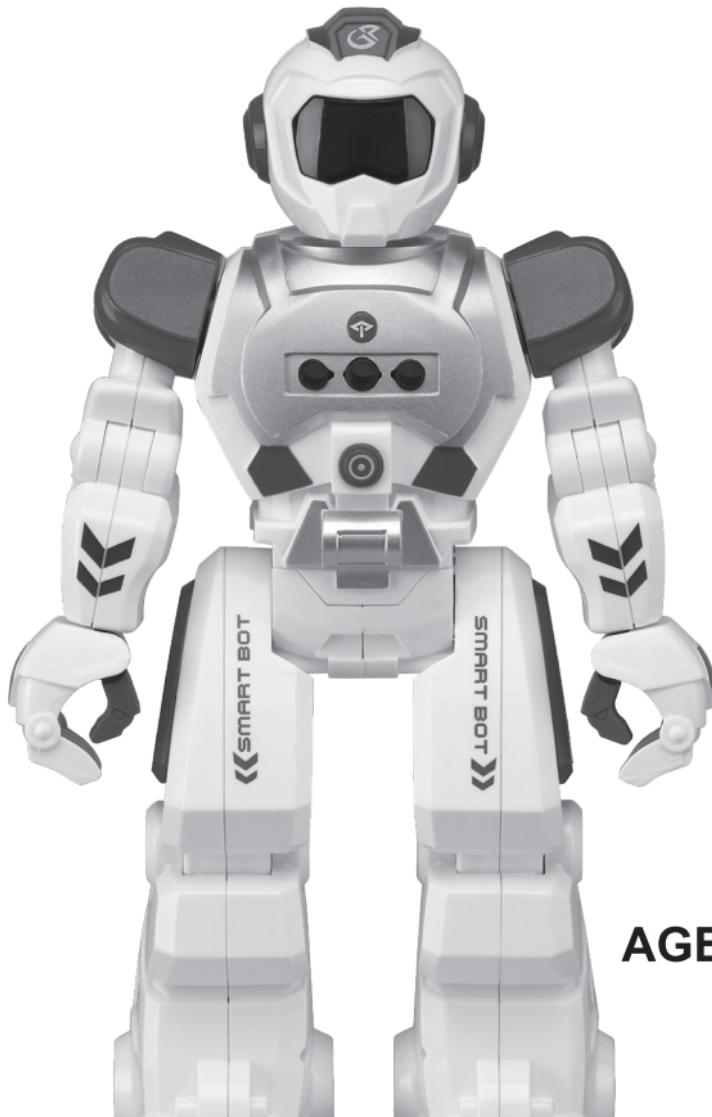

AGE 5+
CE

Important Safety Instructions

- Read these Instructions.
- Keep these Instructions.
- Heed all Warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with a dry cloth.
- Only use attachments/accessories specified by the manufacturer.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

Battery Warnings

- **WARNING: DO NOT INGEST BATTERY, CHEMICAL BURN HAZARD.** If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.
- Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children.
- **CAUTION: Danger of explosion if battery is incorrectly replaced.** Replace only with the same or equivalent type.
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
- Do not mix old and new batteries.
- Completely replace all old batteries with new ones.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc) batteries.
- Batteries should be recycled or disposed of as per state and local guidelines.

- Lithium batteries, like all rechargeable batteries, are recyclable and should be recycled or disposed of according to state and local guidelines. They should never be disposed of in normal household waste, and they should never be incinerated, as they might explode. Contact your local government for disposal or recycling practices in your area.
- Only use the included power supply/power charger or a UL/ETL certified power supply of the same power output specifications.

Additional Warnings and Precautions

- **WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.**
- **WARNING: Shock hazard - Do Not Open.**
- **WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain, moisture, dripping, or splashing.**
- **Objects filled with liquids, such as vases, shall not be placed on the apparatus.**



WARNING : This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov. **This product meets and complies with all Federal regulations.**

Package Contents



Robot




Remote



USB Charger

Robot

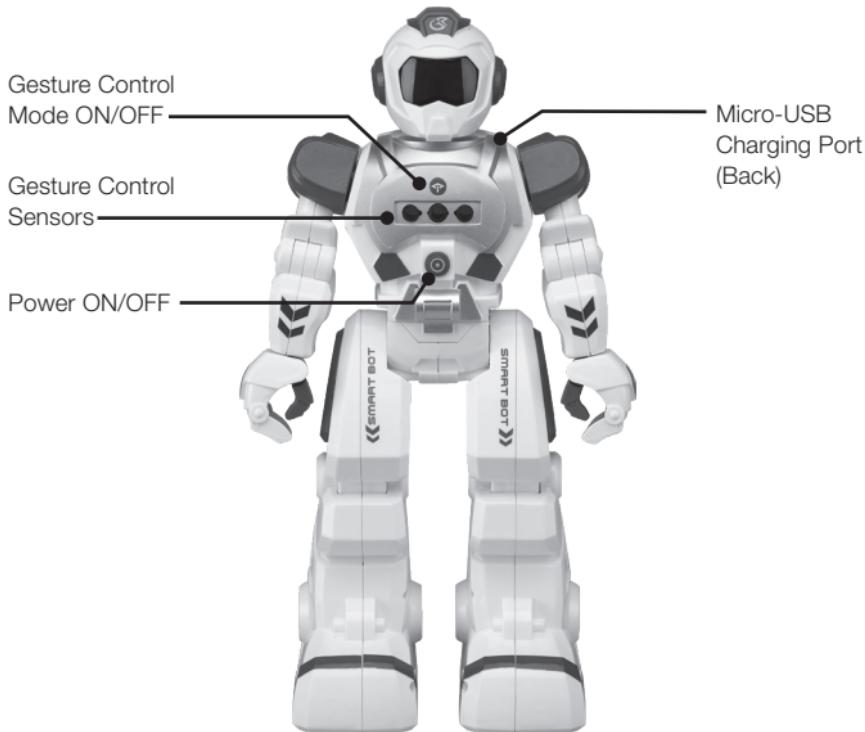

Remote

Glide Controls

- » Forward, back
- » Turn left, turn right



Walk Controls

- » Forward, back
- » Turn left, turn right

Remote Battery Installation

The remote comes with batteries pre-installed.

1. To replace batteries, use a Phillips screwdriver to open the battery compartment.
2. Insert 2x 1.5V AAA batteries. Be sure to insert the batteries according to the correct polarity marked in the battery compartment.
3. Close the battery compartment and retighten with the screwdriver.

Charging the Robot

The built-in rechargeable battery is located in the back of the robot.

1. To charge the robot, plug the Micro-USB plug into the port on the robot and a powered ON computer or USB power adapter (not included).
2. While charging, an indicator light in the charger will turn on, and turn off when charging is complete. The charging time is approximately 120 minutes. The play time is approximately 90 minutes.



Powering On the Robot

1. Press the Power button to turn the robot ON and OFF. After starting up, the robot's eyes will light up, and it will perform a quick routine of its abilities.



Dance Mode

1. Press the Dance button on the remote to have the robot play a song and perform a dance. The robot will dance until you press the Dance button again, or input another command from the remote.

Program Mode



1. Use the Program button to create a sequence of movements for the robot to follow. Up to 50 moves can be programmed.
2. Press and hold the Program button until the remote beeps, then press any of the movement buttons you want the robot to perform.
3. When finished, press the Program button again, and the robot will perform the program. **Note:** When the robot is powered OFF, the program will be cleared.

Gesture Control Mode


1. Use Gesture Control Mode to control the robot with a wave of your hand. Press the Gesture Control button to turn Gesture Control Mode ON or OFF.




Push your hand toward the robot, and it will move backward.

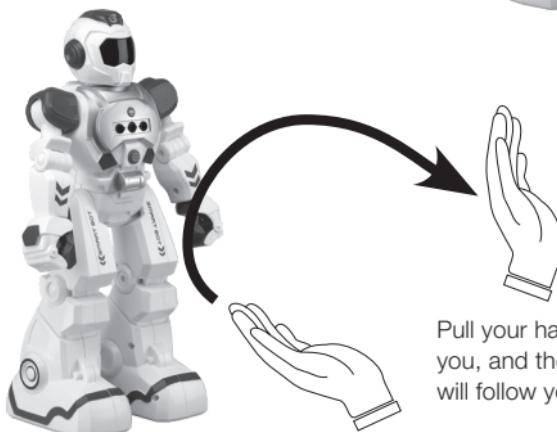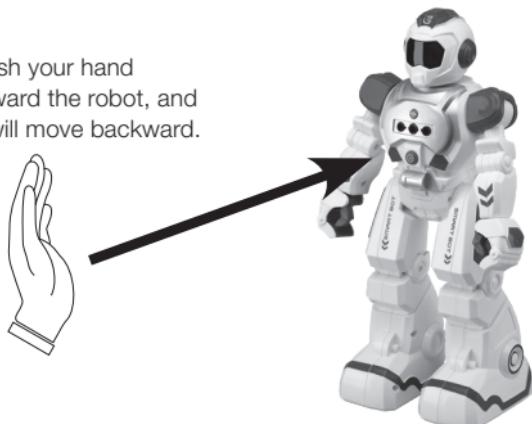

Pull your hand toward you, and the robot will follow your hand.

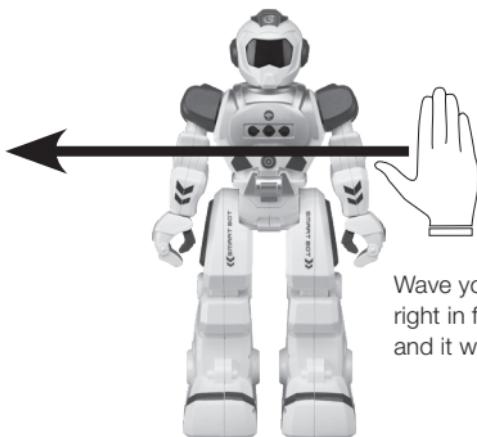

Wave your hand to the right in front of the robot, and it will turn right.

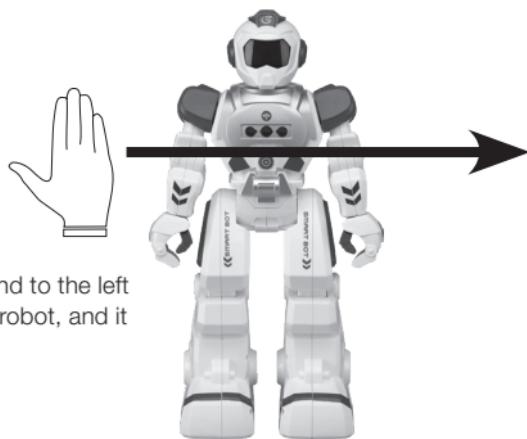

Wave your hand to the left in front of the robot, and it will turn left.

Contact Information

Website: **www.gpx.com**

Email Support: **prodinfo@dpiinc.com**

Email Parts: **partsinfo@dpiinc.com**

Phone Support: **1-888-999-4215**

Warranty

See included 30 Day Warranty for warranty information. Warranty and the most up-to-date version of this User's Guide can also be found at: **www.gpx.com**

International Support

To download this User's Guide in English, Spanish, and French, or to get answers to frequently asked questions, visit the support section at: **www.gpx.com**

Para descargar este Manual del Usuario en inglés, español y francés, o para obtener respuestas a preguntas frecuentes, visite la sección de apoyo en: **www.gpx.com**

Pour télécharger ce guide de l'utilisateur en anglais, espagnol ou français, ou pour obtenir des réponses à des questions fréquemment posées, consultez la rubrique d'assistance sur: **www.gpx.com**



*Protect for Today
Sustain for Tomorrow*

Copyright © 2019 Digital Products International (DPI, Inc.)

All other trademarks appearing herein are the property of their respective owners. Specifications are subject to change without notice.