


Congratulations on your purchase of this high-resolution color monitor. This color monitor represents the state of the art in monitor design, and is designed for reliable and trouble-free performance. Please read this guide thoroughly before installation.

Package contents

- 24" Widescreen LED monitor
- Power cable
- VGA cable
- Quick Setup Guide

FIND YOUR USER GUIDE ONLINE!


We are going green so a copy of your *User Guide* is not provided in the box but is available online. Go to www.insigniaproducts.com, then click **Support & Service**. Enter your model number in the box under **Manual, Firmware, Drivers & Product Information**, then click ▶.

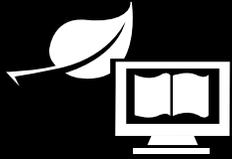


Before using your new product, please read these instructions to prevent any damage.

Features

Front view

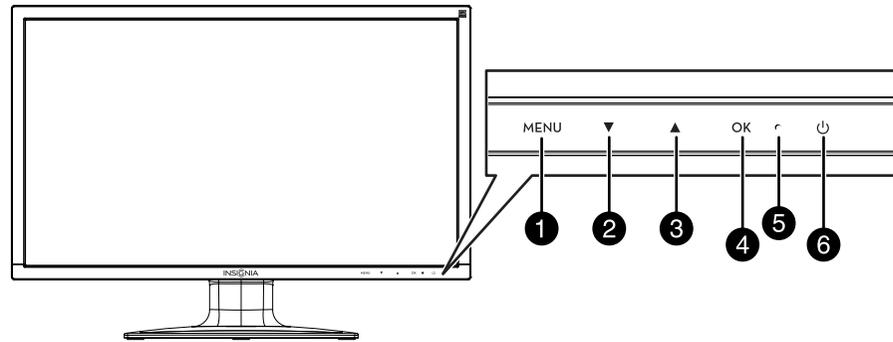


Rear view

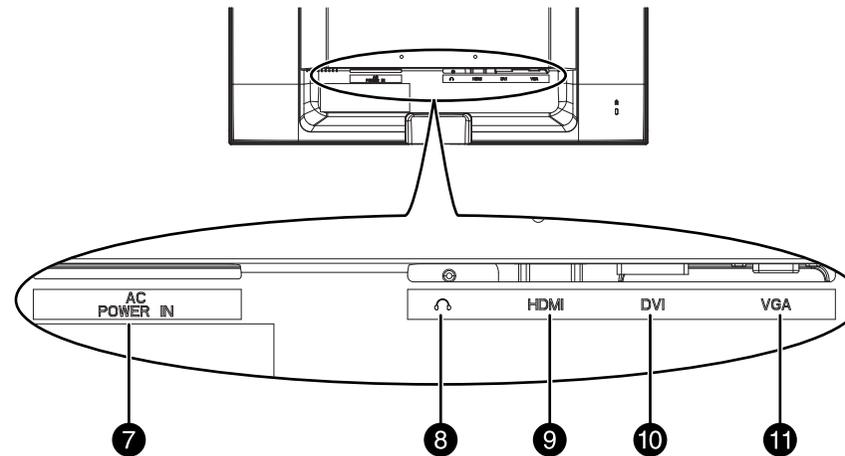

#	Component	Description
1	MENU	Press to open the on-screen display (OSD) menu and enter menu mode. Press again to exit the OSD and return to display mode.
2	▼	In menu mode, press to scroll down or decrease settings in the OSD menus. In normal operation mode, press to access the Color Vision Mode menu. In normal operation mode, when using a VGA connection, push and hold this button for three seconds to automatically adjust the image on the screen.
3	▲	In menu mode, press to scroll up or increase settings in the OSD menus. In normal operation mode, press to access the Audio Adjust menu. In normal operation mode, when using an HDMI connection, push and hold this button for three seconds to automatically mute or unmute the sound. Note: The Audio Adjust menu is only available when using an HDMI connection.
4	OK	In menu mode, press to confirm a selection or setting in the OSD menus. In normal operation, press the button to enter the input select menu. You can choose the input source from VGA, DVI, HDMI or Auto.
5	LED indicator	Turns blue when the monitor is on. After the monitor is turned off, the LED turns off.
6	Power On/Off	Press to turn the monitor on. Press again to turn the monitor off.
7	Power connector	Plug the AC power cord into this connector.
8	Headphone jack	Plug headphones (optional) into this jack.
9	HDMI jack	If your computer has an HDMI jack, connect an HDMI cable (not included) to your computer and this jack.
10	DVI jack	If your computer has a DVI jack, connect a DVI cable (not included) to your computer and this jack.
11	VGA jack	If your computer has a VGA jack, connect the VGA cable (included) to your computer and this jack.



Installing the stand base

- 1 Remove the monitor from the box and lay it face down on a table, with a soft cloth or towel beneath it to protect the screen.
- 2 Insert the base into the stand column until it clicks into place.

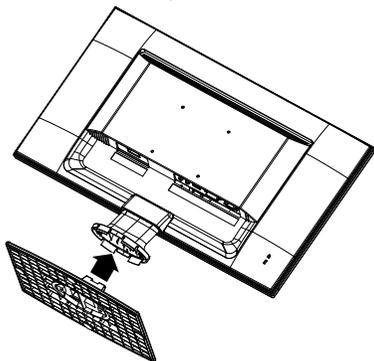

Removing the stand base and column for mounting to a wall

- 1 Lay the monitor face down on a table, with a soft cloth or towel beneath it to protect the screen.
- 2 Squeeze the sides of the column cover and pull to remove it.
- 3 Using a Philips screwdriver, remove the three screws that secure the column to the monitor.

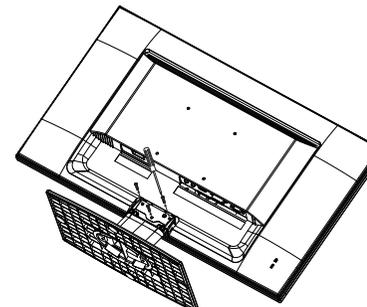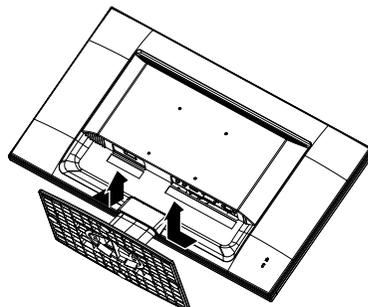

- 4 Wiggle the column loose from the monitor.
- 5 Follow the instructions that came with your mounting kit (not included) to mount your monitor on the wall.

Note: To mount your monitor, purchase a mounting kit that is compatible with a 100 × 100 mm VESA pattern and contains screws that are M4 × L10 mm.

Making connections

To connect your monitor:

- 1 Make sure that both the monitor and the computer are turned OFF.

Connect the VGA cable (B) to the computer, then to the monitor.


OR

Connect a DVI cable (C) from the DVI output of the computer to the DVI input of the monitor. DVI cable is not included.

OR

Connect an HDMI cable (D) from the HDMI output of the computer to the HDMI input of the monitor. An HDMI cable is not included.

Optional: You can also connect external speakers or headphones (E) to the headphone jack. The headphone jack is only enabled when receiving audio over HDMI. Please consult your hardware or OS documentation to ensure that HDMI audio is enabled. Headphones or speakers not included.

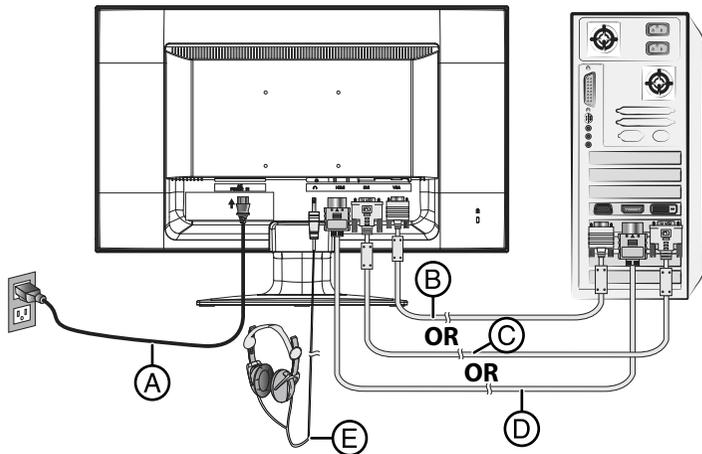

- 2 Connect the power cord (A) to the monitor, then to a properly grounded AC outlet.
 - 3 Turn on the computer, then the monitor.
 - 4 If you are using Windows, you may need to set the resolution and refresh rate. (**Example:** 1920 × 1080 @ 60 Hz)
 - **Windows 8 and Windows 7:**
 - 1 Go to your desktop.
 - 2 Right-click on your desktop, then click **Screen resolution**.
 - 3 Click the drop-down list next to **Resolution**, move the slider to the resolution you want.
 - 4 Click **Advanced Settings**. Click the **Monitor** tab, and then select a new refresh rate in the **Screen refresh rate** drop-down.
 - 5 Click **OK**, then click **Keep changes** to use the new resolution and refresh rate, or click **Revert** to go back to the previous settings.
 - Windows XP and Vista, see the included *User Guide*.
- OR
- If you are using a Mac you may need to set the resolution.
 - Open the Apple menu and select **System Preferences**.
 - Click **Displays**, then click **Display**.
 - Select the appropriate resolution from the **Resolutions** list.

Using the on-screen display (OSD)

To use the on-screen display (OSD) menus:

- 1 Press the **MENU** button to open the menus. The *Main Menu* opens.



- 2 Press **▼** or **▲** to select a menu item, then press **OK** to go to that sub-menu.
- 3 When the sub-menu opens, press **▼** or **▲** to go to the item you want to adjust, then press **OK** to select that item.
- 4 Press **▼** or **▲** to adjust the item you selected, then press **MENU** to exit the menu.

Menus and sub-menus:

- **Auto Image Adjust:** to auto adjust Horizontal Position, Vertical Position, Phase (Fine Tune) and Clock (H. Size) of the screen. Available in analog mode only (VGA cable connection).
- **Picture Adjust**
 - **Contrast**
 - **Brightness**
 - **Backlight**
- **Input Select**
- **Audio Adjust:** to adjust the audio functions.
 - **Volume:** to adjust the volume of headphone output.
 - **Mute:** to turn the Mute ON/OFF.
- **Color Adjust**
 - **Cool**
 - **Normal**
 - **Warm**
 - **User Color:** to manually adjust the color levels. Press **OK** to select the color to adjust.
- **Information:** to display information on the current input signal.
- **Manual Image Adjust**
 - **H./V. Position:** adjust the horizontal (H) and vertical (V) position of the picture on the monitor screen.
 - **H. Position**
 - **V. Position**
 - **Clock:** to tune the clock.
 - **Phase:** to fine tune the phase.
 - **Sharpness:** to adjust the clarity of image when running below the native resolution (1920 × 1080).
 - **Video Mode Adjust:** select **Full Screen** or **Aspect Ratio**.
 - **Color Vision Mode:** to select a preset display environment. You can select **Standard**, **Game**, **Cinema**, **Scenery**, **Text**, or **ECO**.
- **Setup Menu**
 - **Language Select**
 - **OSD Position:** adjust the horizontal (H) and vertical (V) position of the OSD menu on the screen.
 - **H. Position**
 - **V. Position**

- **OSD Time Out:** to automatically turn off the OSD after a preset period of time.

- **Memory Recall:** to reset all settings to factory default. Press **OK**. For more detail on menu choices, refer to the *User Guide*.

Troubleshooting

For troubleshooting information, see your *User Guide*.

Specifications

For specifications information, see your *User Guide*.

Legal notices

FCC Part 15

This device complies with Part 15 of the FCC Rules. Operation of this product is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply within the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced technician for help.

FCC warning

Changes or modifications not expressly approved by the party responsible for compliance with the FCC Rules could void the user's authority to operate this equipment.

One-year limited warranty

Visit www.insigniaproducts.com for details.

Contact Insignia:

For customer service, call 1-877-467-4289 (U.S. and Canada) or 01-800-926-3000 (Mexico)

www.insigniaproducts.com

INSIGNIA is a registered trademark of BBY Solutions, Inc. Registered in some countries. Distributed by Best Buy Purchasing, LLC, 7601 Penn Ave South, Richfield, MN 55423 U.S.A. ©2013 BBY Solutions, Inc. All Rights Reserved.