
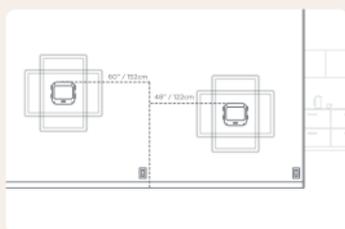


Setup Instructions

Skylight Calendar can be installed in both landscape orientation and portrait orientation. For video instructions, visit [youtube.com/c/SkylightFamily](https://www.youtube.com/c/SkylightFamily)









Choose a Good Spot for Your Calendar

1. Choose a spot for your mount that is near your outlet. The included power cord is 5 feet (152cm) long.
2. For families with older children or adults, the top of the mount should be positioned at 60" (152cm). For families with younger children, we recommend 48" (122cm).

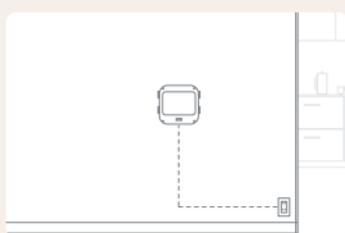

Prepare

1. Tape the mounting guide to your wall where you want the display mounted, in your preferred orientation. Use the installation guide to align with the center of the sheet.
2. Drill through the guide at the **Hole 1** marker using a 5/16" drill bit then remove the guide from the wall.
3. Insert the wall anchor in the hole you made then attach the mounting bracket with an included screw in **Hole 1**.
4. Adjust alignment with the built-in level and use a pencil to mark the remaining 3 holes.
5. Drill holes where the remaining 3 holes should go.
6. Insert the remaining 3 wall anchors in **Holes 2-4**.
7. Install the remaining 3 screws in **Holes 2-4**.
8. Your bracket is now successfully installed.

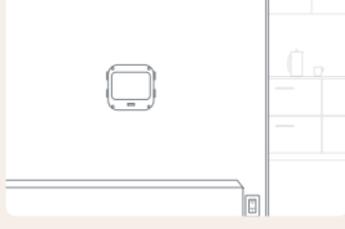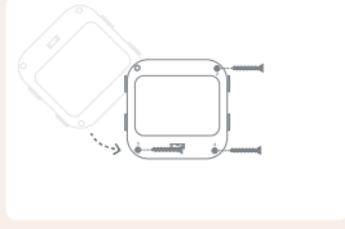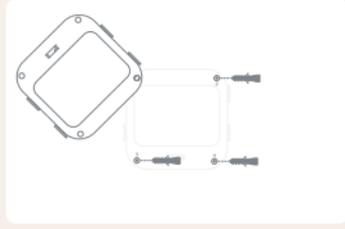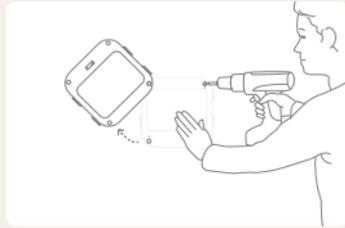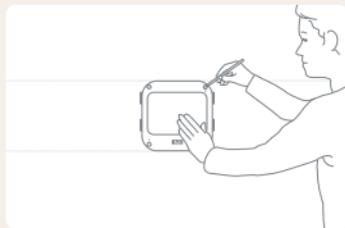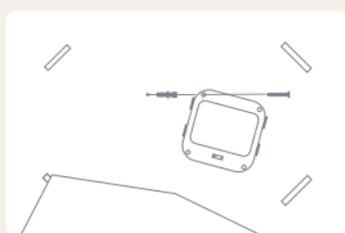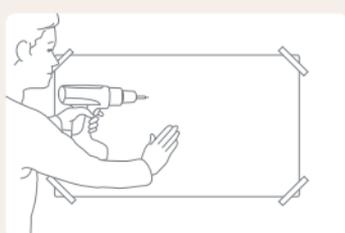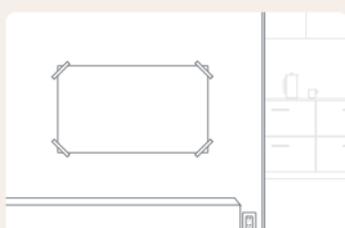

Mount

1. Connect the power cable in the back of the device (wind any extra length around cable holder on back of display if needed).
2. Hang back of display over mounting bracket and slide in for safe connection.
3. Plug in power adapter to outlet.
4. Your Calendar Max is now installed.

