


INSIGNIA™

QUICK SETUP GUIDE

Portable Folding Projection Screen

NS-SCR100FAB21

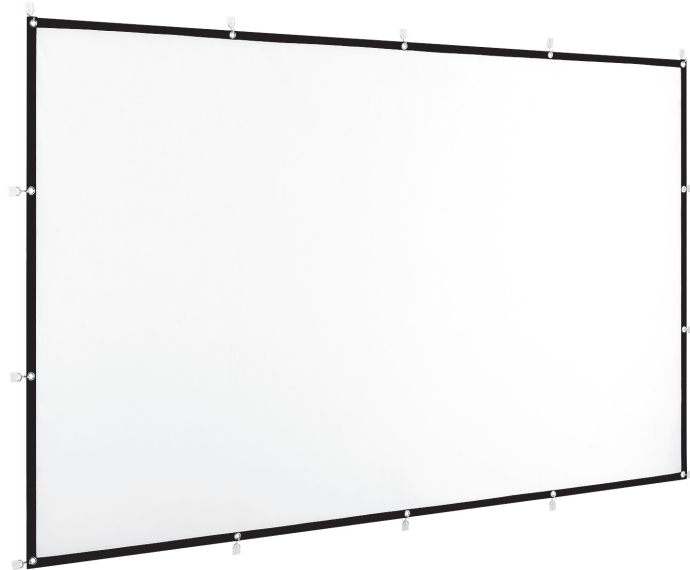

PACKAGE CONTENTS

- Projection screen
- Reusable storage bag
- Ropes (2)
- Adhesive hooks (18)
- *Quick Setup Guide*


FEATURES

- 100 in. (254 cm) front-projection screen with a 16:9 aspect ratio gives you a larger-than-life theatrical experience
- Convenient, foldable design can be easily installed and taken down in minutes
- Tear-resistant eyelets provide numerous mounting opportunities
- Wrinkle-resistant, polyester material grants worry-free use when unfolding and mounting
- Included adhesive hooks and two 16.4 ft. (5 m) ropes provide flexible placement options
- Lightweight, compact design with included storage bag allows for easy portability
- Wide-range uses for the office, home theater, outdoors, and more

INSTALLING WITH HOOKS, NAILS, OR SCREWS


Note: You may need two people to mount your screen.

- 1** Place your screen against the wall where you want to install it. Make sure that the fabric is flat and has as few wrinkles as possible.
- 2** Mark the locations of each of the 14 eyelets on the wall. Don't move or slide the fabric while you're marking.

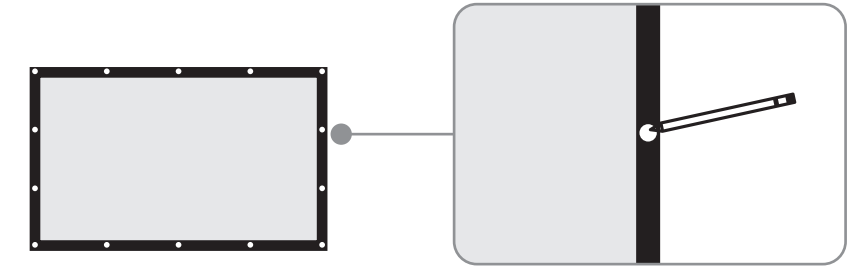


- 3** With the hooks pointing toward the center of the mounting surface, stick a hook at each marked eyelet position.

Note: For surfaces or environments where the provided adhesive hooks will not securely mount your projection screen, you may need to use screws or nails (not provided) instead.

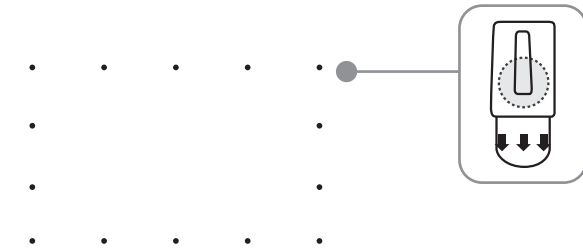


- 4** Mount your screen by hanging the eyelets on the hooks (or screws/nails).

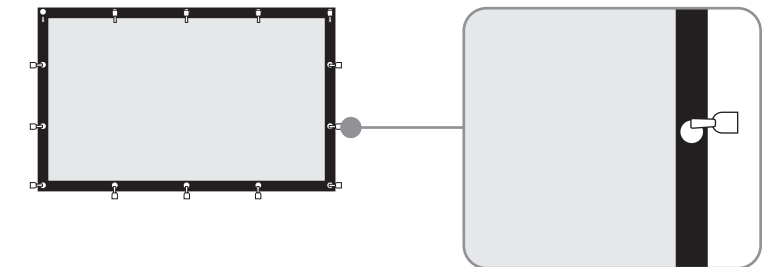


INSTALLING WITH ROPES


- 1 Place your screen flat on the ground, then thread one rope through the eyelets on the top of the fabric and one through the eyelets on the bottom of your screen.

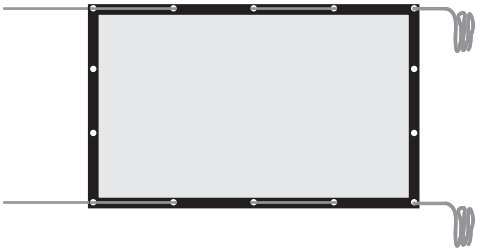

- 2 Pull the ropes tight to remove wrinkles, then make a knot at the edge eyelets to secure the rope in place.

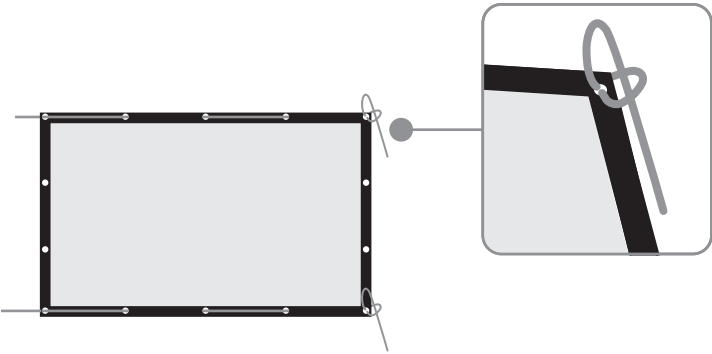

- 3 Place your screen flat at the mounting position, then tie your screen to fixed objects with the four rope ends.

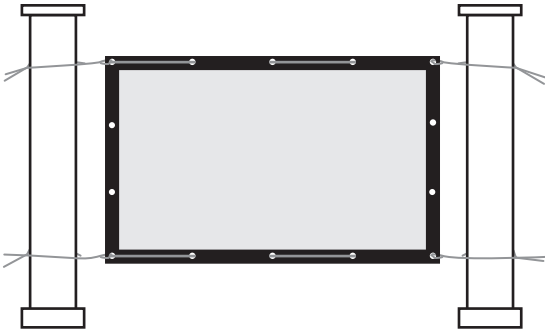

USING YOUR PROJECTION SCREEN

Screen is intended for indoor use, but can be used outdoors in good weather. (Avoid using in rain, wind, or extreme heat or cold.) The screen should only be used outdoors when actively viewing content and is not intended to be installed permanently.

Note: The projector can be pointed at either side of the screen.

STORING YOUR PROJECTION SCREEN

- Remove from mounting location, fold up, then store in the storage bag.
- Never put the screen away if it is wet. Let it dry first.

CLEANING AND MAINTAINING YOUR PROJECTION SCREEN

- Wipe your screen with a dry or damp cloth. Use only water or a neutral, inflammable, nontoxic cleaning, and sanitizing solution.
- If your screen gets wet, move it to a dry location and let it air dry.
- Do not put in a washing machine.

SPECIFICATIONS

- **Dimensions (HxW):** 51 × 89 in. (129.5 × 226.1 cm)
- **Border size:** 1 in. (25 mm)
- **Viewing area (diagonal):** 100 in. (254 cm)
- **Aspect ratio:** 16:9
- **Weight:** 1 lb. (470 g)

SAFETY

WARNING: To avoid danger of suffocation, keep the screen and all accessories (ropes, hooks, bag, and screen) away from babies and children. Do not use this bag in cribs, beds, strollers, or playpens. This bag is not a toy.

WARNING: This is not a toy! This product contains small parts which could cause choking if swallowed.

ONE-YEAR LIMITED WARRANTY

Visit www.insigniaproducts.com for details.

CONTACT INSIGNIA

For customer support, call **1-877-467-4289** (U.S. and Canada) www.insigniaproducts.com