

Flat size (W×H): 210 × 100 mm.

Final folded size: 70 × 100 mm.



 
QUICK SETUP GUIDE

Play & Charge Kit for Xbox One®

RF-XB1CHRGPKS

PACKAGE CONTENTS


- Rechargeable battery pack
- USB charge cable (10 feet)
- Quick Setup Guide




Before using your new product, please read these instructions to prevent any damage.

SETTING UP YOUR PLAY AND CHARGE KIT

- 1 Open the battery cover and insert the rechargeable battery pack into the battery compartment as shown below. The contacts should be facing left and the diagonal stripes should be facing outward. Replace the battery cover.

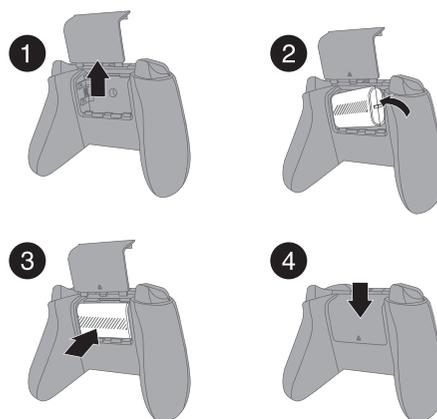


- 2 Plug the USB Charge Cable (Micro USB plug) into the Xbox® One controller.

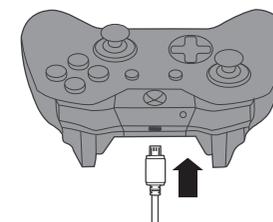

- 3 Plug the USB Charge Cable (USB plug) into one of the open USB ports on the console.

Note: You can also charge your battery by connecting the controller and charge cable to any USB power source.

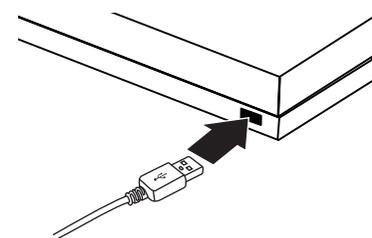

Front

SPECIFICATIONS

Cable length	9 ft
Battery capacity	1200mAh
Battery type	Ni-MH LSD battery
External dimensions (W×H×D)	Approx. 1.96 × 1.18 × .59 in. (5 × 3 × 1.5 cm)
Operating temperature	32°F~104°F (0°C~40°C)

SAFETY INFORMATION/CAUTION

Incorrect battery use may result in battery leakage, overheating, or explosion.

When using batteries, make sure that you follow these instructions:

- Keep batteries out of the reach of children.
- Do not heat, open, puncture, mutilate, or dispose of batteries in fire.
- If a battery leaks, remove the battery, taking care to keep the leaked fluid from touching your skin or clothes. If fluid from the battery comes into contact with skin or clothes, flush skin with water or remove the clothing immediately. Before inserting a new battery, thoroughly clean the controller with a damp paper towel.
- Do not allow metal objects to touch the battery terminals, because they can become hot and cause burns. For example, do not carry the battery in a pocket with keys or coins.
- Remove the battery when the product will not be used for an extended period of time.

TROUBLESHOOTING

The rechargeable battery pack doesn't charge?

- Confirm the battery pack is properly installed on the Xbox One controller.
- Please only use the included rechargeable battery pack or replacement rechargeable battery pack (Model: RF-XB1SRBP - sold separately), other regular rechargeable batteries don't recharge in the controller.
- Confirm the controller is connected to a powered USB port, and the charge cable is attached securely at both ends, if charging via the USB port from Xbox One console, please make sure turn the power ON before charging.
- The Play & Charge Kit uses a standard USB to micro-USB cable, You can use any standard USB to micro-USB cable to test whether the cable is the problem.

LEGAL NOTICES

FCC Information

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

ICES-003 Statement

This Class B digital apparatus complies with Canadian ICES-3(B) / NMB-3(B) standard.

ONE-YEAR LIMITED WARRANTY

Visit www.rocketfishproducts.com for details.

CONTACT ROCKETFISH:

For customer service, call 1-800-620-2790 (U.S.)
www.rocketfishproducts.com

Microsoft and Xbox One are registered trademarks of the Microsoft group of companies.

ROCKETFISH is a trademark of Best Buy and its affiliated companies. Registered in some countries.

Distributed by Best Buy Purchasing, LLC, 7601 Penn Ave South, Richfield, MN 55423 U.S.A.,

©2020 Best Buy. All rights reserved.

Made in China

Back