


Waterpik™ Water Flosser WF-23 Series

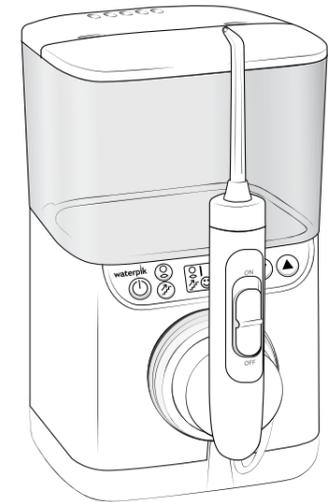

SCAN TO GET STARTED!

We have many helpful tools to provide you with the best possible experience. Scan me to get started or visit waterpik.com/promax

IMPORTANT SAFEGUARDS

READ ALL INSTRUCTIONS BEFORE USING.

- This product is for household use.

When using electrical products, especially when children are present, basic safety precautions should always be followed, including the following:

DANGER:

To reduce the risk of electrocution:

- Always unplug product after using.
- Do not use while bathing.
- Do not place or store product where it can fall or be pulled into a tub or sink.
- Do not place in or drop the product or external power supply into water or other liquid.
- Do not reach for a product that has fallen into water. Unplug immediately.
- Do not handle the external power supply with wet hands.
- Check the supply cord and external power supply for damage before the first use and during the life of the product.

WARNING:

To reduce the risk of burns, electrocution, fire, or injury to persons:

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Use this product only for its intended use as described in this instructions for use or as recommended by your dental professional.
- Never operate this product if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into any liquid. Contact Water Pik, Inc. at 1-800-525-2774 or visit www.waterpik.com.
- Do not plug this device into a voltage system that is different from the voltage system specified on the device or external power supply.
- Keep electrical cord away from heated surfaces.
- When unplugging the external power supply, be sure to pull the power supply itself. Do not pull the cord to unplug.
- Never drop or insert any object into any hose or opening.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Remove water flosser reservoir to fill. Fill reservoir with warm water or other dental professional recommended solutions only.

- Only use tips and accessories recommended by Water Pik, Inc. and as identified in this instruction manual.
- The supply cord and external power supply cannot be replaced. If the cord or external power supply are damaged, the appliance must be scrapped.
- Do not use water insoluble concentrated essential oils in this product. Use of these can reduce product performance and will shorten the life of the product.
- Do not direct water from the water flosser under the tongue, into the ear, nose or other delicate areas. This product is capable of producing pressures that may cause serious damage in these areas.
- Do not direct water into the nose or ear. The potentially deadly amoeba, *Naegleria fowleri*, may be present in some tap water or unchlorinated well water and may be fatal if directed into these areas.
- If your physician or cardiologist has advised you to receive antibiotic premedication before dental procedures, you should consult your dentist and/or medical professional before using the water flosser.
- Remove any oral jewelry prior to use of this product.
- Do not use if you have an open wound on your tongue or in your mouth.
- Do not use this product for more than five minutes in each two-hour period.
- If the Pik Pocket™ tip (not included in all models) separates from the shaft for any reason, discard tip and shaft and replace with new Pik Pocket™ tip.

SAVE THESE INSTRUCTIONS

INTENDED USE

Waterpik™ water flossers with PRECISIONPULSE TECHNOLOGY are proven to deliver an effective combination of water pressure and pulsations to remove plaque bacteria that can cause gingivitis, cavities, and bad breath.

Symbols Glossary (Not all symbols apply to all products)	
Explanation of symbols used on Water Pik, Inc. product labels and packaging. Applicable symbols for a specific product are found on that product's labels and packaging.	
Symbol	Definition
	Refer to instruction manual
	Manufacturer
IPX7 or IPX4	Ingress Protection Code
	IEC Class II Equipment
	Detachable Power Supply
	Direct Current (DC) Voltage
	Alternating Current (AC) Voltage
	Do not immerse this device in any liquid.
	Do not use this device in a shower, bathtub and do not immerse in any liquid.
	Product contains a lithium ion battery
	CE marking of conformity
	Regulatory Compliance Mark
	Separate collection for waste electrical and electronic equipment.
	Contains a recyclable Li-ion battery
	Contains a recyclable Ni-MH battery

Limited 3 Year Warranty

Waterpik™ water flossers have no consumer-serviceable electrical items and do not require routine service maintenance. For all your service needs go to www.waterpik.com. You may also call our toll-free customer service number at 1-800-525-2774. Refer to the serial and model numbers in all correspondence. These numbers are located on the bottom of your unit. Still have questions? Go to www.waterpik.com. For questions or problems please call the customer service centre before returning the product. Please do not send your unit to the Water Pik, Inc. address as this can cause lengthy delays. Refer to the serial and model numbers in all correspondence. These numbers are on the bottom of the unit. Water Pik, Inc. warrants to the original consumer of this new product that it is free from defects in materials and workmanship for 3 years from the date of purchase. **Consumer will be required to submit the original purchase receipt as proof of purchase date and if requested, the entire product, to support a warranty claim.** Water Pik, Inc. will replace the product provided the product has not been abused, misused, altered or damaged after purchase, was used according to instructions, and was used only with accessories or consumable parts approved by Water Pik, Inc. This limited warranty excludes accessories or consumable parts such as tips, batteries, etc.

WATER PIK, INC. DISCLAIMS ALL OTHER EXPRESS OR IMPLIED WARRANTIES TO THE EXTENT PERMITTED BY LAW INCLUDING, BUT NOT LIMITED TO, ALL WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. ALL IMPLIED WARRANTIES ARE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY. SOME STATES OR PROVINCES MAY NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE MAY NOT APPLY TO YOU.

Limitation of Liability

This limited warranty is your sole remedy against Water Pik, Inc. and it shall not be liable for any damages, whether direct, indirect, incidental, special, consequential, exemplary or otherwise, including but not limited to property damage, arising out of any theory of recovery, including statutory, contract or tort.

Arbitration

BINDING ARBITRATION AND WAIVER OF RIGHT TO ASSERT MATTERS IN COURT AND RIGHT TO JURY TRIAL

By purchasing, installing, or using this product you agree that any controversy or claim arising out of or relating to your purchase, use, modification, installation, or removal of this product shall be settled by binding arbitration. The arbitrator's decision will be final and binding. Judgment on the award rendered by the arbitrator may be entered in any court having jurisdiction over the matter. Further, you agree that you will not have the right to litigate any claim arising out of or in relation to your purchase, use, modification, installation, or removal of this product in any court or to have a jury trial on that claim. Arbitration of any matters shall be administered by the American Arbitration Association and conducted by one arbitrator in accordance with the consumer arbitration rules of the American Arbitration Association in effect at the time of filing of the demand. The venue for all such arbitrations shall be Colorado and any such arbitration shall be subject to the Federal Arbitration Act and Colorado law.

WAIVER OF RIGHT TO PARTICIPATE IN CLASS ACTIONS OR PURSUE CLAIMS IN A REPRESENTATIVE CAPACITY

Further, by purchasing, installing, or using this product you agree that arbitration must be on an individual basis. This means neither you, nor we, may join or consolidate claims in arbitration by or against other purchasers or users of Water Pik, Inc. products or the general public. Additionally, you may not litigate in court or arbitrate any claims as a representative or member of a class or in a purported representative capacity on behalf of the general public, other purchasers or users of this product, other persons or entities similarly situated, or in a private attorney general capacity.

FCC Statement (USA)

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by Water Pik, Inc. could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Service Maintenance

Waterpik™ water flossers and toothbrushes have no consumer serviceable electrical items and do not require routine service maintenance. For all accessories go to www.waterpik.com. You may also call our toll-free customer service number at 1-800-525-2774 (USA). Refer to the serial and model numbers in all correspondence. These numbers are located on the bottom of your unit.

Still have questions? Go to www.waterpik.com.




Instructions for Use

PRIMING UNIT (FIRST TIME USE ONLY)


1 Remove reservoir. Fill with warm water and replace it firmly on the base.




2 Insert tip firmly until it clicks. To remove tip, slide the tip eject button up.

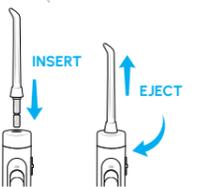

3 With the tip pointed into the sink, press up arrow to intensity 10, press power button on, slide water switch on and wait until water flows from tip. Turn water and power off, and press down arrow to intensity 3.

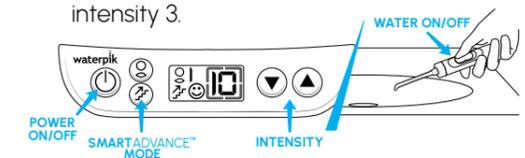


Control Panel Display

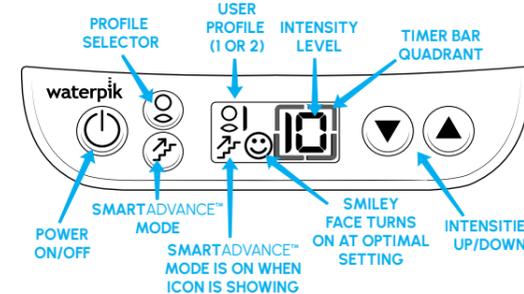

PROFILES

Separate profiles enable two users to personalize settings.

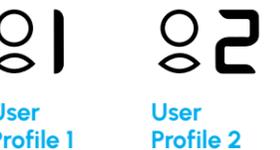

To Change Profiles: With the power OFF, press the profile button.

- Each profile stores individualized SMARTADVANCE™ Mode status.

SMARTADVANCE™ Mode



SMARTADVANCE™ Mode is on when the icon is showing in the display window.

SMARTADVANCE™ Mode will gradually increase the intensity until it reaches an optimal flossing level.

NOTE: In order for the intensity to increase in SMARTADVANCE™ Mode, you must floss for 1 minute (see quadrant timer section).

SMARTADVANCE™ Mode Set Up




With power OFF, press the SMARTADVANCE™ Mode button. Ensure the SMARTADVANCE™ icon appears on the display. If it is not, press the SMARTADVANCE™ button to turn mode on.

Press power button.

Users can adjust intensities up/down manually while in SMARTADVANCE™ Mode. The program will continue the progression towards optimal flossing level.


WATER FLOSS

- 1** With water switch OFF, Turn power ON.
- 2** Lean over sink. Close lips enough to prevent splashing, while still allowing water to flow from mouth into sink.
- 3** Slide water switch ON.

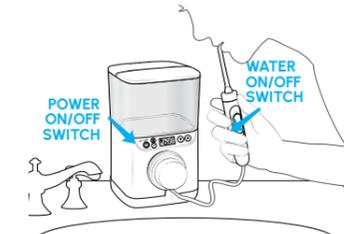

TECHNIQUE

- 4** Aim water at the gumline at a 90 degree angle. Follow the gumline and pause briefly between teeth.

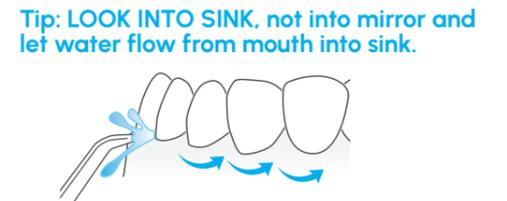

KEEP TIP IN MOUTH WHILE UNIT IS ON.


QUADRANT TIMER BARS



Four Bars, each 15 seconds (total 1 minute).

The bar for the active quadrant blinks. When the next bar blinks, move onto the next quadrant.

After 1 minute, all quadrant bars blink.

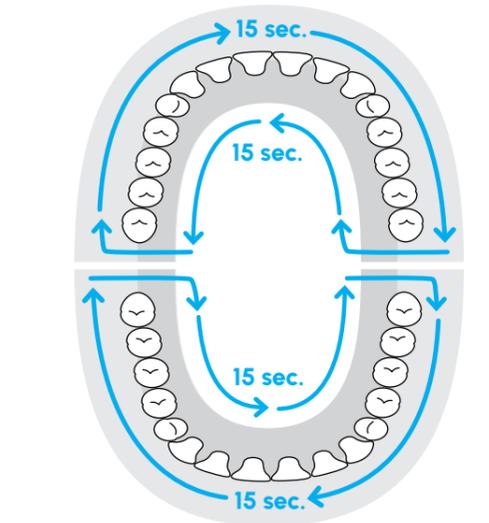

Replacement Tips:

(all tips not included)

Orthodontic Tip (OD-100E)

Replace every 3 months

Pik Pocket™ Tip (PP-100E)

Replace every 3 months

Plaque Seeker™ Tip (PS-100E)

Replace every 3 months

Precision Tip (JT-100E)

Replace every 6 months

Tongue Cleaner (TC-100E)

Replace every 6 months

Implant Denture Tip (DT-100E)

Replace every 6 months

Full line of replacement parts and accessories may be purchased online at www.waterpik.com or by phone from Water Pik, Inc. at 1-800-525-2774.

Have Questions or Need More Information?

- CLEANING
- TIPS
- TROUBLESHOOTING
- COMMON QUESTIONS
- HOW-TO VIDEO
- PRODUCT REGISTRATION
- PRODUCT SUPPORT



waterpik.com/promax

Using Mouthwash and Other Solutions/Cleaning

Your Waterpik™ water flosser can be used to deliver mouthwash and antibacterial solutions. After using any special solution, rinse unit to prevent clogging by partially filling reservoir with warm water and running unit with tip pointed into sink until unit is empty.

Never immerse unit in water. Before cleaning, unplug from the electrical outlet. Clean the product when necessary by using a soft cloth and mild non-abrasive cleanser.

The water reservoir is removable for easy cleaning and is top rack dishwasher safe, heat cycle OFF.

It is recommended that the reservoir is removed and cleaned weekly.

Using abrasive or chemical cleaners may damage the plastic housing of this product.

Removing Hard Water Deposits/ General Cleaning

Hard water deposits may build up in your unit, depending on the mineral content of your water. If left unattended, it can hinder performance. Cleaning internal parts: add 2 tablespoons of white vinegar to a full reservoir of warm water. Point the handle and tip into sink. Turn unit ON and run until reservoir is empty. Rinse by repeating with a full reservoir of clean warm water.

This process should be done every 1 to 3 months to ensure optimal performance.

Specifications

100-240 V~, 50-60 Hz

CONNECT WITH US @WATERPIK



Call: 1-800-525-2774

www.waterpik.com



waterpik.com/contact



Water Pik, Inc., a subsidiary of Church & Dwight Co., Inc.
1730 East Prospect Road
Fort Collins, CO 80553-0001 USA
800-525-2774
www.waterpik.com

Form No. 20033725-F AB
©2026 Water Pik, Inc.

Congratulations!

You are now on your way to better oral health!

REGISTER AND SAVE

Register your product and receive over \$50 in savings. waterpik.com/registration

WE'RE HERE TO HELP

We hope you are loving your new water flosser. If for any reason you are not satisfied or have any product questions, please contact our Customer Service Team based in Fort Collins, Colorado.



waterpik.com/contact