

USER MANUAL

DEP-20 DIGITAL PIANO

CONTENTS

English	01-05
Français	06-10
Deutsche	11-15
Italiano	16-20
Español	21-25
日本語	26-30
Appendix I Tone	31-34
Appendix II Demo	35-36
Appendix III Rhythm	37-40

PRECAUTIONS

Please read carefully the following precautions before use.
Keep these precautions somewhere safe for future reference.

Warning

When using, please observe the following precautions at any time. All these precautions prevent user from casualty accidents caused by electrical shock, shock circuits, accidents, fire or other dangerous events. Notices are described in the following (but not limited to):

- Keep away from rain & avoid using in the damp place.
- Do not put the water container on the piano since it may result in water flowing into the piano.
- If wire or plug is wore out, damaged or cut off suddenly during operation with unusual odors or smoke, please shut off the power immediately, pull out the plug and call maintenance personnel to check & repair

Please control the supply voltage between 100V-220V, too high or too low will damage the piano.

- Please turn the power off and pull the plug before cleaning the piano.
- Do not touch any charged body with wet hands or wipe & wash the piano with corrosive volatile solvent.
- Check the condition of power switch & line regularly.
- When replacing the fuse, be sure to use only a fuse of the same rating.


Notes

When using, please also observe the following precautions to avoid injury to user & other people or avoid damage to the piano or other external equipment. Notices are described in the following (but not limited to):

- Keep the AC power cord away from heat, such as heater.
- Don't over bend the power line.
- Don't put heavy stuff on the power line.
- Don't place the power line somewhere people walk through.
- Don't twine other stuff with power line to avoid damage the power cord.
- When pulling the plug, please pull the plug itself rather than wire.
- Unplug the power plug when not in use or under thunderstorms weather.
- Don't place the piano in dusty, vibration, cold or high temperature environment (Such as direct sunlight, heating or sun-exposed conveyance) to avoid damage inner or external components.
- Unplug the power line or other connection wires before moving the piano.
- Wipe the piano with dry and soft cloth for cleaning. Do not wipe it with paint, organic solvent, detergent or other corrosive cleaners to avoid color fading of the panel or piano key.
- Please turn off all the power switch before connecting the piano with other devices.
- Adjust the volume to the minimum before switching off the power. When using, set the volume to the minimum first, and increase it to confirm suitable volume.
- Keep away from other appliances, such as television, radio, sound, etc. Because they may interfere each other.
- Set the piano on flat ground to avoid toppling down.
- Don't put heavy stuff on the piano and do not type on the keys or adjust the switch heavily.
- This product has volume settings with large range to fit most occasions like classroom, studio, etc. For daily use, user should adjust the proper volume. If the volume is too loud for a long time, it will affect the musical effect and damage your listening.
- Avoid violent collision because it may damage the user and piano itself.


INSTALLATION

1. Slightly install the music stand into the groove of the piano body.
2. Insert pedal into the pedal jacks on the back of the body.
3. After the installation is done, plug in the power supply and start your music journey. (Power Outlet is on the back of the body.)

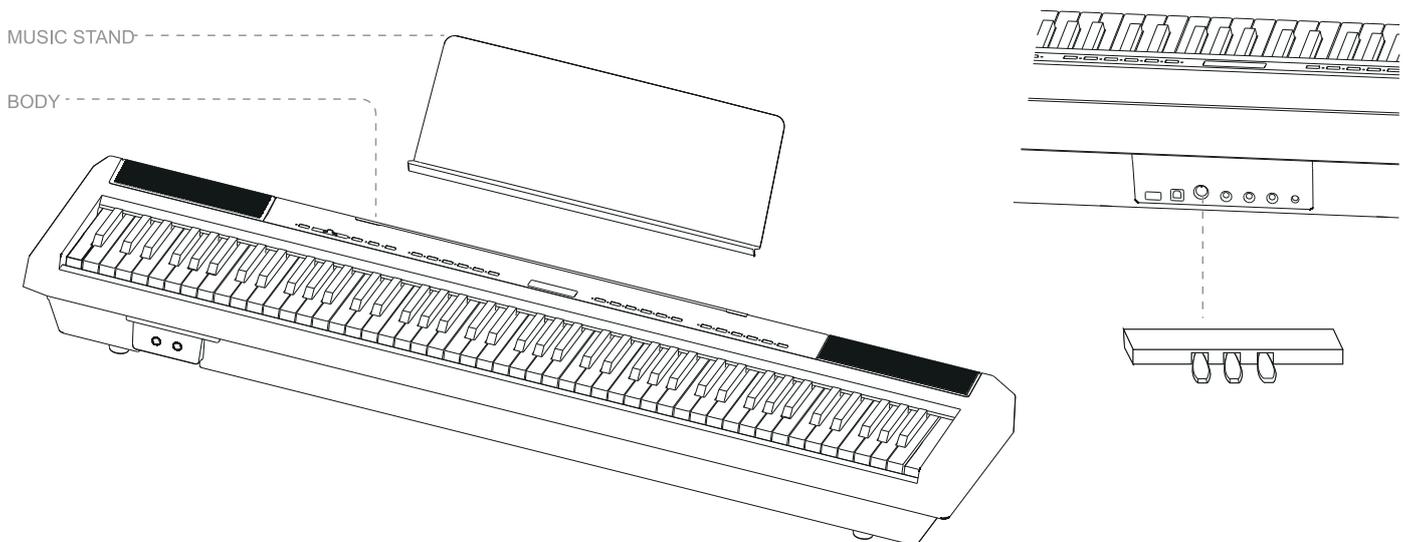

OPERATIONS

1. Piano Connection Interface Panel

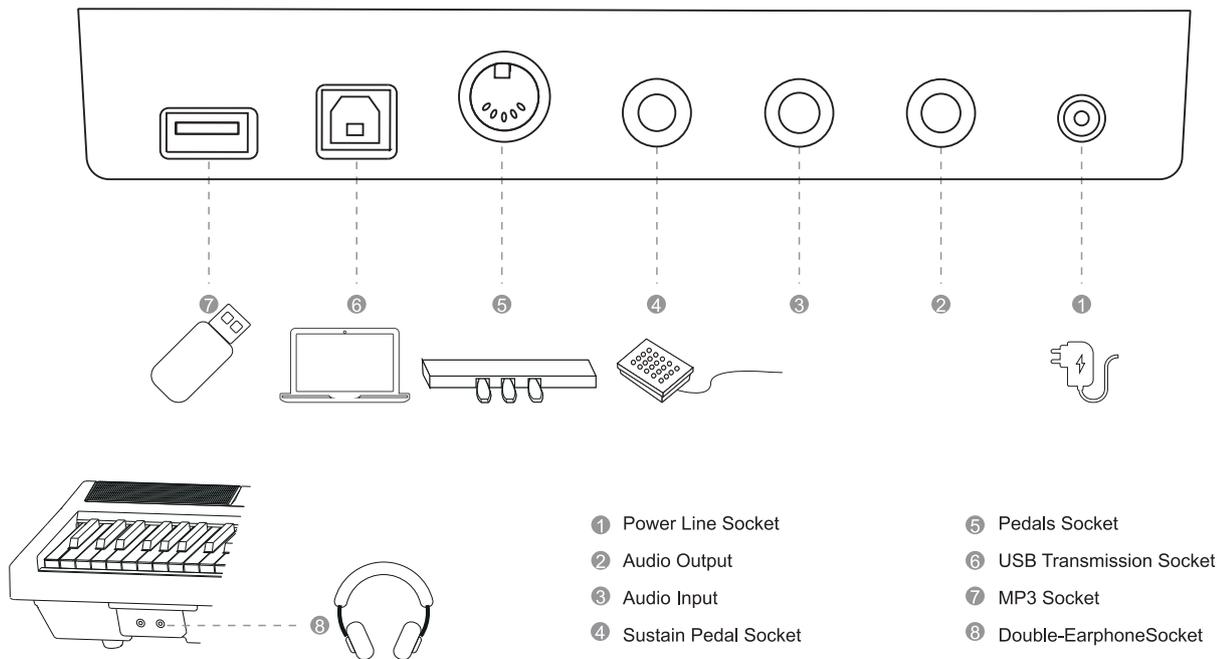

1 Power Line Socket

As figure shows, connect the power line when using. One end is inserted into the power outlet on the controller plate at the bottom of piano. The other end is inserted into a 100V-220V household socket.

Please unplug the power line and reserve it in an appropriate way when it is not used for a long time.

2 Audio Output

It supports external large speaker equipment by audio output plug.

3 Audio Input

External sound source can be connected to electric piano to play by audio input plug.


4 Sustain Pedal Socket

The product has tenuto pedal function. Please use pedal according to your needs when playing.

5 Pedals Socket

Insert the pedal plug into the round jack at the back of the piano and put through the triple pedals function with speaker effect.

The order is as follows: Soft, Sostenuto, Sustain; Single pedal is optional.

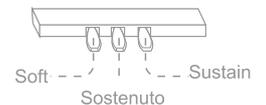

6 USB Transmission Socket

The product can be connected with computer by USB transfer interface. You can learn or play the keyboard to play, compose, store and operate other functions by the pre-installed music software on the computer. Edited music or accompaniments built in the music software can be played by the digital piano which is connected to the software or performed along with accompaniments.

7 MP3 Socket

Insert the flash disk with MP3 format songs into "USB plug" and play MP3 songs in 3 seconds or so.

By pressing the MP3 Control "▶||" button, MP3 songs can be paused or replayed.

Press once the control button of MP3 Control "◀◀" or "▶▶" lightly to select previous or next MP3 songs.

Adjust the volume of songs by long pressing the MP3 Volume "⊕" or "⊖" control button.

The peak value of sound needs the control of main volume lever.

Attention: Only support songs with MP3 format.

8 Double-Earphone Socket

The connection of headphones will cut off the output of the piano built-in speaker for not disturbing others when performing.

This product is designed with 2 earphone sockets which you can insert double earphones.

FEATURES

