
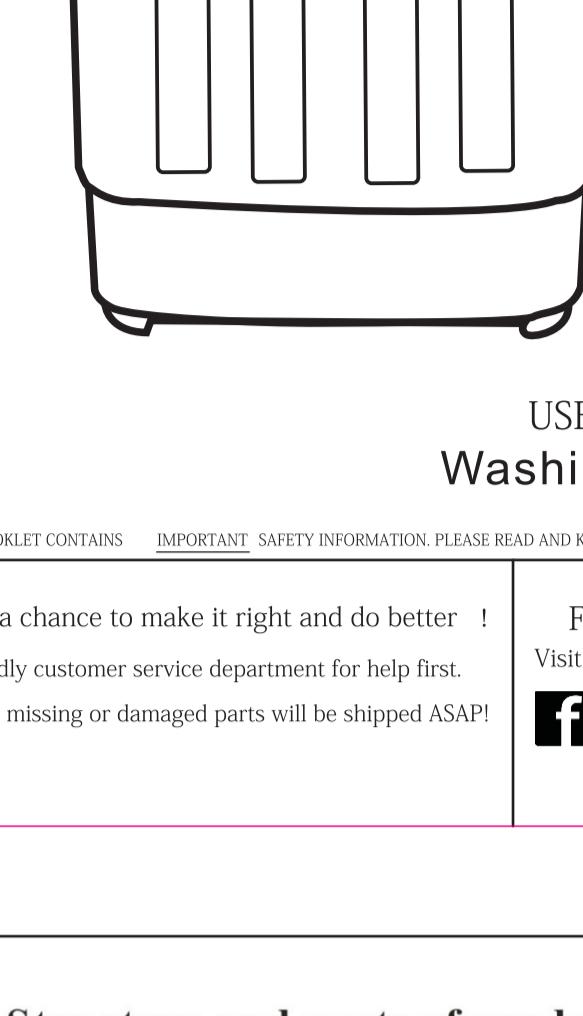


## COSTWAY®

USER'S MANUAL  
Washing machineTHIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.Please give us a chance to make it right and do better !  
Contact our friendly customer service department for help first.  
Replacements for missing or damaged parts will be shipped ASAP!Follow Costway  
Visit us: [www.costway.com](http://www.costway.com)

## Structure and parts of product

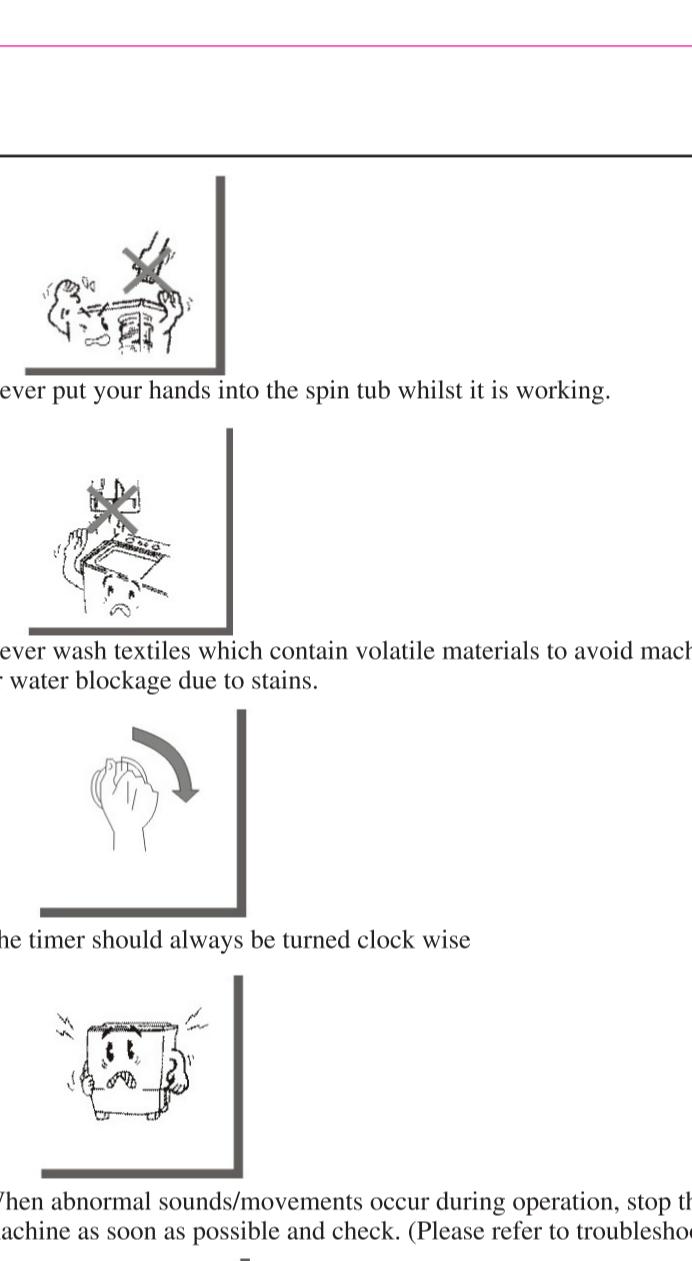


Never put your hands into the spin tub whilst it is working.



Never wash textiles which contain volatile materials to avoid machine damage or water blockage due to stains.



The timer should always be turned clockwise

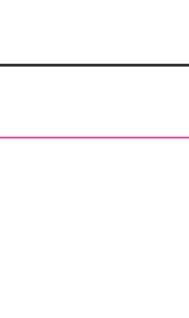

When abnormal sounds/movements occur during operation, stop the washing machine as soon as possible and check. (Please refer to troubleshooting, Page7.)

Welcome to visit our website and purchase our quality products!

Your suggestions and comments for COSTWAY are really important to us!

We sincerely solicit you to go back to our shop and leave a good rating in just a simple click. It would be quite encouraging if you could kindly do so like below:

★★★★★ Great products so far

February 24, 2019

Great products so far. Fast delivery, easy setup, and working without any issues.

With your inspiring rating, COSTWAY will be more consistent to offer you EASY SHOPPING EXPERIENCE, GOOD PRODUCTS and EFFICIENT SERVICE!

US office: Fontana, California

UK office: Ipswich



- \* Reward Points
- \* Exclusive Customer Service
- \* Personalized Recommendations
- \* Permanent Shopping Cart
- \* Order History

## 5 Star Rating



We would like to extend our heartfelt thanks to all of our customers for taking time to assemble this product and giving us valuable feedbacks.

THANK YOU

## Maintenance

After use, pull out the plug to prevent accidents.




For your own safety, ensure that the ground connection is correct.


5

## Maintenance

After use, pull out the plug to prevent accidents.

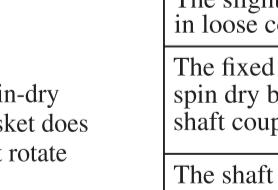

When cleaning the washing machine use a soft cloth, this will prevent scratching of the surface of the cabinet.

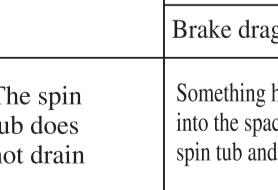

Do not put the washing machine outdoors or in damp areas such as the bathroom.



Do not put heavy objects on top of the washing machine.



Do not place the washing machine near to heat-generating items such as gas cookers.

3

## Troubleshooting

Problem	Reason	Solution
The pulsator is too slow	Power cut or switch off Transmission belt left off	Switch on the power Assemble the transmission belt
The pulsator does not rotate	Belt pulley has become loose Pulsator is blocked	Tighten the belt Remove the block
Abnormal noise and vibration	Belt is loose The clothes in the spin dry tub loosened	Tighten the belt or renew it Tighten the belt and the screw
Water leaks from the wash tub	The clothes are unbalance in the spin tub Between the pulsator and the wash tub	Replace the clothes Remove the object(s)
Spin-dry basket does not rotate	Connected tube was not tight The loose switch is	Reconnect and tighten the tube Adjust the switch contactor
The spin tub does not drain	The fixed screw of spin dry basket is loose The shaft of spin dry basket is twisted by the textile	Tighten the screw Remove the textile
The spin tub does not drain	Brake dragline is loose Something has dropped into the space between the spin tub and spin dry basket	Tighten the dragline Remove the object

Attention: When the problem can not be resolved, please contact the Service Center.

2

## Electrical Principle

Rated voltage	Washing	Spinning
110 V~	110 V~	110 V~
60 Hz	60 Hz	60 Hz
240 W	120 W	120 W



7