



FAQs
PS3 Wireless Racing Wheel
(RF-GPS3009)
January 29, 2009

1. How do I update firmware or make sure that I have the most up-to-date firmware?

- Firmware updates are not available for this product.

2. My racing wheel will not turn on.

- Are the batteries installed correctly?
 - Open the battery compartment on the bottom of the racing wheel.
 - Insert 4 AA batteries into the compartment. Make sure that the positive (+) and negative (-) terminals on the batteries align with the + and – symbols in the battery compartment.
 - Replace the battery compartment cover.
- Replace dead batteries with new ones.
- Slide the power button all the way to the ON position.

3. The racing wheel does not respond when a button is pressed.

- The racing wheel may have turned off or gone to sleep. It does this after three minutes of inactivity.
 - Press the **START** button. The racing wheel turns on and the LED lights.
 - You may need to press **HOME** to re-sync the racing wheel with the receiver.
- Are the batteries installed correctly?
 - Open the battery compartment on the bottom of the racing wheel.
 - Insert 4 AA batteries into the compartment. Make sure that the positive (+) and negative (-) terminals on the batteries align with the + and – symbols in the battery compartment.
 - Replace the battery compartment cover.
- Replace dead batteries with new ones.
- Slide the power button all the way to the ON position.

4. How do I reset the racing wheel?

- Press and hold **SELECT** and **START** for three seconds. The LED turns yellow.
- Press and hold **START** until the LED turns red.

5. The power light is on, but the racing wheel will not work.

- The racing wheel may have gone to sleep.
 - Press the **START** button. The racing wheel turns on and the LED lights.
- You may need to press **HOME** to re-sync the racing wheel with the receiver.

6. Can I get another copy of my manual?

- You can download another copy of the manual from the Rocketfish website: <http://www.rocketfishproducts.com/p-158-rocketfish-pro-wireless-racing-wheel-for-playstation-3.aspx>
 - The manual is available under the heading Supporting Documentation. It is available in English, Spanish, and French.

7. Will this racing wheel work with other gaming consoles?

- No, the racing wheel will only work with the Playstation 3.

8. Does this racing wheel work with all Playstation games?

- All games should work but the functionality is dependent on the game. Currently there are 120 racing games that work with this wheel.

9. My foot pedals cannot be programmed.

- Make sure the foot pedals are securely attached to the racing wheel.
- Make sure you cancel all programmed functions before you try reprogramming the buttons again.
 - Press and hold **SELECT** and **START** for three seconds. The LED turns yellow.
 - Press and hold **START** until the LED turns red.
- Have you tried following the steps in the user's guide?
 - You will need to assign the foot pedals to the LY axis. In some games the LY axis works as the accelerator and brakes or other functions.
 - Press and hold **SELECT** and **START** for three seconds. The LED turns yellow.
 - Press the left button on the directional pad. The LED turns red and the pedals are assigned to the LY axis.

10. How do I connect my racing wheel?

- Plug the receiver into the USB port #1 on the Playstation 3 console, then turn on the console.
- Open the battery compartment on the bottom of the racing wheel.
- Insert 4 AA batteries into the compartment. Make sure that the positive (+) and negative (-) terminals on the batteries align with the + and – symbols in the battery compartment.
- Replace the battery compartment cover.
- Connect the foot pedal to the racing wheel, then turn on the power switch on the racing wheel. The LED lights red.
- Press **HOME** to select the port the racing wheel is connected to. The corresponding LEDs light on the receiver plugged into the console.
- In some games, the racing wheel must be assigned to controller 1.
 - Press and hold **HOME** and assign the racing wheel to controller 1. The read LED above the power switch indicates that the wireless connection has been made successfully.
 - If the LED is not on, make sure that the receiver is plugged in and the batteries are installed correctly, then turn the racing wheel off then on again. The LED should light within 10 seconds.

11. Can I adjust the sensitivity of the racing wheel?

- Yes, by following these steps:
 - Press and hold **SELECT** and **START** for three seconds. The LED turns yellow.
 - Press **SELECT**. The LED indicates the current sensitivity setting.
 - LED solid—Medium sensitivity
 - LED flashing quickly—High sensitivity
 - LED flashing slowly—Low sensitivity
 - Press **UP** on the directional pad to save the setting.

12. How do I know when I need to change the batteries?

- The LED on the racing wheel will flash when the battery charge is getting low. When this occurs you will need to replace the batteries.

13. My racing wheel keeps shutting off when I'm in the middle of a race.

- There may be occasional periods of interference if your racing wheel is near a microwave or other 2.4GHZ devices like cordless phones, Wi-Fi networks, and Bluetooth devices.
 - Try removing these types of devices to determine if one of these devices is causing interference.
 - Once you have determined which device is causing interference, please move it further from the PS3 and the racing wheel to eliminate the interference.

14. What buttons can be programmed?

- You can program the foot pedals, L3, R3, and the gear stick.

15. Can the left or right paddles on the steering wheel be programmed?

- No. Only the foot pedals, L3, R3, and the gear stick can be programmed.

16. What does the left foot pedal do?

- In some games the left foot pedal acts as a Brake and in others it is Reverse.

17. Does the racing wheel vibrate?

- No, the racing wheel does not have a vibrate function.