



8' MHL Cable RF-G1300



QUICK SETUP GUIDE

Before using your new product, please read these instructions to prevent any damage.


Thank you for purchasing this high quality Rocketfish MHL cable. This cable makes it easy to send HD video and digital audio from an MHL-enabled mobile device, such as a smart phone or tablet, to an MHL-enabled HDTV.

Features

- Supports HD video up to 1080p and digital audio up to 7.1 surround
- Simultaneously charge your phone or other portable devices
- Control smart phone content with your TV remote control
- MHL version 1 compatible
- Includes adapter for Samsung MHL-enabled devices

Using your cable

- 1 Connect the micro USB connector to an MHL-enabled smart phone or tablet.
Important Note: Some Samsung MHL-enabled devices require the included adapter to be connected to the USB/MHL connector on the Samsung device. The micro USB connector on the MHL cable then connects to the adapter. Devices that require the adapter include the Galaxy S[®] III and 4 and Galaxy Note[®] II.
- 2 Connect the larger HDMI connector to an available HDMI MHL input jack on your TV.
- 3 Turn on your smart phone or tablet.
- 4 Switch your TV to the HDMI input/ source that matches the input jack on your TV. Content from your smart phone or tablet will be displayed on the TV.

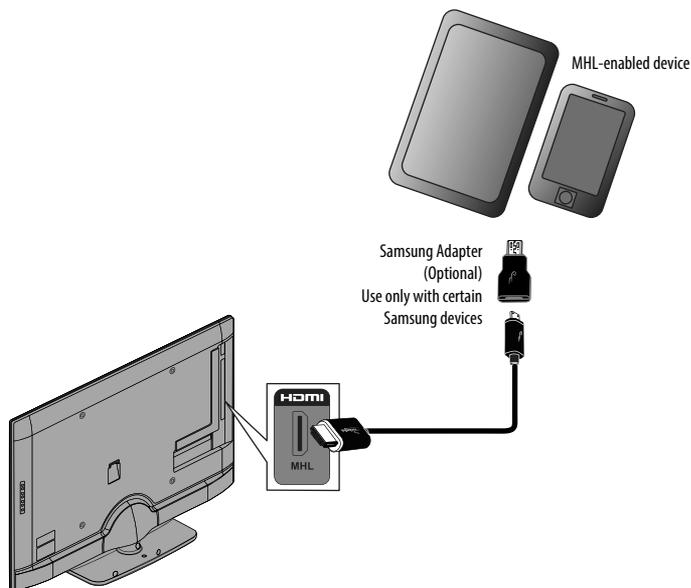

Compatibility

Your TV and source device must be MHL compatible.

- Your TV needs to be MHL compatible. Look for one of your TV's HDMI ports to be labeled with MHL or the MHL symbol.
- Your source device needs to be MHL compatible. Look for MHL or the MHL symbol on the case. If you don't find it, check with your device's documentation or with the manufacturer to determine if it's MHL enabled.

Using your TV remote control to control your MHL device (phone, etc).

In most cases, if your TV and portable device are both MHL compatible, you can control the playback of the content on your device with your TV's remote control. Here are the things you need to consider:

- This feature should automatically be enabled when you connect your handheld device to your TV, but you may have to enable it through your TV's OSD (on-screen display) menus. Since MHL uses a TV's HDMI CEC feature, look for the CEC Enable setting on your TV's OSD.
- Certain buttons on your TV's remote control can be used to control audio and video file playback from your MHL-enabled device. These buttons may include **PLAY, PAUSE, NEXT TRACK/FORWARD, PREVIOUS TRACK/REVERSE,** and **STOP.**
- Buttons that control menu navigation on your TV may also be used to navigate some functions or apps

running on your MHL-enabled device. Those buttons include **UP, DOWN, RIGHT, LEFT,** and **ENTER or OK.**

- Not all buttons are supported by all devices or all apps, it depends on the device and app you are using.

Lifetime limited warranty

Visit www.rocketfishproducts.com for details.

Contact Rocketfish:

For customer service, call 1-800-620-2790
www.rocketfishproducts.com

MHL and the MHL Logo are trademarks or registered trademarks of MHL Licensing, LLC in the United States and other countries.

ROCKETFISH is a registered trademark of BBY Solutions, Inc. Registered in some countries.
Distributed by Best Buy Purchasing, LLC, 7601 Penn Ave South, Richfield, MN 55423 U.S.A.
©2013 BBY Solutions, Inc. All Rights Reserved.