

INSIGNIA™

QUICK SETUP GUIDE

Memory Card Reader

NS-CRSAC1 / NS-CRSAC1-C

PACKAGE CONTENTS

- Memory card reader
- USB-A tip cover
- USB-C tip cover
- Quick Setup Guide


FEATURES

- Compatible with SD, micro-SD, SDHC, micro-SDHC, SDXC, and micro-SDXC memory cards
- USB-A and USB-C connectors work with your desktop, laptop, tablet and more
- Included covers keep the connectors safe from damage
- Slim, compact build is easy to carry around in a pocket or bag

SYSTEM REQUIREMENTS


- Windows® 10 and 11 (32 bit or 64 bit)
- macOS X 10.4 to macOS 10.15
- Android 6 to 13
- iPadOS 13.3 to 16
- ChromeOS 78 to 109
- SD, micro-SD, SDHC, micro-SDHC, SDXC, or micro-SDXC

OVERVIEW

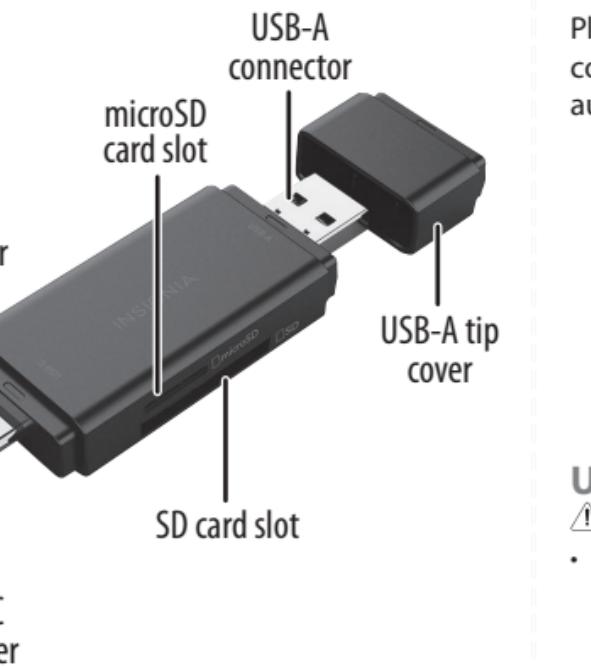

CONNECTING YOUR CARD READER

Plug your card reader into a USB port on your computer. Your computer loads the drivers automatically.

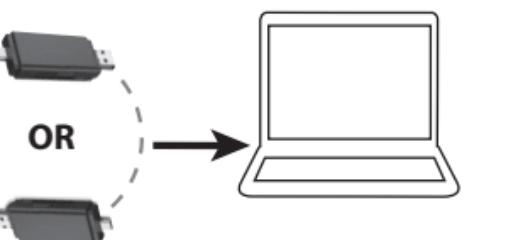

USING YOUR CARD READER

⚠ CAUTION:

- Formatting a memory card deletes all of its files. Copy any files you want to keep to a computer before formatting a memory card.

To access a memory card using Windows:

- 1 Insert a card, label side up, into the appropriate slot.
- 2 Open the File Explorer, then click **This PC** in the left-hand menu.
Note: If you don't see "This PC," right-click an empty space in the left-hand menu and select "Show This PC" or enable it in the File Explorer's Options menu.
- 3 Double-click your card to see its contents.
- 4 Use normal Windows procedures to open, copy, paste, and delete files.
- 5 Right-click the name of your card and select **Eject** when you are finished. Do not remove your card from your card reader until the name of your card disappears from the window.

To access a memory card using macOS:

- 1 Insert a card, label side up, into the appropriate slot.
- 2 Open the Finder window, then click your card's name in the left menu to view its contents.
- 3 Use normal Mac procedures to open, copy, paste, and delete files.
- 4 Right-click the name of your card and select **Eject** when you are finished. Do not remove your card from your card reader until the name of your card disappears from the Finder window.

TROUBLESHOOTING

My memory card does not appear on my computer, or an error occurs.

- Make sure that the memory card is fully inserted into the slot. Insert only one card at a time.
- Make sure that your card reader is connected to your computer.
- Unplug and reconnect your card reader.
- Try a different memory card of the same type.
- Make sure that the card has enough storage capacity to save your data.
- Make sure that the amount of data you attempted to store has not exceeded the capacity of the card.
- Some cards have a read/write security switch. Make sure that the security switch is set to Write Enabled.
- Make sure that only one card reader is connected to your computer. If other card readers are connected, unplug them before connecting this card reader.
- Inspect the ends of the memory cards for dirt or material closing a hole. Clean the contacts with a lint-free cloth and small amounts of isopropyl alcohol.

- You may need to format your memory card. Formatting a memory card will remove all files on it. Do not try this if those files are important.
- Disconnect your card reader and shine a flashlight into the empty card slots. Look to see if any pin inside is bent, then straighten bent pins with the tip of a mechanical pencil. Replace your memory card reader if a pin has bent so much that it touches another pin.

SPECIFICATIONS

Transmission Port:

USB 3.2 Gen1 Type-C / Type-A

USB 2.0 backwards compatible

USB Transmission Rate: 5.0 Gbps (max)

Card Transmission Rate: 104 Mbps (max)

Working Temperature:

32° ~ 104° F (0° ~ 40° C)

Dimensions (H x W x D):

3.14 x 1.02 x 0.43 in. (79.77 x 26 x 11 mm)

LEGAL NOTICES

FCC Information

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

ICES-003 statement

CAN ICES-003 (B)/NMB-003(B)

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, maybe cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- It is recommended to consult the dealer or an experienced radio/TV technician for help.

ONE-YEAR LIMITED WARRANTY

Visit www.insigniaproducts.com for details.

QUEBEC AVAILABILITY GUARANTEE

For Quebec Residents Only: No guarantee of replacement parts, repair services, or maintenance/repair information. Visit www.insigniaproducts.com for details.

CONTACT INSIGNIA:

For customer service, call
1-877-467-4289 (U.S. and Canada)
www.insigniaproducts.com

INSIGNIA is a trademark of Best Buy and its affiliated companies.



Distributed by Best Buy Purchasing, LLC
Richfield, MN 55423
©2025 Best Buy. All rights reserved.