

INSIGNIA™

QUICK SETUP GUIDE

White outdoor string lights

NS-STRL24FT3

PACKAGE CONTENTS

- String light
- Replacement bulbs (2)
- *Quick Setup Guide*

 
FEATURES

- Add accent lighting to your patio, garden, balcony and more (for outdoor use)
- 12 bulbs (plus 2 spare bulbs) on a 24 ft. (7.3 m) string illuminate any space
- 2200 K warm white lights make for a relaxing atmosphere
- Shatterproof LED bulbs withstand severe weather conditions and accidental drops
- Built-in hanging sockets provide flexible mounting options
- Supports end-to-end connection up to 36 strands for added length
- Commercial-grade and UL rating grants outdoor, year-round use


CONNECTING YOUR STRING LIGHTS

Attach to a guide wire

- 1 Run a guide wire (not included) in the location where you want your string light.
- 2 Attach an S hook or temporary tie (not included) through the plastic loop on the end of each light.

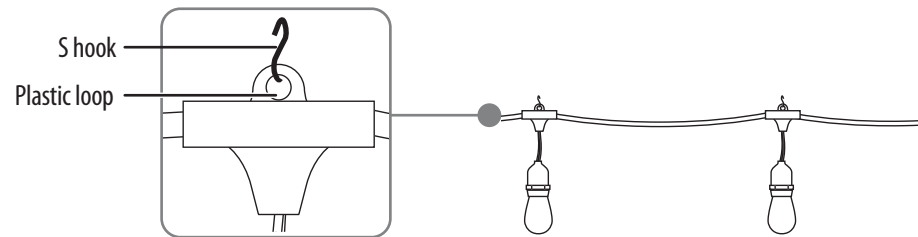

 
- 3 Attach each plastic loop to the guide wire.

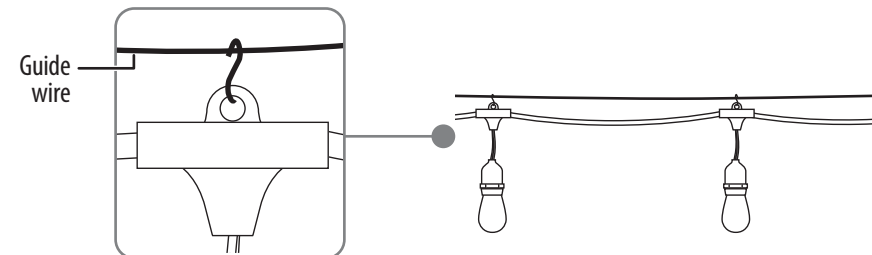


- 4 Plug the lights into a grounded outlet.

Attach to a structure

 
- 1 Attach screw hooks (not included) into the structure where you want your string light. The screw hooks should be no less than 10 ft. (3 m) apart.

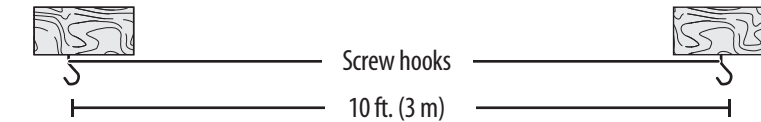

 - 2 Attach the plastic loops on the end of the lights to the screw hooks.

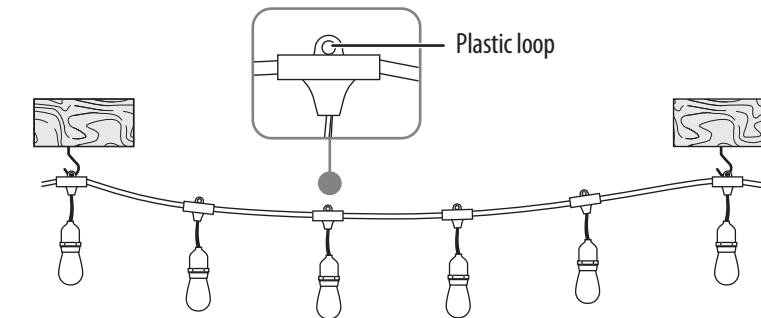

 
- 3 Plug the lights into a grounded outlet.

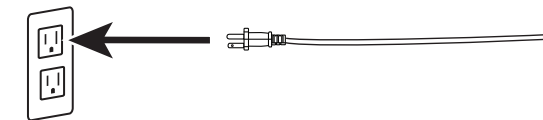

REPLACING LIGHT BULBS

WARNING - RISK OF ELECTRIC SHOCK!!!

 Disconnect power at the source prior to replacing light bulbs/fuse. For outdoor string lights, do NOT replace light bulbs/fuse during rain or when wet. Replace light bulbs/fuse only during dry and calm weather conditions.

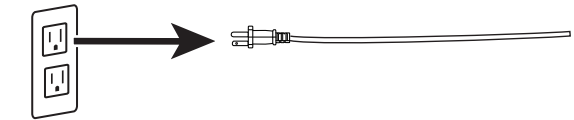


- 1 Lightly hold the bulb you want to replace in one hand, then twist the bulb counterclockwise.
Note: The bulb may be tight in the socket. This is normal to prevent moisture from getting into the socket.
- 2 Screw the replacement bulb into the socket clockwise until the top of the socket forms a tight seal around the bulb and the bulb makes solid contact with the socket.


ADDING A LIGHT STRING

Note: You can add up to 36 string light sets.

 
1 Unplug the first light string.

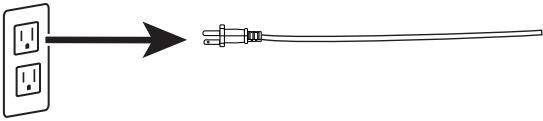

 2 Remove the cap from the female end and insert the power plug on the second string into the power outlet on the first string.

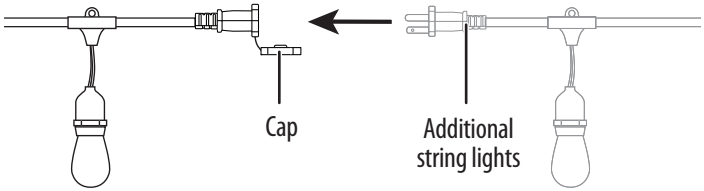

 Note: Tightly cap the female end when not in use.



TROUBLESHOOTING

Lights will not turn on.

- Make sure that all the connectors are connected correctly, and the plug is inserted into a power outlet.

LEDs flicker or turn on and off.

- Make sure that the power cable is not damaged.
- Make sure that all connections are tight and secure.

SPECIFICATIONS

- **Dimensions (H×W):** 8 x 287.4 in. (20.32 x 730 cm)
- **Weight:** 3.7 lbs. (1.7 kgs)
- **Input:** 120V, 60 Hz
- **String length:** 24 ft. (7.3 m)
- **Number of lights:** 12 (plus 2 spare bulbs)
- **LED/light life:** 15,000 hours
- **Operating temperature range:** -4° F to 104°F (-20° C to 40° C)
- **Maximum supported Wattage:** 432 Watts
- **Color temperature:** 2200k

IMPORTANT SAFETY INFORMATION

When using electrical products, basic precautions should always be followed including the following:

- READ AND FOLLOW ALL SAFETY INSTRUCTIONS.
- Do not use these products outdoors unless marked suitable for indoor and outdoor use.
When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupting (GFCI) outlet. If one is not provided. Contact a qualified electrician for proper installation.
- Do not mount or place near gas or electric heaters, fireplace, candles or other similar sources of heat.
- Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails. Install only using the mounting means provided
- Do not let lamps rest on the supply cord or on any wire.
- Do not use this product for other than its intended use.
- Do not hang ornaments or other objects from cord, wire, or light string.
- Do not close doors or windows on the product or extension cords as this may damage the wire insulation.
- Do not cover the product with cloth, paper or any material not part of the product when in use.
- This product has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not use with an extension cord unless plug can be fully inserted. Do not alter or replace the plug.
- Read and follow all instructions that are on the product or provided with the product
- SAVE THESE INSTRUCTIONS

IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY

The lighting string is rated at 120V, 60Hz, 12 Watts.

It is provided with 12 lampholders and 1 Watt, S14 E26 Type LED lamps



CAUTION:

1. To reduce the risk of fire use only type S14 LED lamps, 1 Watt maximum
2. To reduce the risk of fire do not deliberately reposition either lampholder contact.

CONNECTING MULTIPLE SETS: USING INCLUDED LED BULBS

Add the wattage of each light string together for a total of 432 Watts or less.

When connecting multiple sets, protect connection(s) from direct exposure to rain and water. Do not allow connection(s) to become wet.

CAUTION: RISK OF ELECTRIC SHOCK

- Do not use with extension cord near water or where water may accumulate.
- Keep lamps at least 16 ft. (4.8m) from pools and spas. Keep plugs and receptacles dry. Do not submerge.
- Disconnect power at source prior to wiring, replacing light bulbs/fuse, or servicing in any way.
- The light string kits are supplied with an attached two prong plug that will only fit into a two prong outlet.
- Do not alter the plug.

LEGAL

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. Any changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

ONE-YEAR LIMITED WARRANTY

Visit www.insigniaproducts.com for details.

CONTACT INSIGNIA

For customer support, call 1-877-467-4289 (U.S. and Canada)
www.insigniaproducts.com

INSIGNIA is a trademark of Best Buy and its affiliated companies.
Distributed by Best Buy Purchasing, LLC
7601 Penn Ave South, Richfield, MN 55423 U.S.A.
©2022 Best Buy. All rights reserved.