


#### PACKAGE CONTENTS

- 9" personal fan
- *Quick Setup Guide*

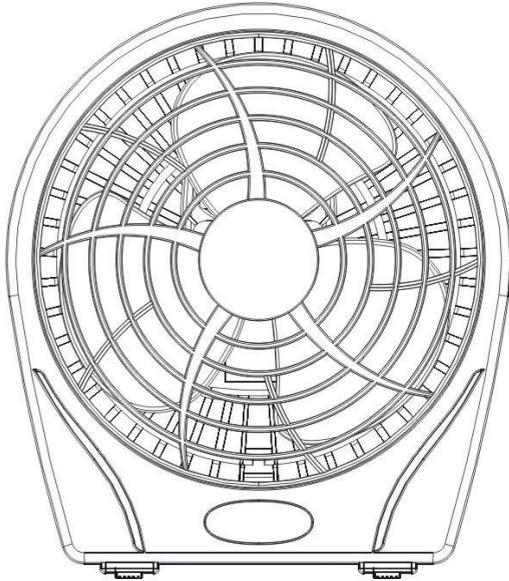

#### IMPORTANT SAFETY INSTRUCTIONS:


PLEASE READ AND SAVE THESE IMPORTANT INSTRUCTIONS WHEN USING ELECTRICAL APPLIANCES, BASIC PRECAUTIONS SHOULD ALWAYS BE FOLLOWED TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, AND INJURY TO PERSONS, INCLUDING THE FOLLOWING:

- Read all instructions before using this product.
- Use this fan only as described in this *Quick Setup Guide*. Any other use not recommended by the manufacturer may cause fire, electrical shock, or injury to person, and may void the warranty.
- Always unplug the unit before assembling, disassembling, or cleaning.
- Always unplug unit when not in use, when moving from one location to another, and before cleaning.
- To disconnect, grip the plug and pull it from the wall outlet. Never yank the cord.
- The use of attachments not recommended or sold by the appliance manufacturer may cause hazards.
- Avoid contact with moving parts.
- DO NOT operate this fan with a damaged cord or plug, after a malfunction, or is dropped or damaged in any manner. Discard the fan or return the unit to Best Buy, Inc. for examination, electrical or mechanical adjustment, or repair.
- Do not operate this fan in the presence of explosive and/or flammable fumes.
- Do not place the fan or any parts near an open flame, or cooking or other heating appliance.
- Extreme caution is necessary when the fan is used by or near children or invalids and whenever the fan is left operating and unattended.
- This product is intended for household use only and not for commercial or industrial use. Do not use outdoors.
- Always use on a dry level surface.

- Do not operate if the fan housing is removed or damaged.
- A loose fit between the AC outlet and plug may cause overheating of the plug. Have a qualified electrician replace the outlet.
- This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded or returned to an authorized service facility for examination and/or repair.
- DO NOT run the cord under carpeting. Do not cover the cord with throw rugs, runners or the like. Do not route the cord under furniture or appliances. Arrange the cord away from traffic area and where it will not be tripped over.
- This fan is equipped with a polarized alternating current line plug (a plug having one blade wider than the other). To reduce the risk of electric shock, this plug fits into the polarized power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact a qualified electrician to replace the obsolete outlet. Do not attempt to defeat the safety feature.
- NEVER connect the fan to any power sources other than a 120 volt alternating current polarized outlet.
- **Warning:** To reduce the risk of electric shock, DO NOT use this fan with any solid-state speed control and DO NOT insert a finger or any object into grill.

### USING YOUR FAN

- 1 Set your fan on a dry and level surface.
- 2 Plug in the fan.
- 3 Adjust the fan to the angle that you want.
- 4 Turn the control knob to **ON**. Slide the switch to the speed you want.

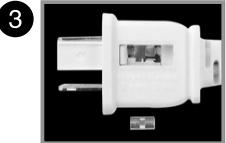

← OPEN

CLOSE →

### CLEANING/MAINTENANCE INSTRUCTIONS

- Turn off and unplug the fan.
- Carefully wipe the fan with a soft, damp cloth. Be very cautious near the motor.
- DO NOT immerse the fan in water and never allow water to drip into the motor housing.
- Never use gasoline, benzene, or thinner to clean the fan. This will damage the surface of the fan.
- After cleaning, be sure to completely dry the fan with a cloth or towel before using it.
- Before putting the fan in storage, clean it thoroughly, cover it with a vinyl bag, and store it in a cool and dry place. We recommend using the original (or appropriately sized) box.

### REPLACING THE FUSE

If your fan stops working, you may need to replace the fuse.

**Warning:** Risk of fire. Replace only with a 5 Amp, 125 Volt fuse.

- 1 Unplug your fan.
- 2 Slide the fuse cover towards the blades until you can see the entire fuse.
- 3 Carefully pry out the old fuse.
- 4 Push the new fuse into the compartment, then slide the fuse cover closed. Your fan is ready for normal use.

### ONE-YEAR LIMITED WARRANTY

Visit [www.insigniaproducts.com](http://www.insigniaproducts.com) for details.

### CONTACT INSIGNIA

For customer service, call 1-877-467-4289 (U.S. and Canada) or 01-800-926-3000 (Mexico) or [www.insigniaproducts.com](http://www.insigniaproducts.com)

INSIGNIA is a trademark of Best Buy and its affiliated companies. Registered in some countries.  
 Distributed by Best Buy Purchasing, LLC  
 W7601 Penn Ave South, Richfield, MN 55423 U.S.A.  
 ©2014 Best Buy. All rights reserved.  
 Made in China