



AC4CB

4-CUBE STORAGE BOOKCASE

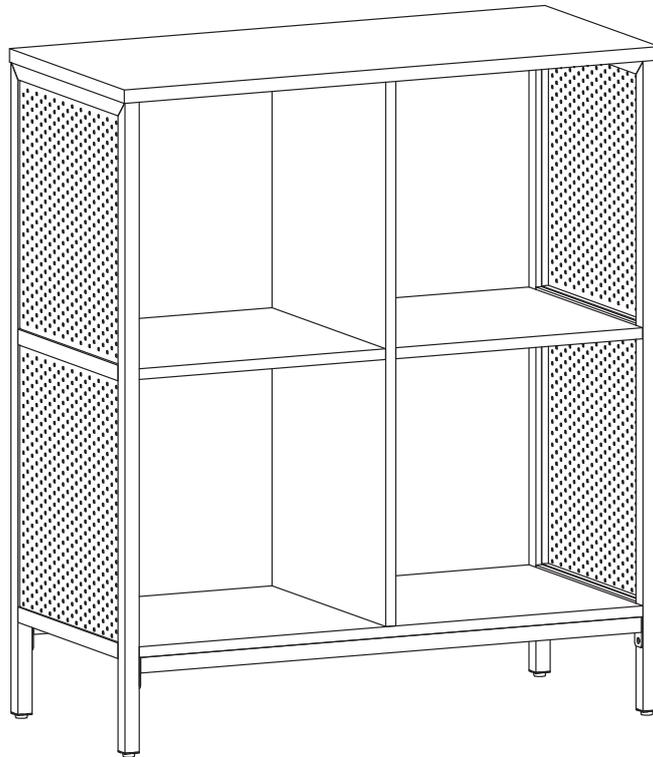

Assembly Instructions - Important:

Carefully unpack and identify each component before attempting to assemble. Refer to parts list. Please take care when assembling the unit and always set the parts on a clean, soft surface. If you require any assistance with assembly, parts or information on other products, please visit our website: www.officestar.net or call or write us.

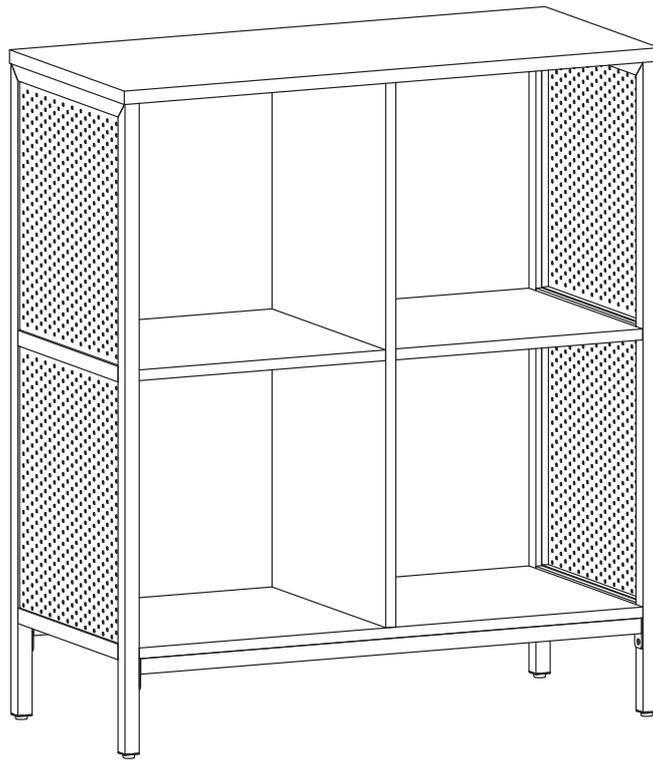


1. Do not use this product unless all screws and bolts are securely tightened.
2. Check that all screws and bolts are tight every three months or as needed.
3. Dispose of packing material properly. Do not use plastic cover as head covering. It may cause suffocation.
4. Do not use this product as a stepladder.
5. Use this product for its intended purpose only.
6. **FOR INDOOR RESIDENTIAL USE ONLY.**

LIMITED WARRANTY


OSP Home Furnishings® warrants to the original purchaser that this product will be free from defects in material and workmanship as described below. Home Furnishings® will repair or replace, at its option, without charge to the original purchaser only, defective products or parts for one (1) year from the date of purchase. Replacement parts can only be supplied if parts are available. Items out of production may be unavailable. This warranty shall be effective for the applicable time period beginning from the date of purchase as shown on your original sales receipt. This warranty is your sole remedy for product defects and excludes defects due to or arising in connection with product abuse or misuse, use modification of, or attachments to the product, and products or parts not used, maintained, or installed in accordance with the company's installation, maintenance and/or applicable guidelines. There are no other warranties, express or implied, other than those specifically described, including without limitation any implied warranty of merchantability or of fitness for a particular purpose. OSP Home Furnishings® will not be responsible for incidental or consequential damages. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights which may vary from state to state. Our quality standards are among the highest in the industry. Sometimes, no matter how hard we try, there are times when parts are damaged or missing. Our Parts Department will do everything possible to promptly remedy the problem. Contact us via e-mail parts.department@officestar.net by Fax 1-909-930-5629, or toll free parts number 1-800-950-7262, Monday through Friday 8:00 a.m. - 3:30 p.m. Pacific Time. To make a warranty claim, contact Parts Department. Provide model number, proof of purchase, description of the problem and obtain return authorization. At its option OSP Home Furnishings® will:

(a) Supply compatible components of current manufacture. (b) Repair the customer's component. The customer must prepay freight on any components returned to the factory. Return freight on components still in warranty will be paid by OSP Home Furnishings®.


PARTS

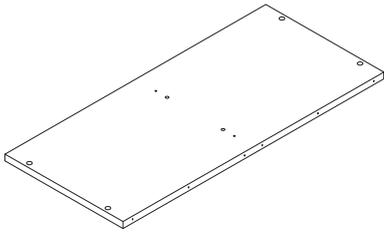

 (A) Top Panel (1 PC)



 
(B) Left Side Frame (1 PC)




(C) Right Side Frame (1 PC)




(D) Divider (1 PC)

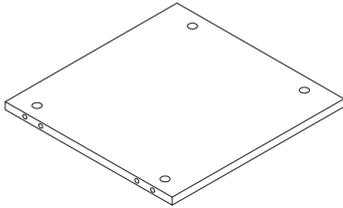


(E) Left Shelf (1 PC)

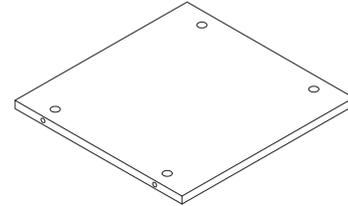

(F) Right Shelf (1 PC)

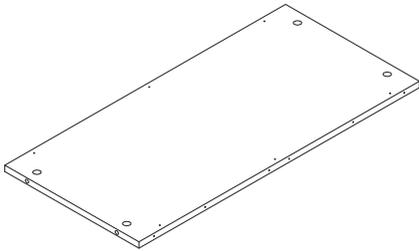

(G) Bottom Panel (1 PC)



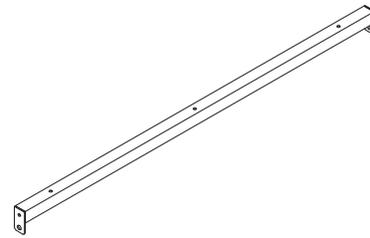


(H) Metal Rail (2 PCS)




(I) Back Panel (2 PCS)

   HARDWARE LIST


NO	DRAWING	DESCRIPTION	SIZE	QUANTITY
1		Glue	n/a	1 PC
2		Cam Lock	Ø15 x 11mm	16 PCS + 2 Extra
3		Cam Bolt	ØM6	8 PCS + 1 Extra
4		Cam Bolt	n/a	8 PCS + 1 Extra
5		Bolt	Ø1/4" X 12MM	4 PCS
6		Bolt	Ø1/4" x 30mm	4 PCS
7		Allen Wrench	4mm	1 PC
8		Wooden Dowel	Ø8 x 30mm	8 PCS + 1 Extra
9		Wood Screw	#4 x 30mm	6 PCS + 1 Extra
10		Screw	#3.5 x 15mm	24 PCS + 2 Extra
11		Sticker	Ø20mm	1 PC

 ANTI TIP KIT HARDWARE


WA		Machine Screw	4.5 x 10 x 8mm	2 PCS
WB		Wood Screw	4 x 25 x 8mm	2 PCS
WC		Wall Anchor	Ø	2 PCS
WD		Mounting Bracket	Ø	4 PCS
WE		Mounting Strap	Ø	2 PCS

Phillips screwdriver also needed for assembly (not provided)


CAM LOCK INSTALLATION

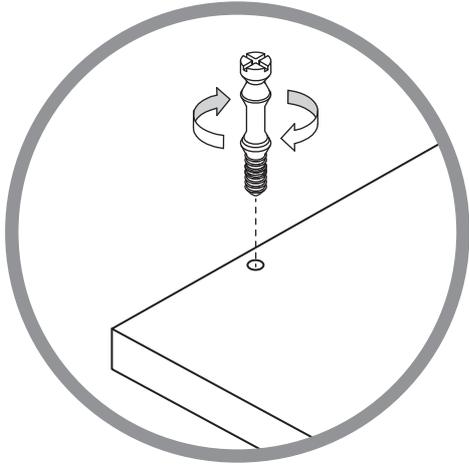

Screw in Cam Bolt. Fully Tighten.

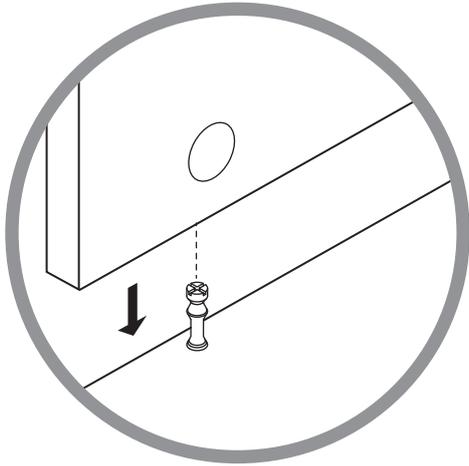


Align hole in panel with Cam Bolt and attach.

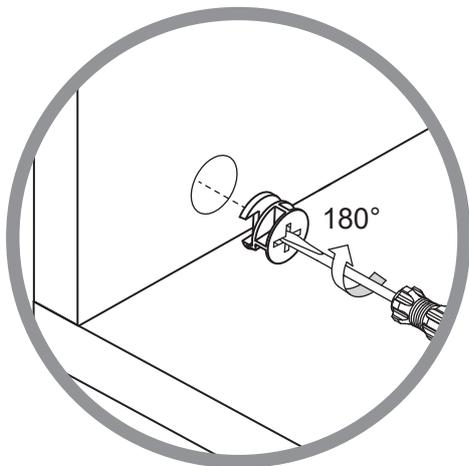


Screw Cam Lock in. Turn clock-wise until you feel Cam Lock securely fasten to Cam Bolt. Fully tighten Cam Lock.

STEP 1

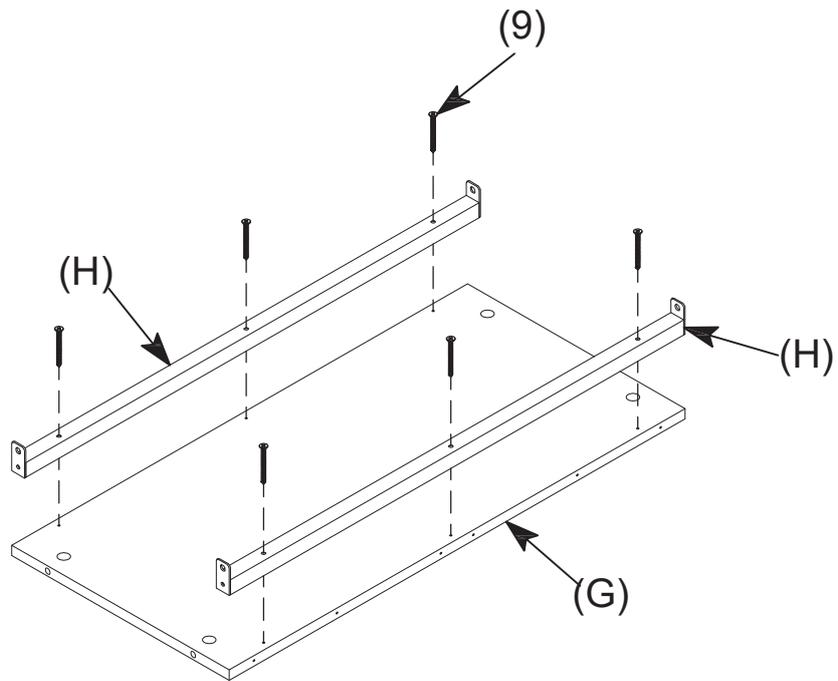


FULLY TIGHTEN ALL SCREWS (9)

STEP 2

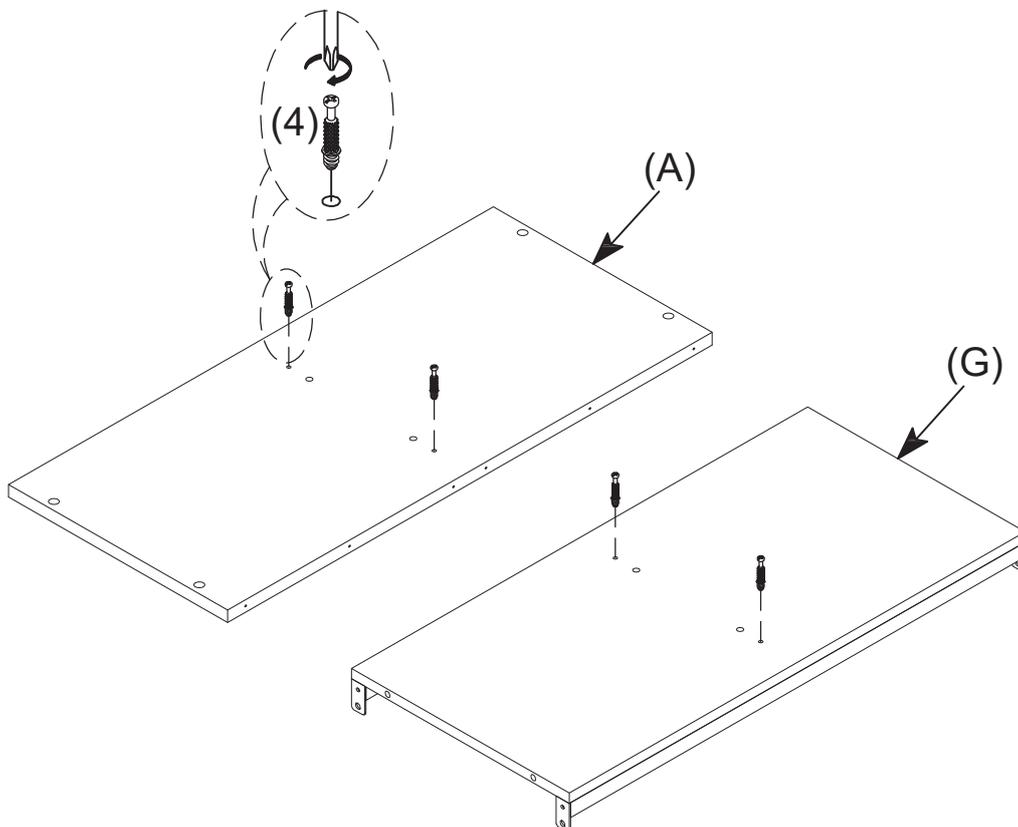


FULLY TIGHTEN ALL CAM BOLTS (4)

STEP 3

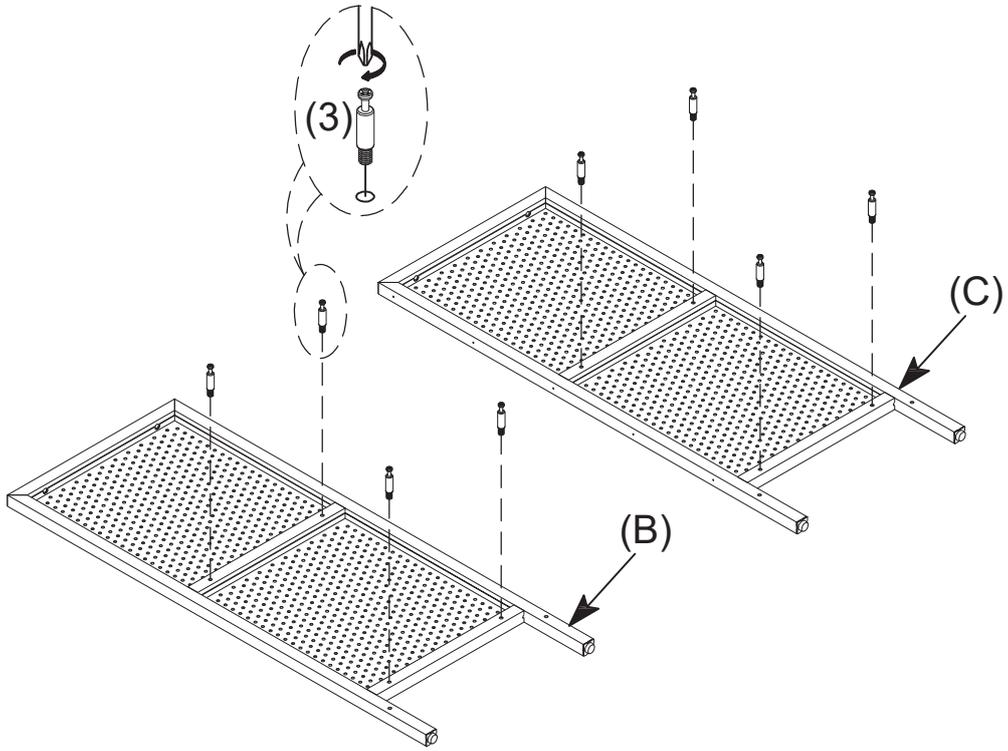


FULLY TIGHTEN ALL CAM BOLTS (3)

STEP 4

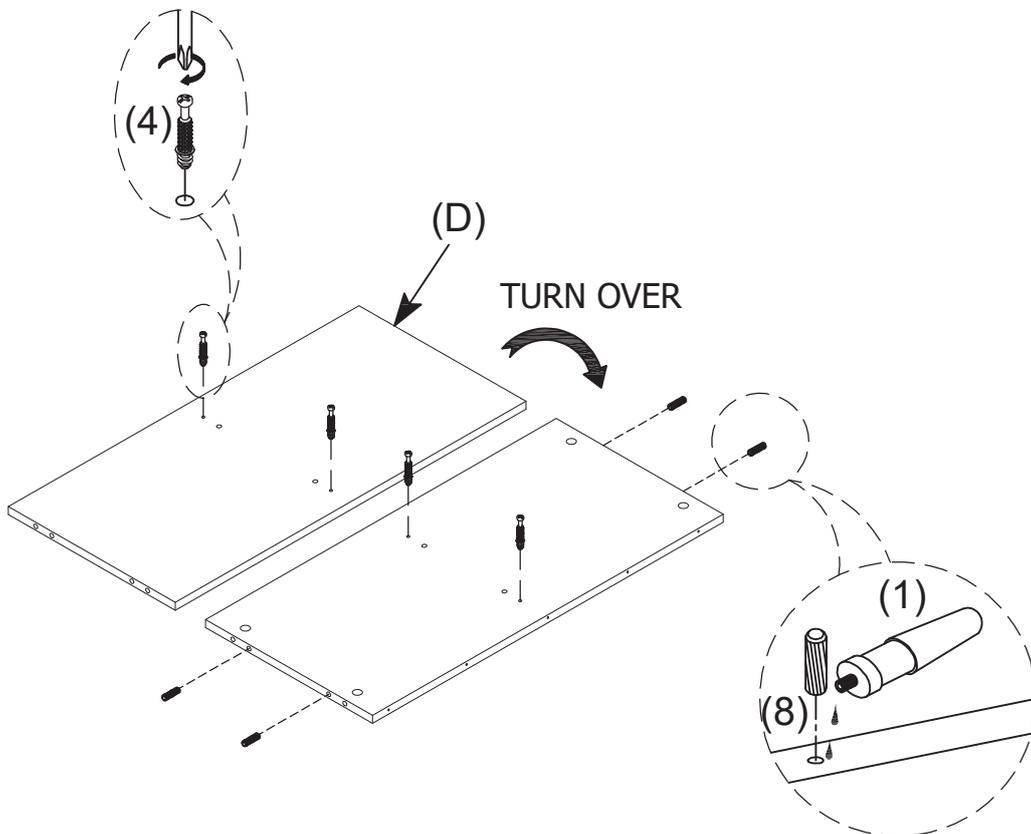


FULLY TIGHTEN ALL CAM BOLTS (4)

STEP 5

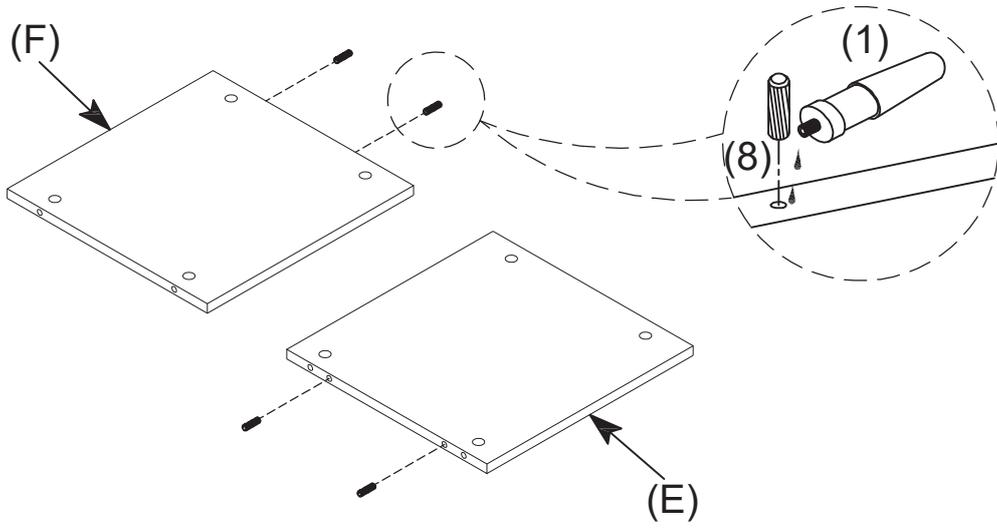


STEP 6

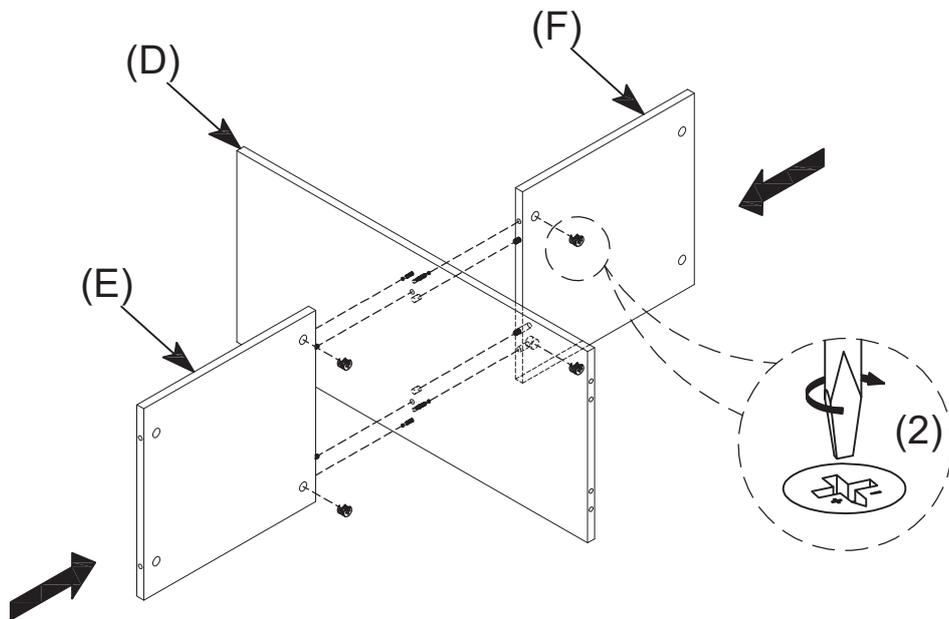


FULLY TIGHTEN ALL CAM LOCKS (2)

STEP 7

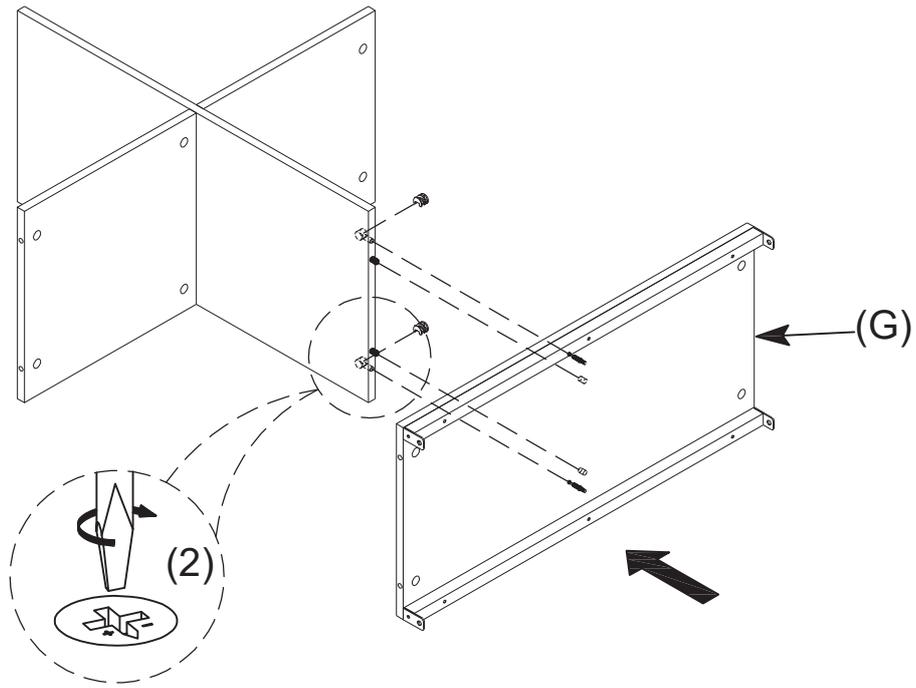


FULLY TIGHTEN ALL CAM LOCKS (2)

STEP 8

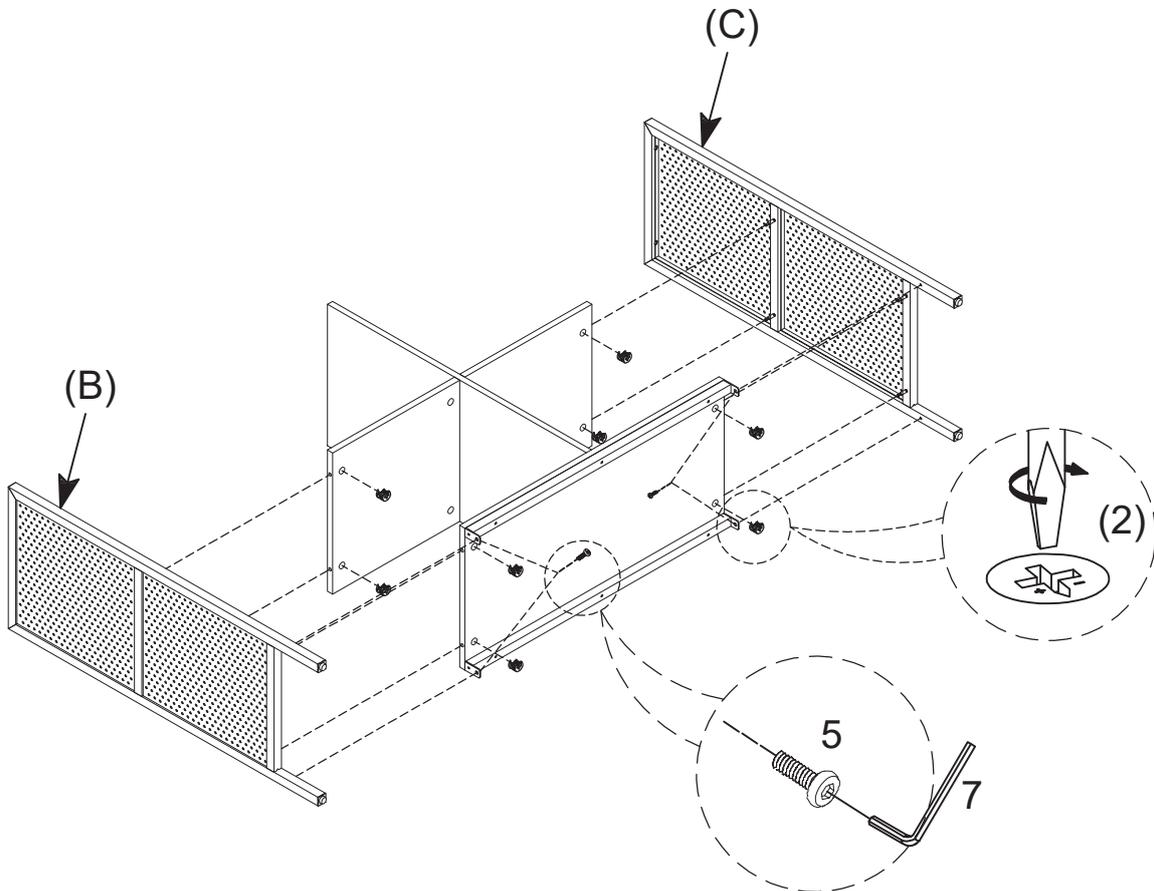


FULLY TIGHTEN ALL BOLTS (5) & ALL CAM LOCKS (2)

STEP 9

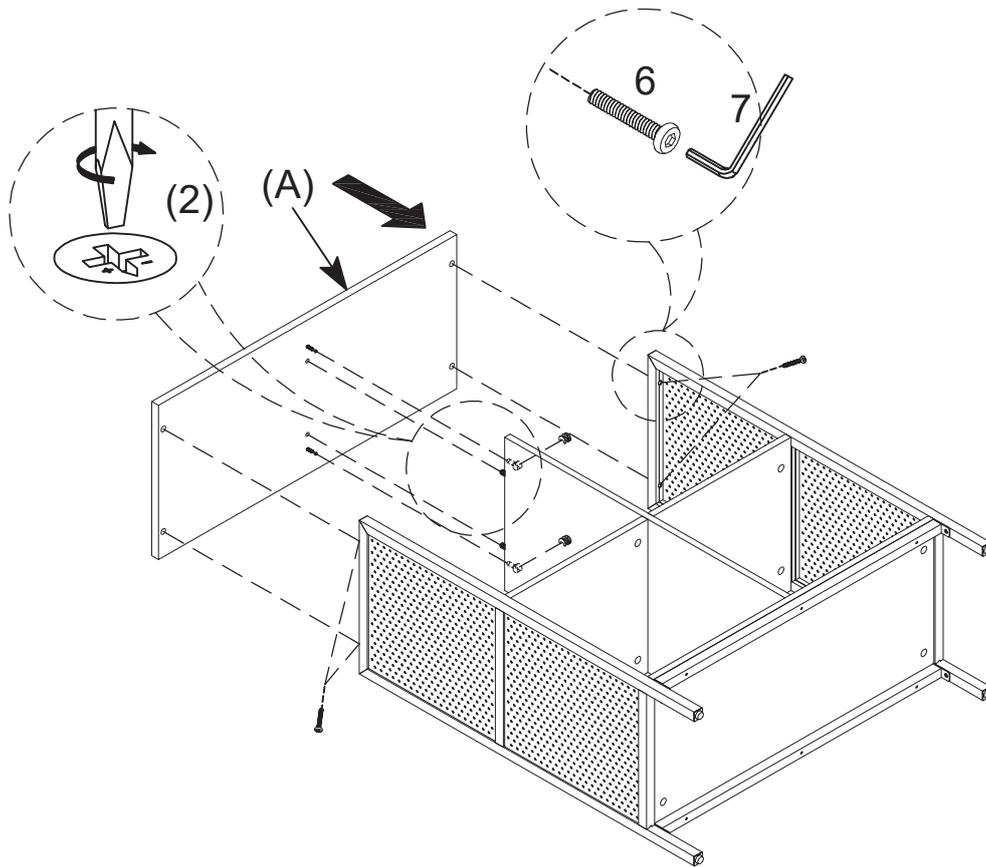


FULLY TIGHTEN ALL BOLTS (6) & ALL CAM LOCKS (2)

STEP 10

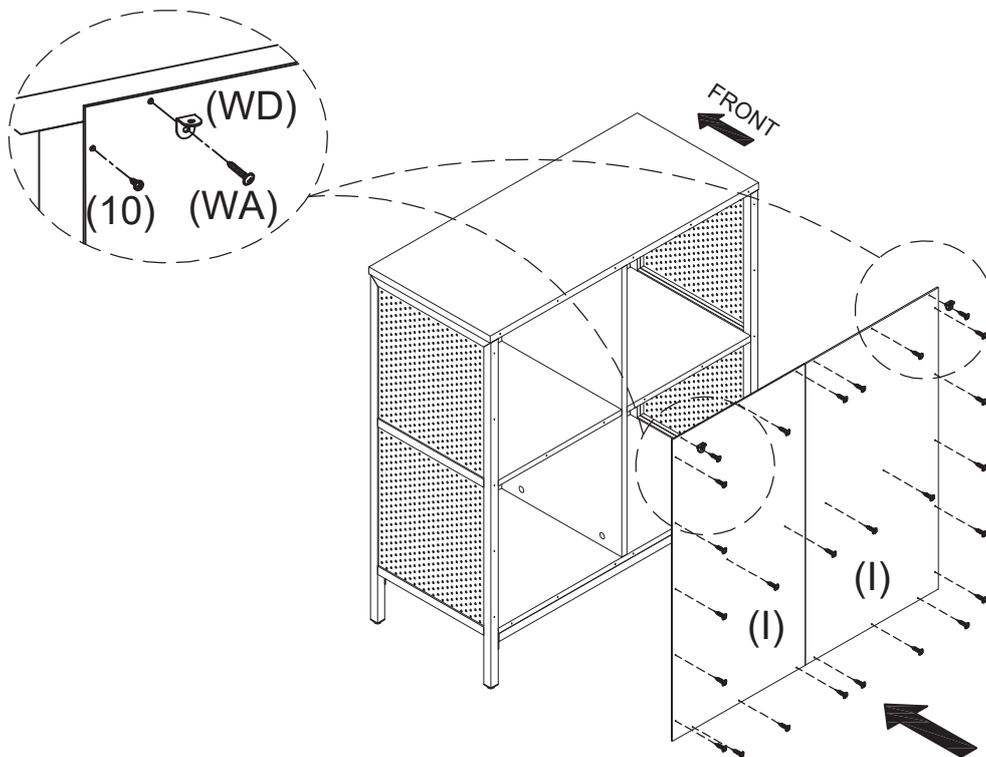


FULLY TIGHTEN ALL WOOD SCREWS (10) & ALL MACHINE SCREWS (WA)

STEP 11

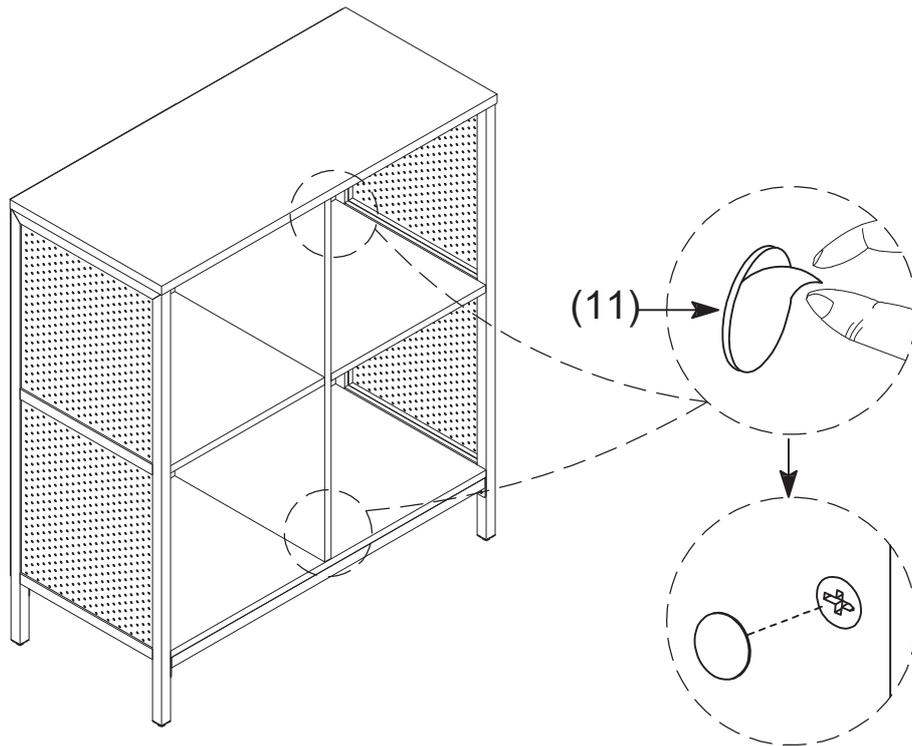

ANTI TIP KIT INSTALLATION

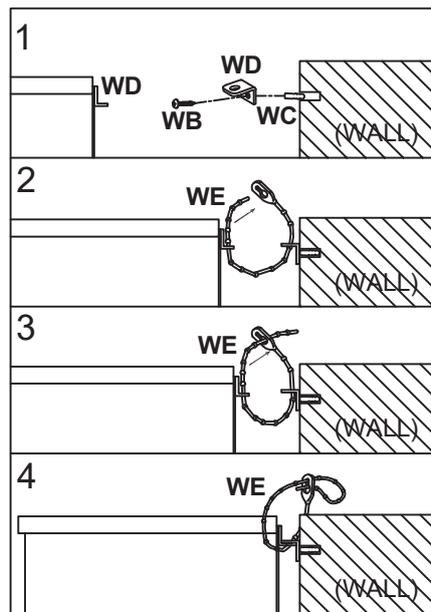

Place product in desired location

STEP 1: Drill 2 (two) 1/4" pilot holes adjacent to corresponding Mounting Brackets (WD) on rear of product.

STEP 2: Insert one Wall Anchor (WC) into each pilot hole. Note: You may need to gently tap anchors into pilot holes using a rubber mallet.

STEP 3: Secure two Mounting Brackets (WD) to wall using one Wood Screw (WB) for each Mounting Bracket (WD). **FULLY TIGHTEN SCREWS.**

STEP 4: Connect corresponding Mounting Brackets (WD) using Mounting Straps (WE). Tighten as desired before locking into place.