


Package contents

- PC speakers
- *Quick Setup Guide*

Features

Back view

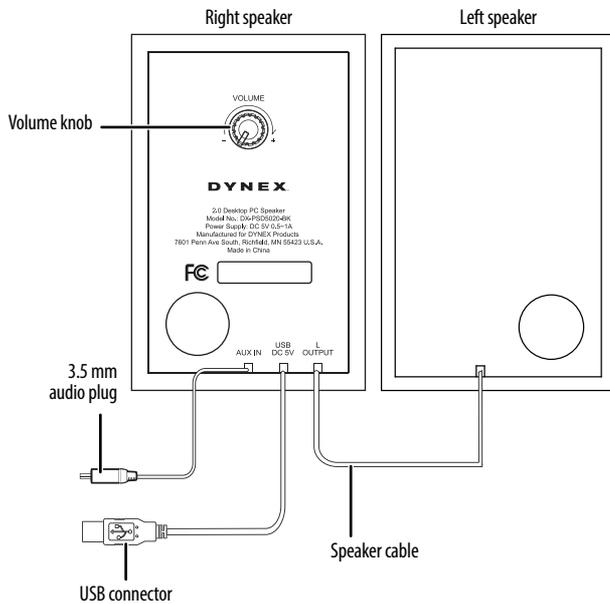


Connecting your speakers

- 1 Place the speakers on each side of your sound source (such as a computer, laptop, or tablet.)
- 2 Connect the USB connector to your power source (such as a desktop, laptop, or adapter) to power your speakers.


Notes:

- The USB cable does not carry sound between devices.
- The USB cable must be connected to a power source even if you are using a tablet or smartphone.

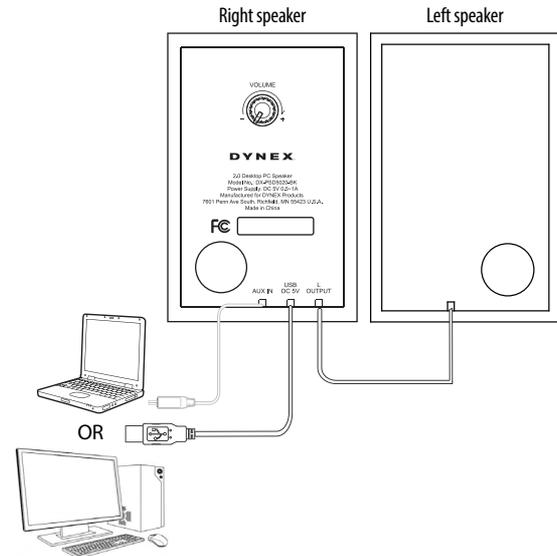


3 Connect the 3.5 mm audio plug to your sound source's audio out or headphone jack.

Note: Your power source and sound source may be the same device.

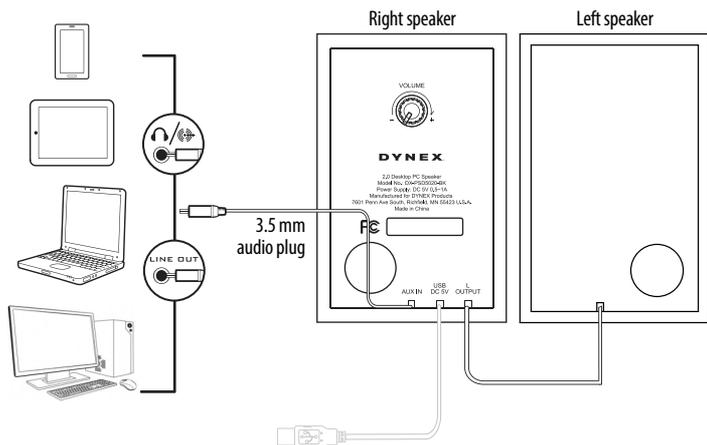

Using your speakers

- 1 Play audio using your sound source. Make sure that your sound source's volume (on your PC or smartphone) is set to at least 50%.
- 2 Turn the volume knob to adjust your speakers' volume.

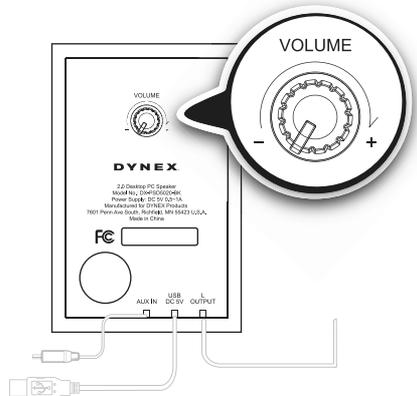

Safety information

- Do not connect the USB power plug into the adapter or computer until all connections are made.
- Keep the speakers away from liquids. Do not place objects filled with liquids (such as a vase or glass) on top of them.

Troubleshooting

PROBLEM	SOLUTION
No power.	<ul style="list-style-type: none"> • Make sure that your power source is turned on and the USB connector is plugged in correctly. • Connect the USB plug into a different USB port.
No sound.	<ul style="list-style-type: none"> • Make sure that the speakers are getting power. Check above steps. • Make sure that all cables are not damaged and are securely plugged into the correct jacks. The audio cable is used for the audio source and the USB plug is used for power only. It will not provide the sound signal. • Make sure that your source device is playing and the volume is turned up and not muted. • Try connecting the speakers to a different sound source to verify if the issue is with the speakers or the sound source. • Make sure that your power source and sound source device(s) are turned on.
Sound plays only out of one speaker.	<ul style="list-style-type: none"> • Adjust the volume balance setting on your sound source until it is centered. • Make sure that all the connections are correct and secure.
Poor sound quality.	<ul style="list-style-type: none"> • Make sure that all cables are not damaged and are securely plugged into the correct jacks. • Adjust the audio settings on the sound source (such as a computer, MP3 player, smartphone).

Specifications

Dimensions (D×W×H): 3.3 × 2.3 × 5.1 in. (8.5 × 8.3 × 13 cm)

Weight: 1.3 lbs. (0.6 kg)

Frequency response: 220Hz~16kHz

Audio or RMS Power: 1.5W×2

One-year limited warranty

Visit www.dynexproducts.com for details.

Contact Dynex:

For customer service, call 1-800-305-2204 (U.S. and Canada) or

01-800-926-3020 (Mexico)

www.dynexproducts.com

DYNEX is a trademark of Best Buy and its affiliated companies. Registered in some countries. Distributed by Best Buy Purchasing, LLC, 7601 Penn Ave South, Richfield, MN 55423 U.S.A. ©2014 Best Buy. All rights reserved. Made in China