 


Chain Link Stainless Steel Band

PACKAGE CONTENTS

 
- Chain Link Stainless Steel Band Adjustment tool
- Pin-removal rods
- Quick Setup Guide

OVERVIEW Adjustment Tool




ADJUSTING THE LENGTH OF YOUR BAND


- 1 To remove links, widen the adjustment tool to make room for your band by turning the knob counterclockwise.
- 2 With your band's arrows facing up and pointing away from the knob, place the band in the adjustment tool's slot, then align the pin-removal rod with a pin in the band.



 
3 Turn the knob clockwise until the pin is partially pushed out.



 - **4** Turn the knob counterclockwise to remove the band, then pull the loosened pin out.
- **5** Repeat steps 2–4 until your band is the desired length. Store the unused pins and links for future use.
- **6** To reattach the band pieces, push the links together with their arrows facing up, then slide the pin partially into place.



 7 Replace the band in the adjustment tool with the arrows facing up and pointing toward the knob, then align the pin with the pin-removal rod and turn the knob clockwise to push the pin into place.



ATTACHING YOUR BAND TO YOUR APPLE WATCH®

- ${\bf 1}$ Remove the existing band from your Apple Watch.
- **2** With the Apple Watch screen and straps' black dots facing up, slide the straps into the Apple Watch.



REPLACING THE PIN-REMOVAL ROD

- 1 Open the bottom cover of the adjustment tool to find two extra pin-removal rods.
- **2** Use pliers to pull out the removal rod and replace it with a spare rod.

ONE-YEAR LIMITED WARRANTY

Visit <u>www.insigniaproducts.com</u> for details.

CONTACT INSIGNIA:

For customer service, call 1-877-467-4289 (U.S. and Canada) www.insigniaproducts.com

INSIGNIA is a trademark of Best Buy and its affiliated companies. Distributed by Best Buy Purchasing, LLC 7601 Penn Ave South, Richfield, MN 55423 U.S.A. ©2023 Best Buy, All rights reserved.