

INSIGNIA™

10" Dual Screen Portable DVD Player

NS-DD10PDVD19



Before using your new product, please read these instructions to prevent any damage.

Contents

Introduction	3
IMPORTANT SAFEGUARDS	3
Features	6
Package contents	6
About discs	6
Front	7
Left side	8
Back	9
Remote control	10
Using your remote control	12
Preparing the remote control	12
Replacing the remote control battery	12
Aiming your remote control	13
Setting up your DVD player	14
Connecting to AC power	14
Connecting to a 12V power outlet	14
Connecting your DVD players	15
Mounting your DVD player in a vehicle	15
Connecting headphones	16
Connecting to a TV or monitor	17
Using your DVD player	18
Turning your player on	18
Playing a DVD or Audio CD	18
Controlling DVD or Audio CD playback	18
Selecting a chapter or track	19
Viewing photos	19
Setting up a playback program	19
Using zoom mode	19
Using the menus	20
Adjusting general setup options	20
Selecting the audio mode	21
Adjusting video options	21
Setting video and audio preferences	22
Using parental controls	23
Turning parental controls on or off	23
Setting up a parental control password	24
Changing the parental control password	24
Setting a parental control rating	25
Maintaining your player	26
Cleaning your player	26
Cleaning discs	26
Troubleshooting	26

Specifications	27
Legal notices	28
ONE-YEAR LIMITED WARRANTY	29

Introduction

Congratulations on your purchase of a high-quality Insignia product. Your NS-DD10PDVD19 represents the state of the art in DVD player design and is designed for reliable and trouble-free performance.

IMPORTANT SAFEGUARDS

- 1 Read these instructions.
- 2 Keep these instructions.
- 3 Heed all warnings.
- 4 Follow all instructions.
- 5 Do not use your DVD player near water.
- 6 Clean only with a dry cloth.
- 7 Do not block any ventilation openings. Install in accordance with the manufacturer's instructions. The openings should never be blocked by placing your DVD player on a cushion, sofa, or other similar surface.
- 8 Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9 The AC adapter and vehicle charger are the disconnecting devices. The plugs must remain readily operable.
- 10 Protect the power cord from being walked on or pinched particularly at plugs, outlets, and the point where they exit from your DVD player.
- 11 Only use attachments/accessories specified by the manufacturer.
- 12 Do not place your DVD player on an unstable cart, stand, tripod, bracket, or table. It may fall, resulting in possible damage or injury.
- 13 Never place heavy or sharp objects on the LCD panel or frame.
- 14 Unplug your DVD player during lightning storms or when unused for long periods of time.
- 15 Refer all servicing to qualified service personnel. Servicing is required when your DVD player has been damaged in any way, such as when the power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into your player, your player has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 16 Remote control batteries should not be exposed to excessive heat such as sunshine, fire, or the like.
- 17 Your DVD player should not be exposed to dripping or splashing, and no objects filled with liquids, such as vases, should be placed on your player.
- 18 **WARNING:** Excessive sound pressure from earphones or headphones can cause hearing loss.



WARNINGS

Electric shock hazard

To reduce the risk of fire or electric shock, do not remove the cover or back. Do not expose your DVD player to rain or moisture. There are no user-serviceable parts inside. Refer servicing to qualified service technicians.

Handling the LCD panel

- Never place heavy or sharp objects on the LCD panel or frame.
- Your DVD player's screen is made of glass. Do not drop your player or hit, jolt, or press hard against the LCD panel. If the screen breaks, be careful of broken glass.
- If the LCD panel is broken, make absolutely sure that you do not touch the liquid in the panel. This may cause skin inflammation.
- If the liquid gets in your mouth, immediately gargle, rinse, and consult with your doctor. Also, if the liquid gets in your eyes or touches your skin, consult with your doctor after rinsing for at least 15 minutes or longer in clean water.

Replacement parts

When replacement parts are required, make sure that the service technician uses replacement parts specified by the manufacturer that have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, personal injury, or other hazards.

Safety check

After completing any service or repair to your DVD player, ask the service technician to perform routine safety checks to determine that your player is in correct operating condition.

Servicing

These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.

End of life directives

Your DVD player may contain materials that are regulated for environmental reasons. Your player also contains materials that can be recycled and reused. To help protect the environment, contact your local authorities for information about disposal or recycling and about finding a recycler in your area before you dispose of your player.

SAVE THESE INSTRUCTIONS

Safety precautions

WARNING: Your DVD player uses a low-level laser system. Use of controls, adjustments, or performance of procedures other than those specified in this *User Guide* may result in hazardous radiation exposure.

WARNING: To prevent direct exposure to the laser beam, do not open the enclosure. Visible laser radiation is present when open.

WARNING: Never stare directly into the laser beam.

WARNING: Class 1 laser product.

CAUTION: Do not install your player in a confined space such as a book case or similar unit.

WARNING: Chemical Burn Hazard. Do not ingest the battery.

- The remote control supplied with your DVD player contains a coin/button cell battery. If the battery is swallowed, it can cause severe internal burns in just two hours and can lead to death.
- If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.
- Keep new and used batteries away from children.
- If the battery compartment does not close securely, stop using your DVD player and keep it away from children.

Features

- Two 10-inch LCD screens let you mirror a video on both displays or watch separately
- Mounting straps secure the screens to your vehicle's headrests
- Headphone jack on each screen for private listening
- 3.5 mm to RCA (AV) adapter lets you connect to a larger screen
- Travel case for easy portability
- Powered through your vehicle charger or a wall outlet
- Works with DVDs, DVD+R/RWs, CDs, JPEGs, and MP3s

Package contents


- 10" Portable DVD Players (2)
- AV connecting cable to connect your players
- AV (RCA) adapter cable to connect your player to a TV or monitor
- Remote controls (2)
- AC/DC power adapters (2)
- DC vehicle power adapter
- Car headrest mounts (2)
- Travel storage case
- *Quick Setup Guide*

About discs


- Your DVD player can play DVDs and Audio CDs (including CD-R and CD-RW).
- Your player is designed and manufactured to respond to the Region Management Information that is encoded on DVDs. If the region number printed on the DVD does not correspond to the region number of your player, it cannot play that disc. The region number of your player is 1.
- If the DVD is a region 1 disc, it may have the  logo on the packaging.
- Do not use irregularly shaped discs, such as heart-shaped or star-shaped discs, because they may cause your player to malfunction.
- Do not stick paper, tape, or glue on a disc.
- Do not expose a disc to direct sunlight or heat sources.
- Do not touch the surface of a disc. Handle a disc by its edge.
- Clean a disc by wiping the disc from the center out with a cleaning cloth.
- Remove a disc from your player and store it in its case after playing.

Some playback operations may be intentionally limited by software producers. Because your player plays discs according to the disc contents the software producers designed, some playback features may not be available. Refer to the instructions supplied with the discs.


Front

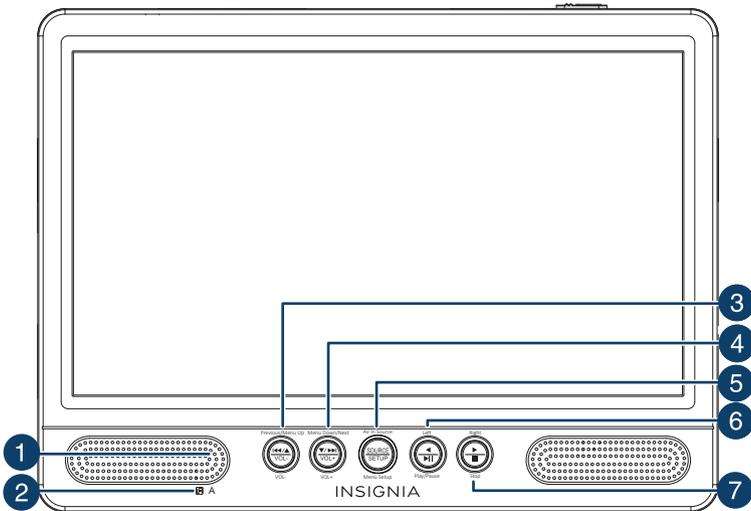

#	BUTTON	DESCRIPTION
1	Power indicator	Lights blue when your DVD player is turned on.
2	Remote sensor	Point the remote control towards the remote sensor on the front of your DVD player.
3	Up/Previous/VOL-	In playback mode, press to go to the previous chapter or track on a disc. Press and hold to decrease the volume. In menus, press to move up.
4	Down/Next/VOL+	In playback mode, press to go to the next chapter or track on a disc. Press and hold to increase the volume. In menus, press to move down.
5	Source/Setup	Press to switch between AV mode (to play the same disc on both players) and disc mode (to watch a different disc on each player). Press and hold to open or close the setup menu.
6	Left/Play/Pause	In playback mode, press and hold to start or pause playback. In menus, moves left.
7	Right/Stop	In playback mode, press and hold to stop playback. If you press this button once, then press the Play button, playback resumes where it stopped. If you press this button twice, then press the Play button, playback begins at the beginning of the disc. In menus, moves right.

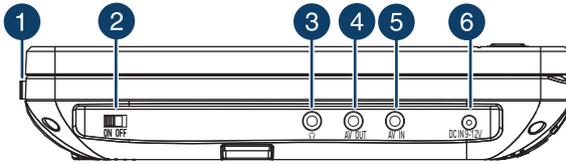Left side

#	ITEM	DESCRIPTION
1	OPEN latch	Slide to open the disc tray.
2	ON/OFF switch	Slide to turn your player on or off.
3	🎧 (headphone out) jack	Plug headphones into this jack.
4	AV OUT jack	Connect either the AV connecting cable to this jack to share playback with the other DVD player or the AV adapter cable to view playback on a TV or monitor.
5	AV IN jack	Connect the AV connecting cable to this jack to receive playback from the other DVD player.
6	DC IN 9-12V power connector	Plug an AC adapter or 12V car adapter into this jack.

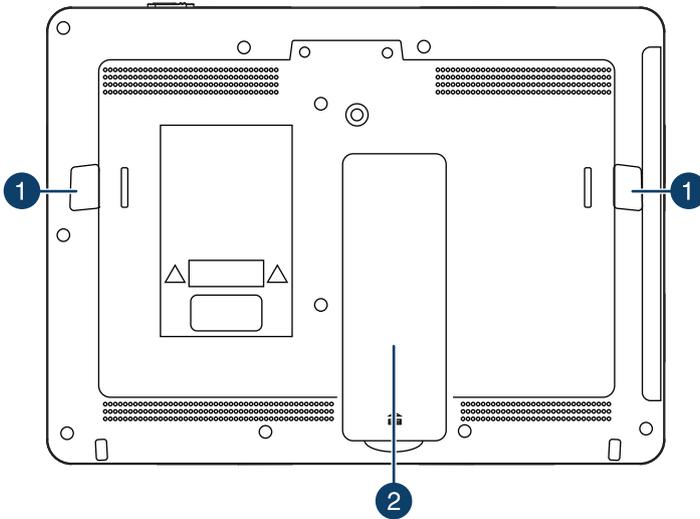Back


#	ITEM	DESCRIPTION
1	Strap slots	Slide the mounting straps through these slots when installing your player in a vehicle.
2	Stand	Pull out to set your player on a desktop or table.

Remote control

Your players come with two remote controls, labeled **A** and **B**. Your players are also labeled **A** and **B** on the fronts. Make sure that you use the correct remote control for the player you are using.

Notes:

- When you connect your players, you plug the AV connecting cable into the **AV OUT** jack on one player and the **AV IN** jack on the other player. See [Connecting your DVD players](#) on page 15. The player with the **AV OUT** connection is the master player, and the player with the **AV IN** connection is the secondary player.
- Menus and other displays on your master player appear on your secondary player, but changing settings on your master player does not change settings on your secondary player.
- When your players are connected, the only remote control buttons that work for your secondary player are **VOL-**, **VOL+**, **MUTE**, **SOURCE**, **MODE**, and **SETUP**.

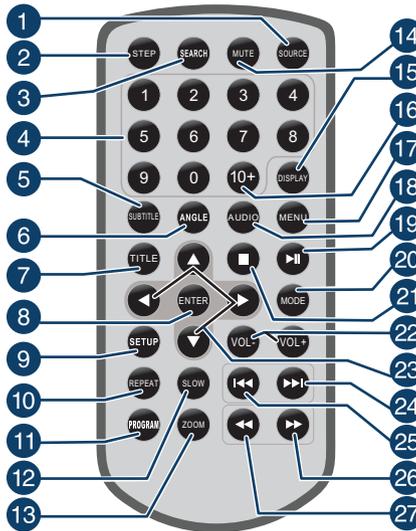

#	BUTTON	DESCRIPTION
1	SOURCE	Toggles the video input between the DVD and AV IN.
2	STEP	Pauses playback and advances the DVD picture one frame at a time.
3	SEARCH	DVD: Goes to a specific time, title, or chapter. Audio CD: Goes to a specific track. See Selecting a chapter or track on page 19.
4	Numbers	Playback mode: Selects a title, chapter, or track number. Menus: Selects a numbered menu item.

#	BUTTON	DESCRIPTION
5	SUBTITLE	During DVD playback, selects a subtitle language, if available on the DVD.
6	ANGLE	During DVD playback, selects a viewing angle, if available on the DVD.
7	TITLE	Returns to the title menu on a DVD.
8	ENTER	Confirms selections.
9	SETUP	Opens or closes the menu.
10	REPEAT	During playback, selects the repeat mode. DVD: You can select CHAPTER, TITLE, ALL, or OFF. Audio CD: You can select TRACK, ALL, or OFF.
11	PROGRAM	Opens the <i>PROGRAM</i> menu, where you can specify the playback order of titles, chapters, or tracks. See Setting up a playback program on page 19.
12	SLOW	Enters slow playback. Each time you press this button, the speed changes (1/2, 1/4, 1/8, 1/16, and normal playback).
13	ZOOM	When playing a DVD or viewing a JPEG, enlarges or shrinks the picture. See Using zoom mode on page 19.
14	MUTE	Turns off the sound. Press this button again to unmute the sound.
15	DISPLAY	DVD: Displays the DVD playtime and status information. Audio CD: Displays the elapsed and remaining time for the playing track and for the entire CD.
16	10+	Selects a double-digit chapter or track number. For example, to select 12, press this button, then press the 2 button.
17	MENU	Returns to the root menu on a DVD.
18	AUDIO	DVD: Selects a different audio language or audio track, if available. Audio CD: Selects an audio channel (Left, Right, Mix, or Stereo).
19	▶II (play/pause)	Starts or pauses playback.
20	MODE	Opens the <i>VIDEO SETUP PAGE</i> where you can adjust picture settings. See Adjusting video options on page 21.
21	■ (stop)	Stops playback. If you press this button once, then press ▶II, playback resumes where it stopped. If you press this button twice, then press ▶II, playback begins at the beginning of the disc.
22	VOL-/VOL+	Increases or decreases the volume.
23	▲ ▼ ◀ ▶	Navigates in menus.


#	BUTTON	DESCRIPTION
24	▶▶ (skip forward)	Goes to the next chapter or track.
25	◀◀ (skip reverse)	Goes to the previous chapter or track.
26	▶▶▶ (forward)	Press to fast-forward on a disc. Each time you press this button, the speed changes (2x to 4x to 8x to 16x to 32x to normal playback). You can also press ▶▶▶ to exit fast-forward mode.
27	◀◀◀ (reverse)	Press to fast-reverse on a disc. Each time you press this button, the speed changes (2x to 4x to 8x to 16x to 32x to normal playback). You can also press ▶▶▶ to exit fast-reverse mode.

Using your remote control

Preparing the remote control

The battery comes pre-installed in the remote control. Before you can use the remote control:

- Pull the plastic tab out of the battery compartment.

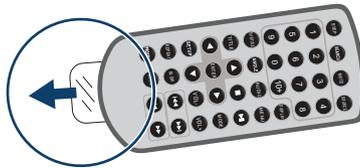

Replacing the remote control battery

The remote control uses a CR2025 (3V) lithium battery.

- 1 Squeeze and hold the battery release tab.
- 2 Pull out the battery compartment, and remove the old battery.
- 3 Insert a new CR2025 battery with the + facing upward.
- 4 Insert the battery compartment back into the remote control.



Aiming your remote control


- Your players come with two remote controls, labeled **A** and **B**. Your players are also labeled **A** and **B** on the fronts. Make sure that you use the correct remote control for the player you are using.

Note: For example, remote control A must be used with DVD player A, and remote control B must be used with DVD player B.

- Aim the remote control at the sensor on the front of your DVD player.
- Make sure that the remote is less than 9.8 ft. (3 m) away from your DVD player.

Note: This distance decreases when you aim the remote at an angle. For example, the maximum distance is 8.2 ft. (2.5 m) at a 15° angle.

- Make sure that the remote is within 15° of the center of the DVD player.

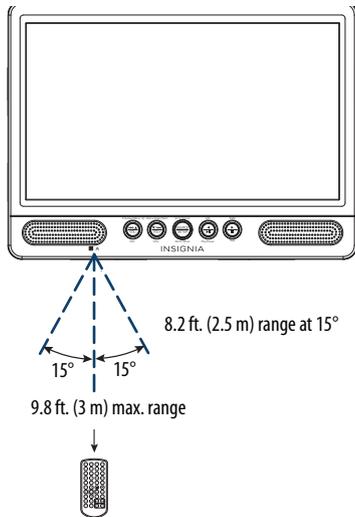


Setting up your DVD player

Connecting to AC power

CAUTIONS:

- When the AC adapter is plugged into a power outlet, your player is not completely disconnected from power, even when the power is turned off.
- Make sure that the adapter is easily accessible during use.
- Do not use the included AC adapters with other equipment.
- When you do not plan to use your players for an extended period of time, unplug the adapters from the wall outlet.

- 1 Plug one end of the included AC adapter into the **DC IN** jack on the side of your player, then plug the other end into an AC outlet.

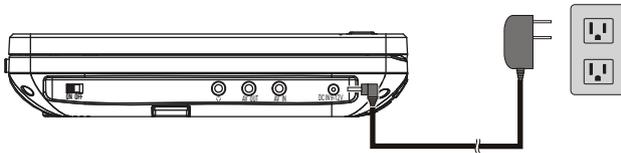

- 2 Repeat step 1 to connect your other player.
- 3 Slide the **ON/OFF** switch on each player to the **ON** position.

Connecting to a 12V power outlet

- 1 Plug the end of the included Y-type DC vehicle power adapter (the end with two connectors) into the **DC IN** jacks on your players, then the other end into a 12V power outlet (for example, a vehicle power outlet).




- 2 Turn on your player(s).

Connecting your DVD players

- 1 Plug the AV connecting cable to the **AV OUT** jack on one player (either DVD player A or B) and to the **AV IN** jack on the other player.


Note: Either player A or B can be the master player. The player with the AV OUT connection is the master player, and the player with the AV IN connection is the secondary player.

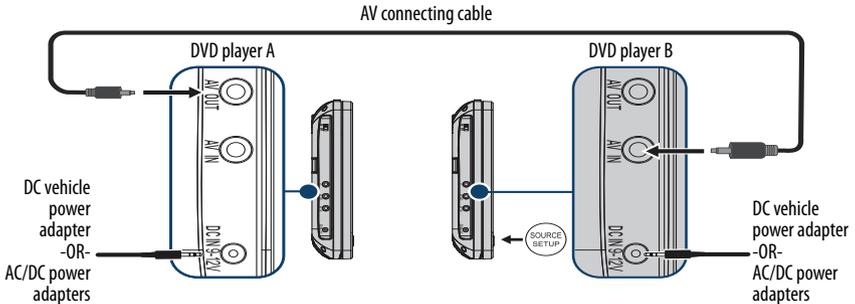


- 2 Turn on your players.

Mounting your DVD player in a vehicle


- 1 Loosen the straps of the headrest mount.

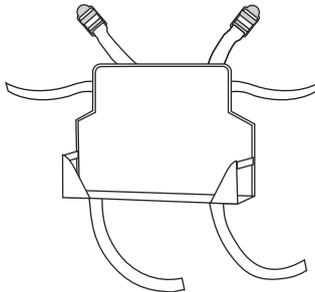


- 2 Insert your DVD player into the front of your headrest mount.

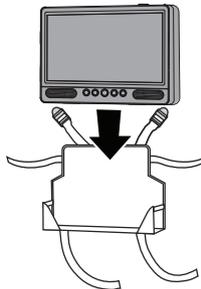

- Slide the horizontal straps **A** and **B** through the slots on the back of the DVD player, then fold and secure them onto the back of the headrest mount.

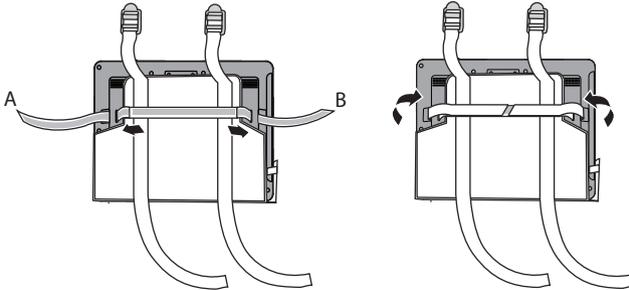


- Fit the straps E1, E2, F1, and F2 around the headrest and thread them through the plastic buckles. Pull the straps tight.

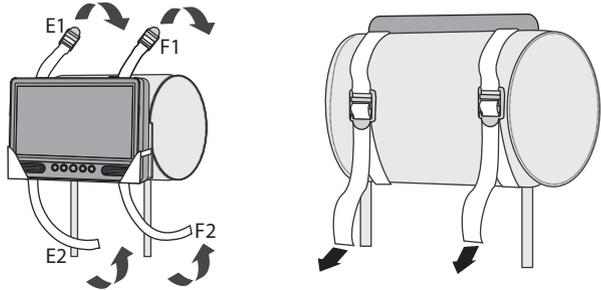

Connecting headphones

When headphones are plugged into the headphone jack, sound from the built-in speakers is muted.

- Plug your headphones (not included) into the  (headphone) jack on the side of your DVD player.

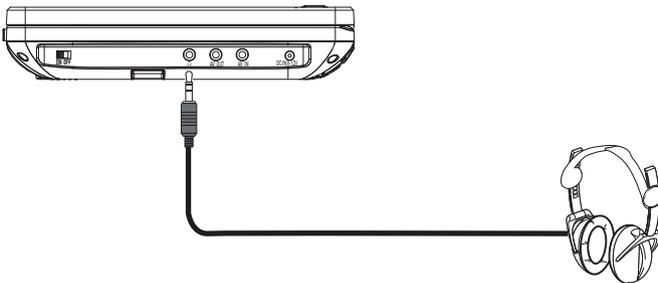


- Repeat step 1 for the other player.

Connecting to a TV or monitor

You can connect your player to a TV or monitor so you can watch DVDs or view photos on the TV or monitor.

- 1 Plug the AV adapter cable into the **AV OUT** jack on your DVD player.

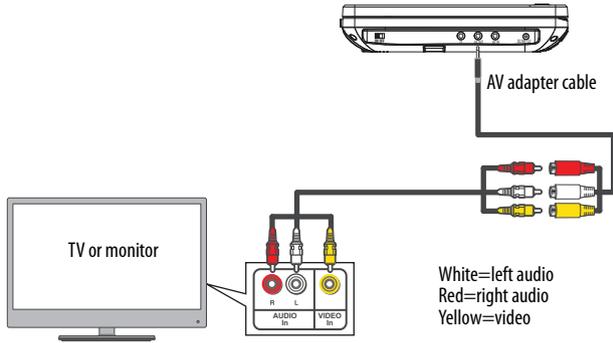

- 2 Plug an AV cable (not included) into the other end of the AV adapter cable. Make sure that the colors on the connectors match.
- 3 Plug the other end of the AV cable into the AV jacks on the TV or monitor, making sure to match the colors on the connectors with the jacks.
- 4 Turn on the TV or monitor.

Note: You may need to select the correct input on the TV or monitor.

Using your DVD player

Turning your player on

- 1 Slide the **ON/OFF** switch on the side of your player to the **ON** position.
- 2 After use, slide the **ON/OFF** switch to the **OFF** position.

Playing a DVD or Audio CD

Notes:

- Most DVDs and your players have region codes that help control illegal distribution of DVDs. The region code for your player is 1. You can only play DVDs with a region code of 1 or ALL. The region code for a DVD is usually printed on the DVD or the DVD packaging.
- This *User Guide* explains the basic instructions for operating your players. Depending on how a DVD is produced, the DVD may have specific or limited playback features and may not respond to all your commands. THIS IS NOT A DEFECT. Refer to the instructions accompanying a specific DVD for more information about the options available on that DVD.

- 1 Make sure that your player is connected to power.
- 2 Slide the **ON/OFF** switch to the **ON** position.
- 3 Slide the **OPEN** switch. The front and back of your player separate to give access to the disc tray.
- 4 Place a disc, label side up, in the disc tray, then press the player front and back together until you hear a click. The disc starts playing automatically.

Controlling DVD or Audio CD playback

Note: If using the controls on your DVD player, press and hold the buttons to use the **VOL-**, **VOL+**, **SETUP**, **▶||** (play/pause), and **■** (stop) functions.

- Press **■** (stop) to stop playback. If you press this button once, then press **▶||**, playback resumes playing where it stopped. If you press this button twice, then press **▶||**, playback begins at the beginning of the disc.
- Press **▶||** (play/pause) to pause playback. Press this button again to resume playback.
- Press **▶▶** (skip forward) or **◀◀** (skip back) to go to the next or previous chapter or track.
- Press **▶▶** (forward) or **◀◀** (reverse) to fast-forward or fast-reverse on a disc. Each time you press this button, the speed changes (2x to 4x to 8x to 16x to 32x to normal playback). You can also press **▶||** to exit fast-forward mode.

Selecting a chapter or track

You can select a DVD title or chapter or an Audio CD track that you want to play.

- 1 Press **SEARCH**. You can select:
 - **For DVDs:**
 - **TIME**—Goes to a selected time.
 - **CHAPTER**—Goes to a selected chapter.
 - **TITLE**—Goes to a selected title.
 - **For Audio CDs:**
 - **DISC GOTO**—Goes to a selected time on a disc.
 - **TRACK GOTO**—Goes to a selected time within a track.
 - **SELECT TRACK**—Goes to a selected track.
- 2 Use your remote control to enter a time, chapter, title, or track number. The list closes and your player goes to the time, chapter, title, or track you selected.

Viewing photos

You can view photos copied as JPEG files to a CD or DVD on your DVD player.

- 1 Insert the CD containing the photos into the disc tray. Your DVD player reads the CD and displays a list of the photos on the CD.
- 2 Press **▲** or **▼** to select a photo, then press **ENTER**. The photo you selected is displayed first, then your player displays the other photos in a slideshow.
- 3 To control playback:
 - Press **▶▶** (skip forward) or **◀◀** (skip back) to select a photo.
 - Press **◀** or **▶** to rotate the photo.
 - Press **▲** to flip the photo horizontally or **▼** to flip the photo vertically.

Setting up a playback program

You can set up a playback program to play DVD titles or chapters or Audio CD tracks in a specific order.

- 1 Press **PROGRAM**. The *PROGRAM* menu opens.
- 2 Use the number keys to enter title, chapter, or track numbers in the order you want them to play.
- 3 Select the **START** option. The titles, chapters, or tracks play in the order you specified.
- 4 To resume normal playback, press **PROGRAM**, then select **STOP**.
- 5 Press **PROGRAM** again to close the *PROGRAM* menu.

Using zoom mode


You can enlarge or shrink the picture displayed on the screen.

- For a DVD, press **ZOOM** during playback or still playback to activate the Zoom function. A square frame appears briefly in the right bottom of the picture. Each press of the **ZOOM** button changes the picture size in the following sequence: 2x to 3x to 4x to 1/2 to 1/3 to 1/4 to normal size.
- For a JPEG, each time you press **ZOOM**, the picture size changes in the following sequence: 100% to 125% to 150% to 200% to 75% to 50%, then back to normal size (100%).
- Use **▲ ▼ ◀ ▶** to navigate around the picture.

Using the menus

Adjusting general setup options

- 1 Press **SETUP**.
- 2 Use **◀** or **▶** to select **GENERAL**, then press **ENTER**.

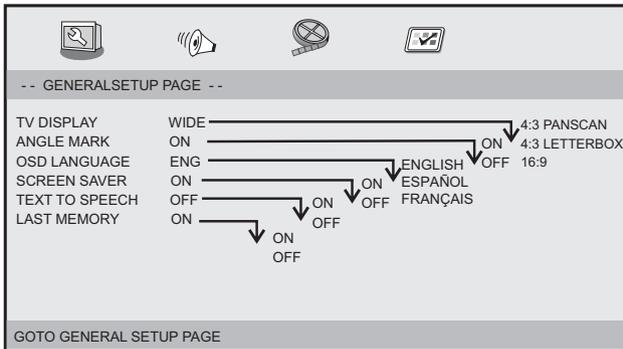

- 3 Press **▲** or **▼** to select an option, then press **ENTER**. You can select:
 - **TV DISPLAY**—Selects the aspect ratio. You can select:
 - **4:3 PANSKAN**: When you play wide-screen video, this mode crops the right and left sides of the image so you can view the image on a conventional screen.
Some wide-screen DVDs that do not permit playback in PanScan mode, and the video automatically plays in letterbox mode (black bands on the top and bottom of the screen).
 - **4:3 LETTERBOX**: When you play wide-screen video in this mode on a conventional screen, black bands appear on the top and bottom of the screen.
 - **16:9: wide screen display**: Select this option to play wide-screen videos on a wide-screen TV.

Notes:


- The visible picture size is preset on a DVD. Therefore the playback picture of some DVDs may not conform to the picture size you select.
- When you play DVDs recorded in the 4:3 aspect ratio, the playback picture always appears in the 4:3 aspect ratio regardless of the **TV DISPLAY** option setting.

- **ANGLE MARK**—If this option is turned on and the DVD you are watching has multiple viewing angles, an icon appears in scenes that have multiple viewing angles. You can select **ON** or **OFF**.
- **OSD LANGUAGE**—Selects the menu language. You can select **ENGLISH**, **ESPAÑOL**, or **FRANÇAIS**.
- **SCREEN SAVER**—When this option is turned on, your player displays a screen saver when the same image stays on the screen for five minutes. You can select **ON** or **OFF**.
- **TEXT TO SPEECH**—Your DVD player provides audio descriptions of menus and some remote control functions. You can select **ON** or **OFF**.

- **LAST MEMORY**—When this option is turned on and you open the disc tray, your player remembers where you stopped. If you close the tray with the same disc loaded, your player resumes playing where you stopped. You can select **ON** or **OFF**.
- 4 Use **▲** or **▼** to select a setting, then press **ENTER**.
 - 5 Press **SETUP** to close the menu.

Selecting the audio mode


- 1 Press **SETUP**.
- 2 Press **◀** or **▶** to select **AUDIO**, then press **ENTER**.

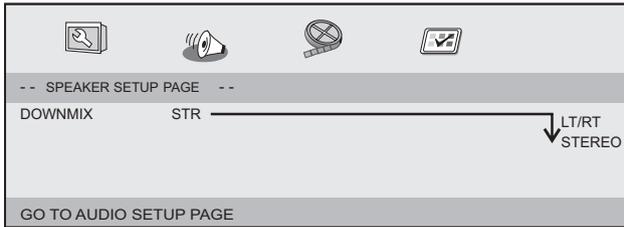

- 3 Press **▲** or **▼** to select **DOWNMIX**, then press **ENTER**.
- 4 Press **▲** or **▼** to select a stereo analog audio mode. You can select:
 - **LT/RT**—Select this option if your DVD Player is connected to external speakers or a sound system with a Dolby Pro Logic decoder.
 - **STEREO**—Select this option when using the two built-in speakers.
- 5 Press **ENTER** to save your setting, then press **SETUP** to close the menu.

Adjusting video options

- 1 Press **SETUP**.
- 2 Press **◀** or **▶** to select **VIDEO**, then press **ENTER**.

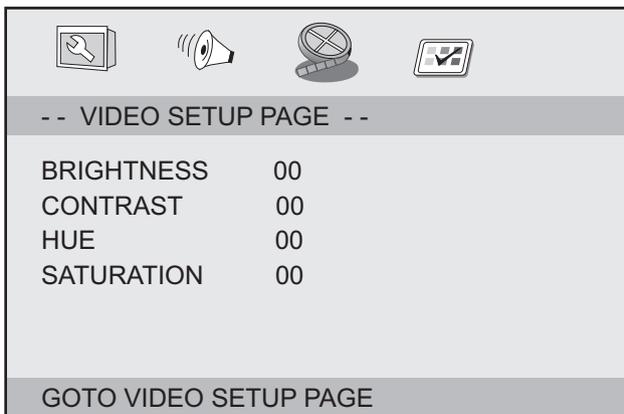


- 3 Press **▲** or **▼** to select an option, then press **◀** or **▶** to adjust the setting. You can select:
 - **BRIGHTNESS**—Increases the brightness to add more light to dark areas of the picture or decreases the brightness to add more dark to light areas of the picture.
 - **CONTRAST**—Increases the contrast level to adjust the white areas of the picture or decreases the contrast level to adjust the black areas of the picture.
 - **HUE**—Increases the color level to add more green to skin tones or decreases the color level to add more purple to skin tones.
 - **SATURATION**—A high saturation level makes vivid colors brighter.
- 4 Press **ENTER** to save your setting, then press **SETUP** to close the menu.

Setting video and audio preferences

Note: You can only access the *PREFERENCE PAGE* when there is no disc in the disc tray.

- 1 Press **SETUP**.
- 2 Use **◀** or **▶** to select **PREFERENCE**, then press **ENTER**.

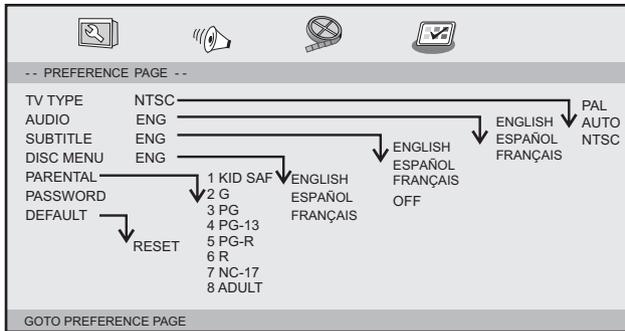


- 3 Press **▲** or **▼** to select an option, then press **ENTER**. You can select:
 - **TV TYPE**—Selects the color system your TV uses. You can select:
 - **PAL**—Select this option if the connected TV uses the PAL system. Your player changes the video signal from a NTSC disc and outputs the signal in the PAL format. This type of color system is typically used in Europe.
 - **AUTO**—Select this option if you want your player to automatically change the video signal based on the type of disc you are playing.
 - **NTSC**—Select this option if the connected TV uses the NTSC system. Your player changes the video signal from a PAL disc and outputs the signal in the NTSC format. This type of color system is typically used in the U.S.
 - **AUDIO**—Selects the audio language. If the language you select is not recorded on the DVD, your player plays the default audio language. You can select **ENGLISH**, **ESPAÑOL**, or **FRANÇAIS**,
 - **SUBTITLE**—Selects a language for subtitles (if subtitles are available on the DVD). If the language you select is not available on the DVD, your player displays subtitles in the default language. You can select **ENGLISH**, **ESPAÑOL**, **FRANÇAIS**, or **OFF**.

- **DISC MENU**—Selects a language for a disc menu (if multiple languages are available on the DVD). If the language you select is not available on the DVD, your player displays the default language. You can select **ENGLISH**, **ESPAÑOL**, or **FRANÇAIS**.
 - **PARENTAL**—Some DVDs may have parental levels assigned to the complete DVD or to certain scenes on the DVD. This feature lets you set a playback limitation level. The rating levels are **KID SAFE**, **G**, **PG**, **PG-13**, **PG-R**, **R**, **NC17**, and **ADULT**. Ratings are country dependent. You can block entire DVDs that are not suitable for your children or have certain DVDs played with alternate scenes. Based on the rating you select, your player automatically displays alternate scenes, if available on the DVD.
 - **PASSWORD**—Lets you create or change a parental control password, or lets you turn the password feature on and off. See [Setting up a parental control password](#) on page 24.
 - **DEFAULT**—Resets all options to the default settings.
- 4 Press **ENTER** to save your setting, then press **SETUP** to close the menu.

Using parental controls

Turning parental controls on or off

- 1 Press **SETUP**.
- 2 Press **▲** or **▼** to select **PREFERENCE**, then press **ENTER**.
- 3 Press **▲** or **▼** to select **PASSWORD**, then press **ENTER**.

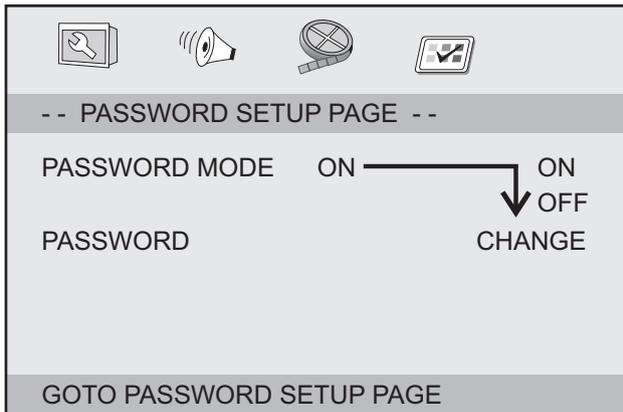

- 4 Press ▲ or ▼ to select **PASSWORD MODE**, then press ▲ or ▼ to select **ON** or **OFF**.


Notes:

- If the **PASSWORD MODE** option is set to **ON**, you must enter the password when you select the **PARENTAL** option to set a rating level.
- If the **PASSWORD MODE** option is set to **OFF**, you do not need to enter the password.
- After you turn on the **PASSWORD MODE** option and set a rating level, you are prompted for your password when watching content with a higher rating.

- 5 Press **ENTER** to save your setting, then press **SETUP** to close the menu.

Setting up a parental control password

- 1 Make sure that the **PASSWORD MODE** option is set to **ON**.
- 2 Press **SETUP**.
- 3 Press ◀ or ▶ to select **PREFERENCE**.
- 4 Press ▲ or ▼ to select **PASSWORD**, then press **ENTER**.

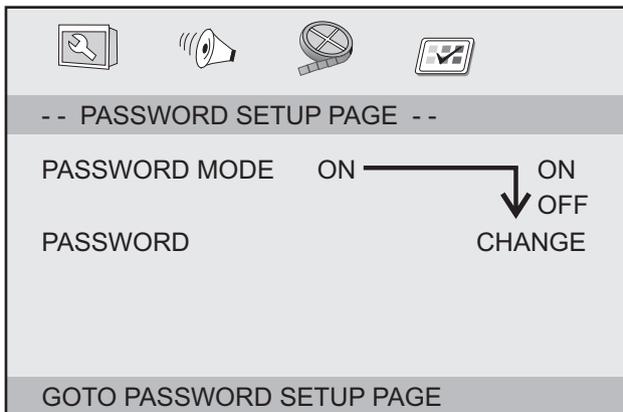

- 5 Use your remote control to enter a four-digit password, then enter the password again.


Note: The master password is **1369**. If you forget your password, you can enter the master password.

- 6 Press **ENTER** to save your password, then press **SETUP** to close the menu.


Changing the parental control password

- 1 Press **SETUP**.
- 2 Press ◀ or ▶ to select **PREFERENCE**.

- 3 Press **▲** or **▼** to select **PASSWORD**, then press **ENTER**.

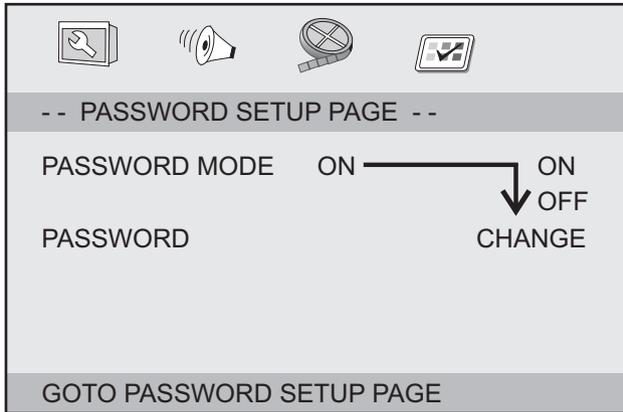

- 4 Press **▲** or **▼** to select **PASSWORD**, then press **ENTER**.

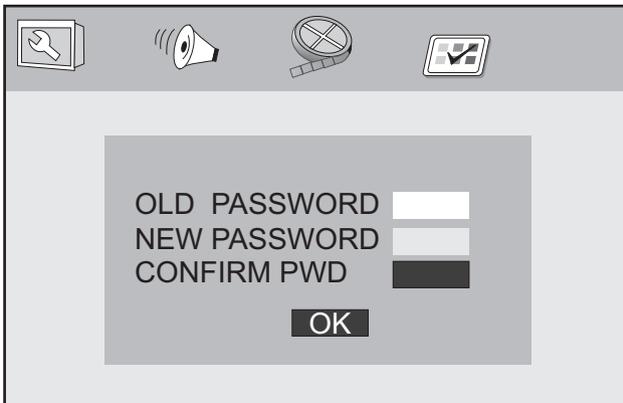

- 5 Use your remote control to enter the old four-digit password, enter the new password, then enter the new password again.

Note: If you forget your password, use the master password (**1369**) for the old password.

- 6 Press **ENTER** to save your password, then press **SETUP** to close the menu.

Setting a parental control rating

- 1 Press **SETUP**.
- 2 Press **◀** or **▶** to select **PREFERENCE**.
- 3 Press **▲** or **▼** to select **PARENTAL**, then press **ENTER**.
- 4 Press **▲** or **▼** to select a parental control rating. You can select **KID SAFE**, **G**, **PG**, **PG-13**, **PG-R**, **R**, **NC17**, and **ADULT**.

- 5 Use the remote control to enter your four-digit password.
- 6 Press **ENTER** to return to the parental control rating menu.

Maintaining your player

Cleaning your player

Clean the outside of your player with a clean cloth, slightly dampened with water.

CAUTION: Do not use liquid cleaners or aerosol cleaners because they may damage your players.

Cleaning discs

- Before playback, wipe the disc outwards from the center with a clean cloth.



Troubleshooting

PROBLEM	SOLUTION
No power	<ul style="list-style-type: none"> • Make sure that the AC adapter is plugged in and connected. • Make sure that your player is turned on.
No sound or distorted sound.	<ul style="list-style-type: none"> • Adjust the volume. • Make sure that all cables are inserted correctly into the appropriate jacks. • Make sure that your player is not paused. • Make sure that your player is not in fast forward or fast reverse mode. • Make sure that your player is not too hot. Let it cool for 30 minutes, then try it again. • Make sure that the headphones are not plugged in.
Cannot fast-forward or fast-reverse through a movie.	<ul style="list-style-type: none"> • You cannot fast-forward through opening credits and warning information at the beginning of a movie. • Some DVDs do not allow rapid scanning or skipping of titles or chapters.
The  icon appears on the screen.	<p>The action you tried cannot be done because:</p> <ul style="list-style-type: none"> • The DVD software does not allow it. • The DVD does not support the feature (for example the Subtitle feature). • The feature is not available at the current point on the DVD. • You entered a title or chapter number that is out of range.

PROBLEM	SOLUTION
Picture is distorted.	<ul style="list-style-type: none"> • During fast-forwarding or fast-reversing, distortion is normal. • The DVD may be damaged. Try another DVD.
Disc does not play.	<ul style="list-style-type: none"> • Make sure that the disc is inserted with the label side up. • Make sure that the disc is compatible with your player. Your player can play DVDs and Audio CDs.
The display has a blue screen.	<ul style="list-style-type: none"> • Press SOURCE to switch the input to DVD.
The remote control is not working.	<ul style="list-style-type: none"> • Make sure that you are using the correct remote control. For example, remote control A must be used with DVD player A, and remote control B must be used with DVD player B. • Make sure that you are aiming the remote control correctly. See "Aiming your remote control" on page 13. • Replace the remote control battery. See "Replacing the remote control battery" on page 12.

Specifications

Specifications subject to change without notice.

Compatible discs	DVDs (Region 1 for U.S.), Audio CDs, and MP3 discs
Signal system	PAL or NTSC
LCD	10 inches
Frequency response	20 Hz to 20 kHz
Audio S/N	> 60 dB
Dynamic range	> 80 dB
Laser	Semiconductor
Wave length	650 nm/795 nm
Power requirements	AC 100-240 V , 50/60 Hz
Operating temperature	32° to 104°F (0° to 40°C)
Weight	Each player: 1.8 lbs. (.8 kg)
Dimensions (W × H × D)	Each player: 9.8 × 7.2 × 1.5 in. (248.9 × 184 × 38.1 mm)

Legal notices

Marcovision

This product features the copy protection function developed by Macrovision. Copy protection signals are recorded on some discs. When recording and playing the pictures of these discs picture noise will appear. This product incorporates copyright protection technology that is protected by method claims of certain U.S. Patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

ONE-YEAR LIMITED WARRANTY

Definitions:

The Distributor* of Insignia branded products warrants to you, the original purchaser of this new Insignia-branded product ("Product"), that the Product shall be free of defects in the original manufacturer of the material or workmanship for a period of one (1) year from the date of your purchase of the Product ("Warranty Period").

For this warranty to apply, your Product must be purchased in the United States or Canada from a Best Buy branded retail store or online at www.bestbuy.com or www.bestbuy.ca and is packaged with this warranty statement.

How long does the coverage last?

The Warranty Period lasts for 1 year (365 days) from the date you purchased the Product. Your purchase date is printed on the receipt you received with the Product.

What does this warranty cover?

During the Warranty Period, if the original manufacture of the material or workmanship of the Product is determined to be defective by an authorized Insignia repair center or store personnel, Insignia will (at its sole option): (1) repair the Product with new or rebuilt parts; or (2) replace the Product at no charge with new or rebuilt comparable products or parts. Products and parts replaced under this warranty become the property of Insignia and are not returned to you. If service of Products or parts are required after the Warranty Period expires, you must pay all labor and parts charges. This warranty lasts as long as you own your Insignia Product during the Warranty Period. Warranty coverage terminates if you sell or otherwise transfer the Product.

How to obtain warranty service?

If you purchased the Product at a Best Buy retail store location or from a Best Buy online website (www.bestbuy.com or www.bestbuy.ca), please take your original receipt and the Product to any Best Buy store. Make sure that you place the Product in its original packaging or packaging that provides the same amount of protection as the original packaging.

To obtain warranty service, in the United States call 1-888-BESTBUY or in Canada call 1-866-BESTBUY. Call agents may diagnose and correct the issue over the phone.

Where is the warranty valid?

This warranty is valid only in the United States and Canada at Best Buy branded retail stores or websites to the original purchaser of the product in the county where the original purchase was made.

What does the warranty not cover?

This warranty does not cover:

- Customer instruction/education
- Installation
- Set up adjustments
- Cosmetic damage
- Damage due to weather, lightning, and other acts of God, such as power surges
- Accidental damage
- Misuse
- Abuse
- Negligence
- Commercial purposes/use, including but not limited to use in a place of business or in communal areas of a multiple dwelling condominium or apartment complex, or otherwise used in a place of other than a private home.
- Modification of any part of the Product, including the antenna
- Display panel damaged by static (non-moving) images applied for lengthy periods (burn-in).

- Damage due to incorrect operation or maintenance
- Connection to an incorrect voltage or power supply
- Attempted repair by any person not authorized by Insignia to service the Product
- Products sold “as is” or “with all faults”
- Consumables, including but not limited to batteries (i.e. AA, AAA, C, etc.)
- Products where the factory applied serial number has been altered or removed
- Loss or Theft of this product or any part of the product
- Display panels containing up to three (3) pixel failures (dots that are dark or incorrectly illuminated) grouped in an area smaller than one tenth (1/10) of the display size or up to five (5) pixel failures throughout the display. (Pixel based displays may contain a limited number of pixels that may not function normally.)
- Failures or Damage caused by any contact including but not limited to liquids, gels or pastes.

REPAIR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS YOUR EXCLUSIVE REMEDY FOR BREACH OF WARRANTY. INSIGNIA SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR THE BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, INCLUDING, BUT NOT LIMITED TO, LOST DATA, LOSS OF USE OF YOUR PRODUCT, LOST BUSINESS OR LOST PROFITS. INSIGNIA PRODUCTS MAKES NO OTHER EXPRESS WARRANTIES WITH RESPECT TO THE PRODUCT, ALL EXPRESS AND IMPLIED WARRANTIES FOR THE PRODUCT, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE WARRANTY PERIOD SET FORTH ABOVE AND NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, WILL APPLY AFTER THE WARRANTY PERIOD. SOME STATES, PROVINCES AND JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE.

Contact Insignia:

1-877-467-4289

www.insigniaproducts.com

INSIGNIA is a trademark of Best Buy and its affiliated companies.

*Distributed by Best Buy Purchasing, LLC

7601 Penn Ave South, Richfield, MN 55423 U.S.A.

©2019 Best Buy. All rights reserved.

INSIGNIA™

www.insigniaproducts.com

1-877-467-4289 (U.S. and Canada) or 01-800-926-3000 (Mexico)

INSIGNIA is a trademark of Best Buy and its affiliated companies.

Distributed by Best Buy Purchasing, LLC

7601 Penn Ave South, Richfield, MN 55423 U.S.A.

©2019 Best Buy. All rights reserved.

V2 ENGLISH
19-0604