



REVOLUTION X

PRO CONTROLLER

**DESIGNED FOR COMPETITION
PROGRAMMABLE • 3D SOUND**

QUICK START

Thank you for your purchase! Check out the instructions below if you need help getting started with your Revolution X Pro Controller. A complete manual is available on the NACON website at the following link: my.nacongaming.com/en-GB/support

Connecting the Revolution X Pro Controller:

Xbox Series X|S console, Xbox One console, or Windows PC: Connect the USB-C end of the cable to your controller and the other end to one of the USB ports on your console or PC. When the white LED is continuously on, your controller is ready to be used.

Revolution X Pro Controller customization app:

Important: Your controller can work without installing the app. However, for optimal use, it is advisable to keep the firmware of your controller up to date using the app. You will also need the app if you want to take advantage of all of the controller's customization options. To download the app, you'll need a Microsoft account and an internet connection.

- Xbox Series X|S and Xbox One controllers: Search for "Revolution X" in the Microsoft Store app on the home screen of your console.
- Windows PC: Open your browser and go to www.microsoft.com. In the search bar, type "Revolution X".

Configure the shortcuts (S1, S2, S3, S4) without the app:

Important: This procedure is only available in Classic Mode. Open all the adjustment options for the buttons, triggers, joysticks as well as many other options using the Advanced Mode of your controller, which can only be set using the Revolution X app.

1. Be sure to set the switch on the back of the controller to "Classic".
2. Press and hold the "Profile" button for 3 seconds. The 4 LEDs at the front are off and the light ring of the right stick is flashing.
3. Press the shortcut button (S1, S2, S3 or S4) that you want to "program". The LED corresponding to the button lights up.
4. Then press the button you want to link to the shortcut. The associated LED flashes 3 times to indicate the end of the procedure. If you make a mistake, just repeat this step to link another button.
5. To delete a link, repeat steps 1-2-3 and press again on the shortcut key that you want to reset. The corresponding LED will flash 3 times.
6. Once your settings are complete, press the profile button for 3 seconds. The profile LEDs will go out and the light ring will switch on continuously.

To open the declaration of conformity or contact our customer service, go to: my.nacongaming.com/en-GB/support



WWW.NACONGAMING.COM

Join-us! Rejoignez-nous !    

All the trademarks belong to their respective owners. -
Toutes les marques citées appartiennent à leurs propriétaires respectifs.

Designed for competition - Conçu pour la compétition / 3D Sound - Son 3D