


# Axis Rail™

## HDTV Antenna

Model: AX18451

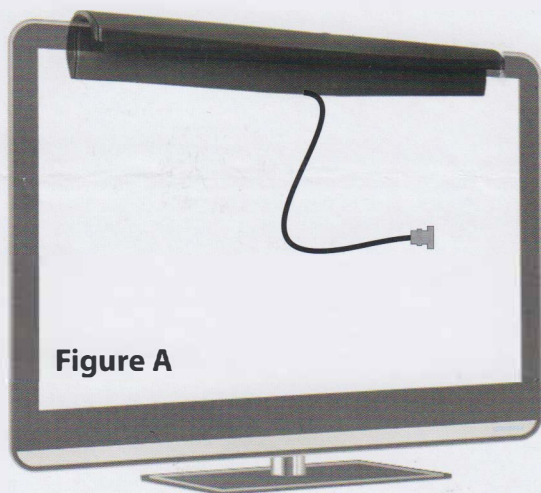

**Figure A**


The Axis Rail sits seamlessly on top of your TV, blending into the shape of the TV frame.

The attached single coax cable goes behind the TV to your antenna input, so you have no visible cables.

To install your Axis Rail antenna on your TV, please follow the below instructions.

### Installation

1. Loosen the twist-tie holding the coax cable
2. Find the coax input on the back of your TV. It may be labeled "Antenna" or "Ant In".
3. Install the coax cable to your TV by screwing the cable connector onto the input on your TV, as shown in Figure B.
4. Once cable is well connected (do not over-tighten), place the antenna on top of your TV, along the top edge of the TV frame as shown above in Figure A.

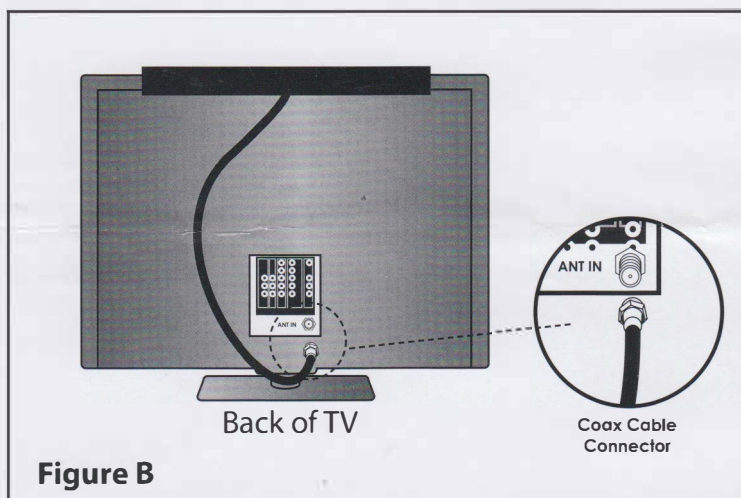

**Figure B**

**Note:** Ensure the antenna is secure on the top of your TV by gently rocking it to check that it does not fall.

### TV Setup

Note: all TVs have different menus and settings, so please refer to your TV's User Manual for antenna setup information.

1. Turn your TV on.
  2. Go into your TV's 'settings' menu, then select the 'scan for channels' option. It may take several minutes for your TV to scan for all available channels.
  3. Once completed, you should have access to local broadcasting stations and national network stations. From your TV's main menu you may need to select "Antenna" to access live TV.
- Check FCC.gov for a full list of channels available in your area.

# AXIS®

Visit [www.axisproducts.net](http://www.axisproducts.net) for  
warranty information and additional  
support options.