

5 TIPS TO ENSURE A SMOOTH FIRST USE

Neakasa Magic 1
Vacuum Steamer

TIPS 3

If you prefer ironing on a board, be sure to turn off the suction function.


⚠ With the suction off, use the steamer like a traditional iron—ideal for soft or textured fabrics and garments.



TIPS 1

Using suction ironing mode, you'll achieve smoother, faster results. This is ideal for thicker fabrics or garments that require a neat finish, like T-shirts, shirts, jeans, suits and similar items.

⚠ In suction ironing mode, move the steamer slowly from top to bottom—avoid back-and-forth movements for best results.

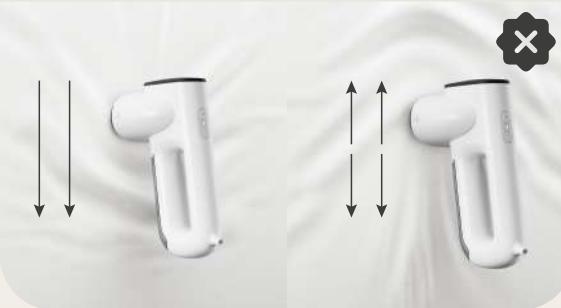

TIPS 2

As you move the steamer down, let the clothes hang naturally. Keeping the steamer parallel to the clothes will give you the smoothest results.

⚠ Avoid tilting the steam plate at an angle to the clothes.



TIPS 4

If you don't want to disturb the natural texture of the fabric, turn off the suction function. Keep a certain distance between the steamer and the clothes, allowing the steam to gradually soften the fabric. This process will take a bit longer.



TIPS 5

The steam plate contains a filter sponge that collects loose fibers and lint from the clothes. Depending on usage frequency, it needs to be cleaned every 3 to 5 months. If you notice reduced suction power, open the side slot of the steam plate to remove the filter sponge. Rinse it with water, let it dry completely, and then reinstall it. Press the steam plate to ensure it's securely in place.





Neakasa Magic 1 Vacuum Steamer

Indicator Light	Status	Description
Light off	Powered off	The device is in the off state; In the on state, if there is no operation for 10 minutes, it will automatically power off.
Red/Green light alternates flashing	Preheating	The boiler is heating up. The preheating lasts for 30 seconds. After that, the water pump will start working and enter low steam mode.
Red light steady	Steam mode	
Green light flashing	Pause mode	The device is paused. Press the power button to resume operation.

To avoid electric shock, fire, or other accidental injuries caused by improper use, please carefully read the user manual before use and keep it for future reference.

- This product should not be used by individuals with physical, sensory, or mental impairments, or by those lacking experience and knowledge (including children), unless they are supervised by a guardian or given proper instructions to ensure safe use.
- Do not allow children to operate or play with this product. Always supervise closely when children are using it. Children should not clean or perform maintenance on the product without adult supervision.
- If the power cord is damaged, to avoid danger, it must be replaced by the manufacturer, its service agent, or qualified personnel.
- Do not immerse the product in water or other liquids. If the product falls into water, immediately unplug it and allow it to dry completely before using again.
- **WARNING:** Do not use this appliance near bathtubs, showers, basins, or other containers filled with water.
- Do not touch the steam outlet or any hot surfaces during use or immediately after shutdown to avoid burns.
- Do not touch the plug or other electrical parts with wet hands to prevent electric shock.
- Always unplug the product before performing any maintenance or repairs.
- When storing this product, do not twist or knot the power cord to avoid damage.
- Keep the power cord away from heat sources or areas that could compromise its protective insulation.
- Do not use this product in areas where aerosol (spray) products are being used or near flammable sources.
- Use this product only with the specified rated power supply. Do not use universal adapters or voltage converters to avoid danger.
- If the product malfunctions or encounters an issue, contact the manufacturer for repairs. Do not attempt to disassemble or repair it yourself.

Product Name: Neakasa Magic 1 Vacuum Steamer
Water Tank Capacity: 3.2 oz (95 mL)

Max Airflow: 31.8 CFM
Power: 1000 W