

Model: Li-B18 (Front)
iB (English)
Size: 432Wmm x 400Hmm
Color: Print in Black color
Date: July 03, 2014



For Models That Use Lithium Batteries

- Lithium batteries can explode or cause burns if disassembled, shorted, recharged, exposed to water, fire, or high temperatures & not handled appropriately.
- Do not place loose batteries in a pocket, purse, or other container containing metal objects; do not mix with used or other battery types, or store with hazardous or combustible materials.
- Store in cool, dry, ventilated area.
- Follow applicable laws and regulations for transport and disposal.

A Consumer Guide to Product Safety

IMPORTANT SAFETY INSTRUCTIONS

When used in the directed manner, this unit has been designed and manufactured to ensure your personal safety. However, improper use can result in potential physical injury or fire hazard. Please read and follow the operating instructions and warnings before installation and use, and keep these instructions handy for future reference. Take special note of all warnings listed in these instructions and on the unit.

- Water and Moisture** – The unit should not be used near water. For example: near a bathtub, washbow, kitchen sink, laundry tub, swimming pool or in a wet basement.
- Ventilation** – The unit should be situated so that its location or position does not interfere with its proper ventilation. For example, it should not be situated on a bed, sofa, rug or similar surface that may block ventilation openings. Also, it should not be placed in a built-in installation, such as a bookcase or cabinet, which may impede the flow of air through the ventilation openings.

- Heat** – The unit should be situated away from heat sources such as radiators, heat registers, stoves or other appliances (including amplifiers) that produce heat.

- Power Source** – The unit should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.

- Power-Cable Protection** – Power supply cables should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. It is always best to have a clear area from where the cable exits the unit to where it is plugged into an AC socket.

- Cleaning** – The unit should be cleaned only as recommended. See the Maintenance section of this manual for cleaning instructions.

- Objects and Liquid Entry** – Care should be taken so that objects do not fall and liquids are spilled into any openings or vents located on the product.

- Attachments** – Do not use attachments not recommended by the product manufacturer.

- Lightning and Power Surge Protection** – Unplug the unit from the wall socket and disconnect the antenna/cable system during a lightning storm or when it is left unattended and unused for long periods of time. This will prevent damage to the product due to lightning and power-line surges.

- Overloading** – Do not overload wall sockets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.

- Damage Requiring Service** – The unit should be serviced by qualified service personnel when:
 - The power supply cable or plug has been damaged.
 - Objects have fallen into or liquid has been spilled into the enclosure.
 - The unit has been exposed to moisture.
 - The unit has been dropped or the enclosure damaged.
 - The unit exhibits a marked change in performance or does not operate normally.

- Periods of Nonuse** – If the unit is to be left unused for an extended period of time, such as a month or longer, the power cable should be unplugged from the unit to prevent damage to the unit.

- Servicing** – The user should not attempt to service the unit beyond those methods described in the user's operating instructions. Service methods not covered in the operating instructions should be referred to qualified service personnel.

Questions? Visit www.ekids.com

Maintenance

- Place the unit on a level surface away from sources of direct sunlight or excessive heat.
- Protect your furniture when placing your unit on a natural wood and lacquered finish. A cloth or other protective material should be placed between it and the lacquered finish.
- Clean your unit with a soft cloth moistened only with mild soap and water. Stronger cleaning agents such as thinner or similar materials can damage the surface of the unit.

Limited 1 Year Warranty Information

ekids, LLC warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of one (1) year from the date of original purchase. Should this product fail to function in a satisfactory manner, it is best to first return it to the store where it was originally purchased. Should it fail to resolve the matter and service still be required, by calling 1-800-288-2792 during normal business hours. eKids reserves the right, in its discretion, to replace this product without charge. This decision is subject to verification of the defect or malfunction upon delivery of the product to the Factory Service Center authorized by Customer Service. If service is required, please call Customer Service at 1-800-288-2792 to obtain a Return Authorization Number and shipping instructions.

Disclaimer of Warranties

NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence or willful actions, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to digital media players, CDs or DVDs, or to memory cards; (iv) the cost of shipping the product to the Factory Service Center or its return to the owner.

This warranty is valid only in the United States of America and does not extend to owners of the product other than to the original purchaser. In no event will eKids or any of its affiliates, contractors, resellers, their officers, directors, shareholders, members or agents be liable to you or any third parties for any damages, including but not limited to, special, incidental, or consequential damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Your acknowledgement and agreement to fully and completely abide by the above mentioned disclaimer of warranty is contractually binding to you upon your transfer of currency (money order, cashier's check, or credit card) for purchase of this eKids product.

Questions? Visit www.ekids.com

For any other questions: 1-800-288-2792 Toll Free
© & ™ Lucasfilm Ltd. Used Under License. eKids/KidDesigns, Inc.
iHome® is a registered trademark of ©2011 SDI Technologies, Inc. All Rights Reserved.

Charging the Li-B18

The Li-B18 is powered by a rechargeable battery in the speaker. **Make sure to charge speaker before use.**

- Connect the micro-USB plug to the Audio/Charging jack on the speaker.
- Connect the larger USB plug to a powered USB port, such as that on a computer. Your computer should be connected to a wall outlet when speaker is charging. The light on the speaker will turn to solid red while charging and turn off when fully charged.

When the battery is low, the red LED light will turn on. If you start to notice sound distortion at higher volumes, it's time to recharge the batteries.

NOTE: The charging LED light will override the pairing LED light pattern.

Using Bluetooth with the Li-B18

- Whenever the unit is set to Bluetooth mode, the Li-B18 will attempt to auto-link a previously paired device for 3 minutes. If no device is paired, or to pair a new device, follow the steps below:
- Make sure your Bluetooth device and the Li-B18 are fully charged. Turn on your Bluetooth device and make it "discoverable" by turning on Bluetooth mode (check in Options or Settings).
- Slide the **Aux/OFF/ Switch** on the speaker to the Bluetooth position once you hear the "Power On" tone press and hold the **Bluetooth Pairing Button** for 2 seconds. The red LED light will flash quickly, and a tone will sound as the speaker attempts to pair with a Bluetooth device.
- "StarWarsLi-B18" should appear on your device. If "Not Connected" or similar message appears, select "StarWarsLi-B18" to connect. If your device asks for a password, enter "1234".
- Once paired, a confirmation tone will sound and the red LED will shut off. You can then stream audio to the speaker.
- Control Bluetooth audio from your device. Remember to turn off the speaker and your device after listening.
- If no device is paired within 3 minutes, a failure tone will sound, the red light will flash slowly and the unit will revert to standby mode. To re-pair, press and hold the **Bluetooth Pairing Button** for 2 seconds. If pairing is not successful, turn the power **"OFF"** on the speaker and repeat pairing procedure.

NOTE: Quickly press the Bluetooth Pairing Button for 1 second to cancel pairing mode on the unit.

Using the Li-B18 with Aux Devices

- Connect the micro-USB plug to the Audio/Charging jack on the speaker.
- Connect the stereo 3.5mm audio plug to the headphone jack or line-out of any audio device.
- Slide the **Aux/OFF/ Switch** on the speaker to the "Aux" position.
- Press play on your audio device and adjust its volume to listen to audio.
- When done listening, move the **Aux/OFF/ Switch** to the OFF position to turn the unit off. Remember to turn off your audio device, too.

STAR WARS | **iHome**



Model: Li-B18
Bluetooth
Rechargeable
Mini Speaker

Questions? Visit www.ekids.com

BC

FCC ID: EMOLIB18
IC: 9868-LIB18

FCC Information

FCC Radiation Exposure Statement

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. The device complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

- This device may not cause interference, and
- This device must accept any interference, including interference that may cause undesired operation of the device.

The device meets the exemption from the routine evaluation limits in section 2.5 of RSS 102 and compliance with RSS-102 RF exposure, users can obtain Canadian information on RF exposure and compliance.

This device complies with Part 15 of the FCC Rules, operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules and the IC RSS-247. These limits are designed to provide reasonable protection against harmful interference in a residential installation. These limits are also designed to prevent interference in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio communications or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio豁免 de brouillage. L'exploitation de l'appareil est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible de compromettre le fonctionnement.





CAN ICES-3 (B)NMB-3(B)

Declaration ID: B020770



IMPORTANT

Read before proceeding. If you have a question regarding the operation or use of this product, please visit www.ihome.com to view answers to frequently asked questions.

To learn more about this and other iHome products, please visit us online at www.ihome.com

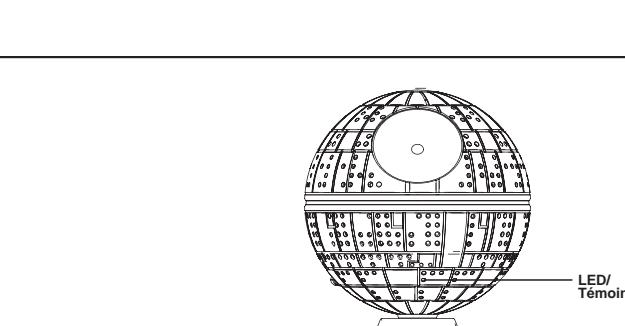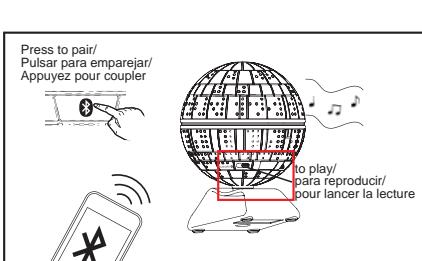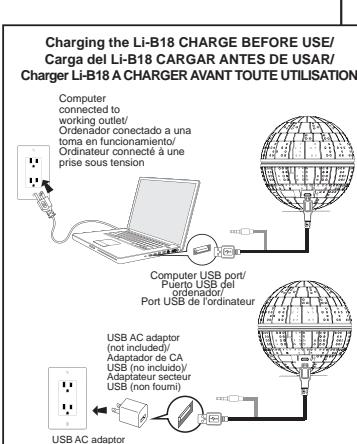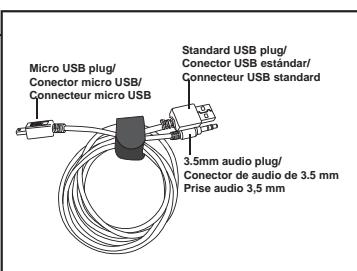

Front Panel/Parte frontal/Face avant

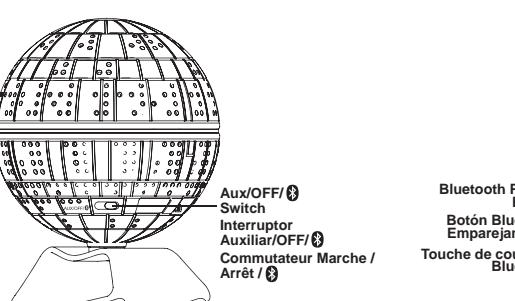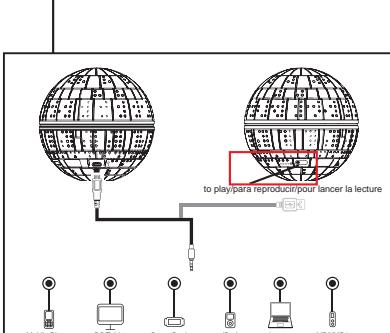

Back Panel/Posterior/Face Arrière

Press to pair/ Pulsar para emparejar/ Appuyez pour coupler

Bluetooth Mode/Modo Bluetooth/ Mode Bluetooth

to play/ para reproducir/ pour lancer la lecture

Aux-in Mode/Modo de entrada Aux/ Mode Entrée auxiliaire

Mobile Phone/Teléfono móvil
PC/Tablet/PC/Tablette
Game Devices/Dispositivos de juego
iPod/iPod
Laptop/Ordenador portátil
MP3/MP4

Computer/Computadora/Ordinateur
Charging outlet/Conector de carga/Connexion de charge

USB AC adapter (not included)/Adaptador de CA USB (no incluido)/Adaptateur secteur USB (non fourni)

USB AC adapter connected to working outlet/Adaptador USB CA conectado a una salida de trabajo

USB AC adapter connected to working outlet/Adaptador USB CA conectado à une prise sous tension