

Warning: Loud noises can damage your hearing.

Caution: When you have finished using your headset, store in a safe place to avoid accidental damage.

PACKAGE CONTENTS

- PS4 Chat Headset
- *Quick Setup Guide*

FEATURES


- Traditional over-head design
- Adjustable boom microphone
- Inline microphone mute controls

SETTING UP YOUR GAME CONSOLE

1 Locate the 3.5 mm audio jack on the DUALSHOCK®4 controller.




2 Plug the 3.5 mm audio cable from the headset into the DUALSHOCK®4 audio output jack.

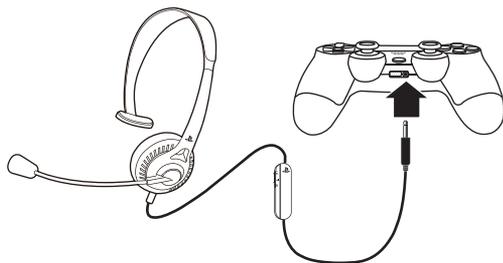


3 Adjust the headband for comfort and make sure that the speaker is on your left or right ear.



4 Adjust the microphone to a comfortable position.

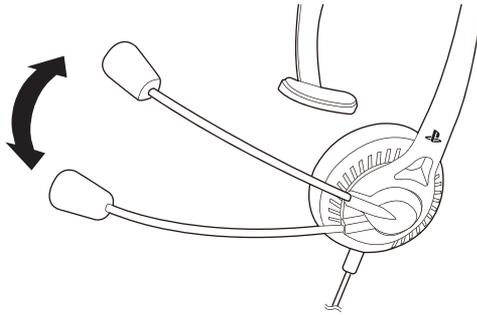

5 Use the ON/OFF switch on the headset control unit to mute or un-mute the microphone.

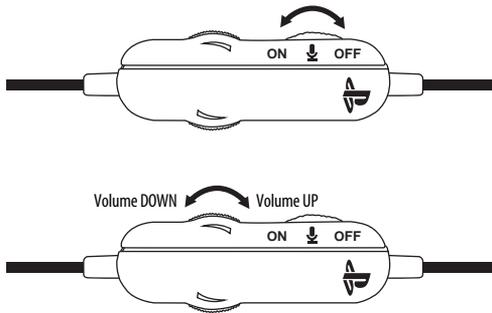

SPECIFICATIONS

- Nominal impedance: $16\Omega \pm 15\%$
- Speaker frequency response: 100-6,000Hz
- Microphone response: 150-4,000Hz
- Cable length: 4 ft. (1.2 m)

ONE-YEAR LIMITED WARRANTY

Visit www.insigniaproducts.com for details.

CONTACT INSIGNIA:

For customer service, call 1-877-467-4289 (U.S. and Canada) or 01-800-926-3000 (Mexico)

www.insigniaproducts.com

Manufactured and distributed under license by Sony Computer Entertainment America LLC.

"PS" and "PlayStation" are registered trademarks of Sony Computer Entertainment Inc.

"PS4" is a trademark of the same company.

INSIGNIA is a trademark of Best Buy and its affiliated companies.

Registered in some countries.

Distributed by Best Buy Purchasing, LLC

7601 Penn Ave South, Richfield, MN 55423 U.S.A.

©2014 Best Buy. All rights reserved.

Made in China

V1 ENGLISH 14-0069