

## QUICK SETUP GUIDE

Ultra Slim  
Wireless  
Mouse

NS-PNM72B-WH


## PACKAGE CONTENTS

- Wireless mouse
- AAA batteries (2)
- Quick Setup Guide

## SYSTEM REQUIREMENTS

- Windows® 10, Windows®8.1, Windows®8, Windows®7, or Mac OS 10.4 or higher
- Built-in Bluetooth function or Bluetooth receiver


## FEATURES

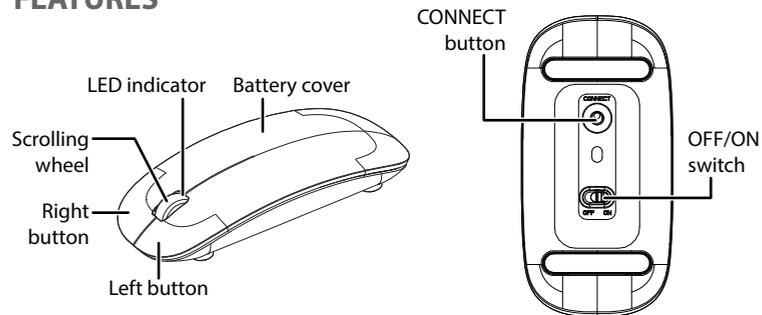

FUNCTION	DESCRIPTION
<b>LED indicator</b>	<ul style="list-style-type: none"> <li>• Lights for ten seconds when you turn on your mouse.</li> <li>• When the pair button is pressed, the red LED keeps blinking until paired successfully or pairing time-out (ten minutes).</li> <li>• Low battery warning: Blinks for six seconds when mouse stops moving.</li> </ul>
<b>CONNECT button</b>	Press to put your mouse in pairing mode.

## INSTALLING THE BATTERY AND CONNECTING THE MOUSE

**1** Remove the top of the mouse and insert two AAA batteries (included). Make sure that you match the + and – symbols in the battery compartment. Close the top of the mouse.

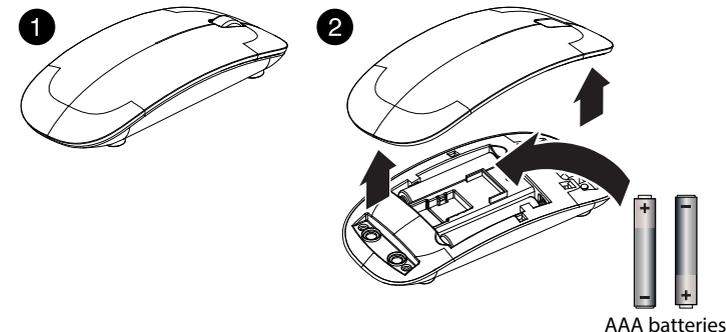

**2** Press the **CONNECT** button on the bottom of the mouse. The LED indicator blinks to indicate your mouse is in pairing mode. Pairing mode lasts for ten minutes.

**3** Pair your mouse to your computer.

**PC:**

- 1 Click the Bluetooth icon  in your computer's taskbar.
- 2 Click **Add a Bluetooth device**. Your computer searches for your mouse.
- 3 Double-click **Ultra Slim Wireless Mouse**.

**Mac:**

- 1 Open **System Preferences** in the dock.
- 2 Click the Bluetooth icon .
- 3 Click + in the lower-left corner. Your computer searches for your mouse.
- 4 Double-click **Ultra Slim Wireless Mouse**.

**Note:** If your computer has never connected to a Bluetooth device, click **Set Up New Device** to pair your mouse to your computer.

When pairing is complete, the LED indicator lights turn off.

## TURNING YOUR MOUSE ON AND OFF

- 1 Remove the battery cover to switch the mouse on.
- 2 If you don't use your mouse for ten minutes, it switches to standby mode to conserve the battery. To wake up your mouse, press any button or move it.

## UN-PAIRING THE MOUSE FROM YOUR PC OR MAC

### PC:

- 1 Click the Bluetooth icon  on your task bar.
- 2 Click **Show Bluetooth Devices**.
- 3 Right-click **Bluetooth 3.0 Mouse**.
- 4 Click **Remove Device** to un-pair the mouse.

### Mac:

- 1 Open **System Preferences** in the dock.
- 2 Click the Bluetooth icon .
- 3 Click the - in the lower-left corner.
- 4 When it asks **Are you sure you want to remove this device?**, click **Remove** to un-pair the mouse.

## CLEANING YOUR MOUSE

- Wipe the mouse with a damp, lint-free cloth.

## SPECIFICATIONS

- Dimension (H x W x D): 0.9 x 2.2 x 4.4 in. (2.2 x 5.70 x 11.3 cm)
- Weight: 2.93 oz. (.083 kg)
- Battery: 2 AAA alkaline batteries
- Battery life: 6 months (based on average usage)
- Radio frequency: Bluetooth 3.0
- Compatibility: Bluetooth 2.1, 3.0, 4.0, 4.1
- Operating distance: 33 feet (10 meters)
- Rating: 3V DC --- 10mA

## TROUBLESHOOTING

PROBLEM:	SOLUTION:
<b>My mouse is not working.</b>	<ul style="list-style-type: none"><li>• Make sure that the batteries are installed correctly and the switch is turned on. Replace the batteries with a new set of batteries if it still does not work.</li><li>• Move your mouse closer to your computer.</li><li>• Make sure that your computer meets the system requirements.</li><li>• Make sure that your mouse is paired by pressing the blue <b>CONNECT</b> button on the bottom of your mouse, then pair it with your computer.</li><li>• Make sure that the Bluetooth function on your computer or your Bluetooth receiver is working.</li><li>• Un-pair your mouse from your computer, then re-pair it.</li><li>• If the LED indicator on your mouse is blinking every five seconds, replace the battery.</li></ul>
<b>The screen cursor does not move properly.</b>	<p>If your screen cursor lags behind the movement, then your Bluetooth connection may not be able to transmit all of the data from the mouse with the necessary speed. This may be caused by interference from other radio sources, obstructions in the radio wave path, excessive distance from the computer, or a combination of the above.</p> <ul style="list-style-type: none"><li>• Remove any metallic objects from the line of sight between your computer and the Bluetooth mouse.</li><li>• If you are using a computer with a built-in Bluetooth antenna, try reorienting the computer until you get a better data rate.</li><li>• If you are using a Bluetooth dongle, use a USB extension cable and place the Bluetooth dongle onto your desktop or somewhere in sight of your Bluetooth mouse.</li><li>• Move the mouse closer to your Bluetooth dongle.</li><li>• Turn off the mouse and turn it on again for better connection.</li><li>• Disconnect any Bluetooth audio devices, such as headsets, that may be connected to your computer.</li><li>• Switch off any other devices operating in the 2.4 GHz radio spectrum, such as a Wi-Fi network or mobile telephone, or move their antennas further away from your computer.</li></ul>

## LEGAL NOTICES

### FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### FCC Caution

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### RSS-Gen & RSS-247 statement:

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

### RSS-102 Statement:

This equipment complies with Industry Canada radiation exposure limits set forth for an uncontrolled environment. Cet équipement est conforme à l'exposition aux rayonnements Industry Canada limites établies pour un environnement non contrôlé.

## ONE-YEAR LIMITED WARRANTY

For complete warranty, visit [www.insigniaproducts.com](http://www.insigniaproducts.com).

## CONTACT INSIGNIA

1-877-467-4289 (U.S. and Canada) or 01-800-926-3000 (Mexico)  
[www.insigniaproducts.com](http://www.insigniaproducts.com)

INSIGNIA is a trademark of Best Buy and its affiliated companies

Distributed by Best Buy Purchasing, LLC

7601 Penn Ave South, Richfield, MN 55423 U.S.A.

©2016 Best Buy. All rights reserved.

**Made in China**