


ROKU®


Select Series HD TV

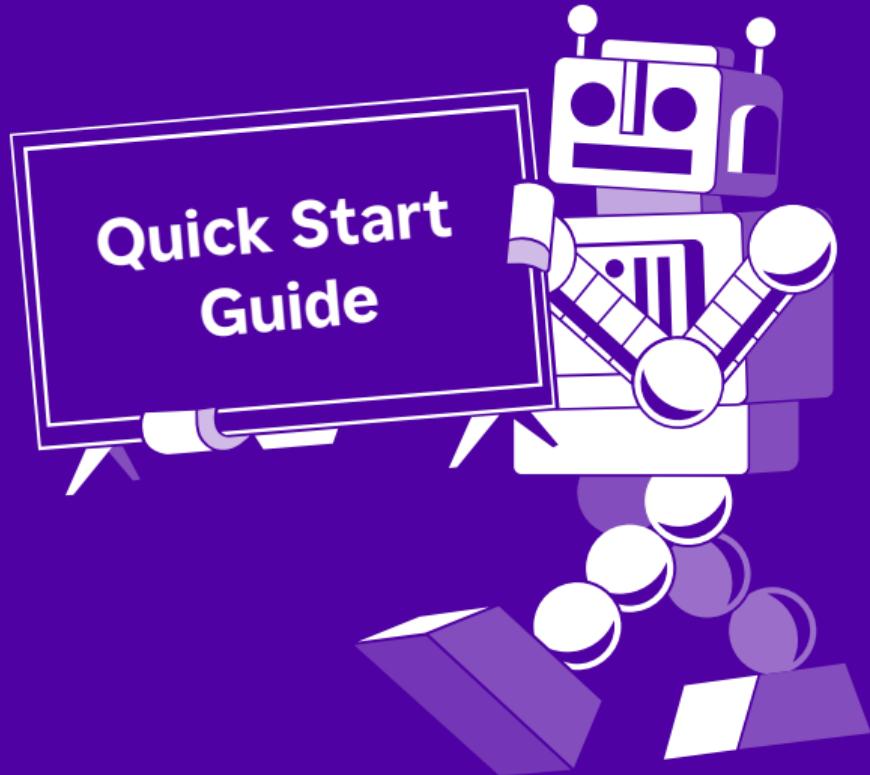

What's included



Roku Select Series HD TV

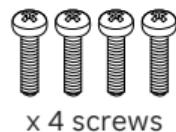

Stand screws



TV stands




Roku TV Remote

What you need



Phillips head
screwdriver

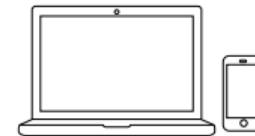


Laptop or mobile
phone for activation



Internet connection

STEP 1: Set up your TV

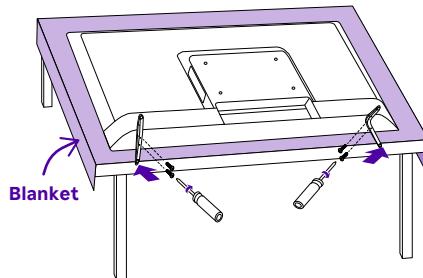

A Prepare a surface

Put a soft covering like a blanket down onto a clean, flat surface (make sure it's larger than the TV) and place the TV on it.

B Attach the stands


Use a screwdriver and included screws to attach the stands.

C Set TV upright


Place your TV on a stable, flat surface.

Mounting your TV?

For instructions, skip these steps
and visit go.roku.com/tvmount

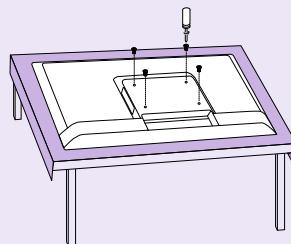

STEP 2: Plug TV in and power your remote

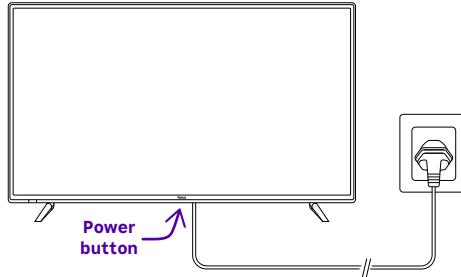

A Connect your TV


Plug your TV into a power outlet. It should turn on automatically. If it doesn't, press the power button.



B Power your remote

See the remote features card on how to use your Roku TV remote.

STEP 3: Activate your TV

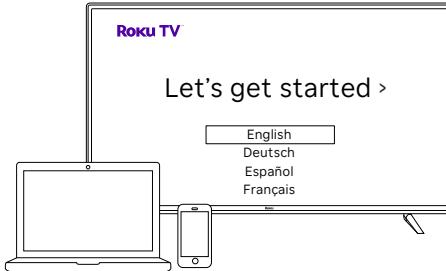

Connect your TV

Follow the instructions on your TV screen. Activate your TV by using your computer or smartphone to link a Roku account.



IMPORTANT

Roku never charges for activation support.

Frequently asked questions

Why do I need an internet connection?

You'll need an internet connection to set up your TV, stream your favorite channels and for automatic software updates.

Why should I enter a payment method?

Saving a payment method makes it easy to rent or buy movies, subscribe to popular channels, and start free trials in just a click. No charges will be made without your authorization.

Get to know your TV

Video connections

HDMI - Game consoles, DVD players

Antenna/Cable - Digital antenna, cable connection


Audio connections

HDMI ARC (recommended) - AV receivers, soundbars

Optical (S/PDIF) - AV receivers, soundbars

Other connections

USB - Flash drive

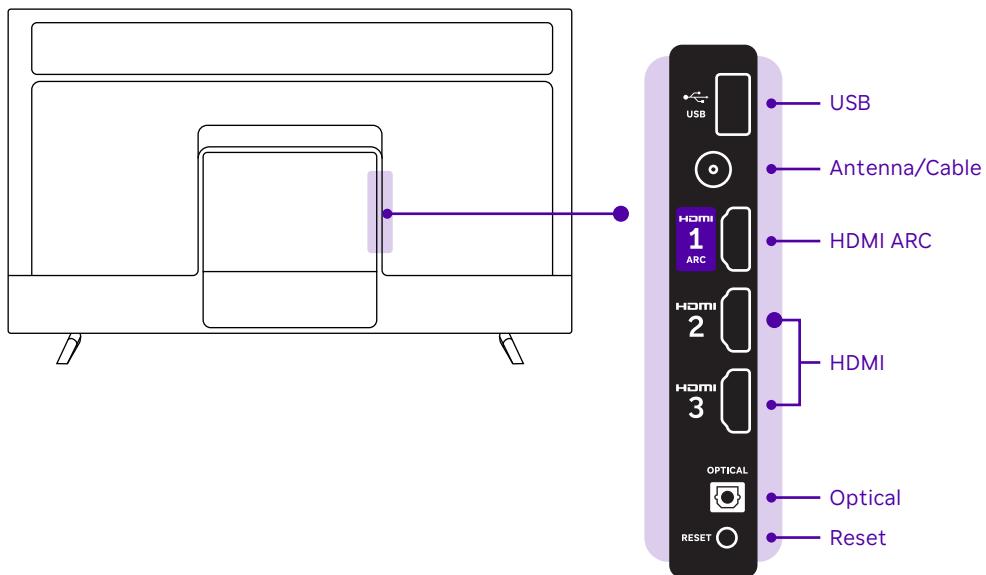

ROKU

© 2025 Roku, Inc. All Rights Reserved. Roku, the Roku logo, and the purple d-pad and purple fabric tag designs are trademarks or registered trademarks of Roku, Inc.

Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are registered trademarks of Dolby Laboratories Licensing Corporation. Confidential unpublished works. Copyright 1992-2019 Dolby Laboratories. All rights reserved.

Need help?

For setup help or support, visit or call

go.roku.com/TV

1-816-272-8106
4:00 am - 10:00 pm PT

