 


INSIGNIA™

## ASSEMBLY GUIDE

# 47.5 in. TV Stand with Gaming Nook

NS-STVGN555

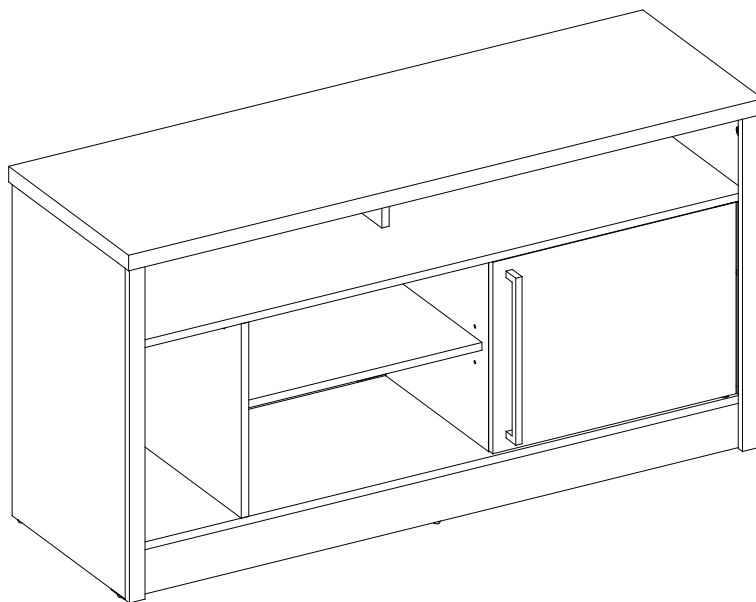

Before using your new product, please read these instructions to prevent any damage.

## Contents

IMPORTANT SAFEGUARDS .....	3
Features.....	4
Dimensions.....	4
Package contents.....	5
Parts .....	5
Hardware.....	6
Tools needed (not provided) .....	7
Installation tips .....	7
Assembling your TV stand.....	8
Maintaining your TV stand .....	32
Specifications.....	32
ONE-YEAR LIMITED WARRANTY .....	33

# IMPORTANT SAFEGUARDS

## WARNING



Some steps are more easily handled with two adults.

**CAUTION**  
The top surface of this TV stand is designed for use with a product weighing no more than 70 lbs. (31.75 kg) and having a width that permits it to sit evenly on the TV stand with no more than a one-inch overhang on each side of the shelf. Use with products that weigh more than the maximum weight allowed, or with dimensions that extend beyond the maximum width may result in instability, which may result in injury.

**CAUTION**  
This product contains small items that could be a choking hazard if swallowed. Keep these items away from young children!

**WARNING**  
Please use your TV stand correctly and safely. Improper use can cause safety hazards or damage to your furniture or household items. Carefully read the following chart.


LOOK OUT FOR:	WHAT CAN HAPPEN:	HOW TO AVOID THE PROBLEM:
<ul style="list-style-type: none"> <li>Children climbing on the TV stand.</li> <li>A child may try to reach a toy or other object by climbing on the TV stand.</li> <li>Children will play and be active near the TV.</li> </ul>	<ul style="list-style-type: none"> <li>Risk of injury or death.</li> <li>A child climbing on the TV stand can make it top-heavy and cause it to tip over.</li> <li>A child playing with a TV can cause it to tip over.</li> </ul>	<ul style="list-style-type: none"> <li>Never allow children to climb on or play with the TV stand.</li> <li>Do not place toys or food on the top shelves. Children may try to climb to reach them out of curiosity.</li> </ul>
<ul style="list-style-type: none"> <li>Improper use of the TV stand to support TVs.</li> <li>A stand designed for use with TVs will specify the maximum weight rating and recommended size of the TVs it will safely support.</li> </ul>	<ul style="list-style-type: none"> <li>Risk of injury or death.</li> <li>TVs can be very heavy.</li> </ul> <p><b>Note:</b> older CRT TVs tend to be unbalanced and prone to tipping forward.</p>	<ul style="list-style-type: none"> <li>A TV must only be set on furniture specifically designed to support a television.</li> <li>Never use a TV that exceeds the weight ratings or size guidelines specified for the TV stand.</li> </ul>
<ul style="list-style-type: none"> <li>Improperly moving the TV stand.</li> </ul>	<ul style="list-style-type: none"> <li>The TV stand can tip over or break if improperly moved.</li> <li>Risk of injury.</li> </ul>	<ul style="list-style-type: none"> <li>Unload shelves from the top to the bottom before moving the TV stand.</li> <li>Do not push the TV stand, especially on a carpeted floor. Have a friend help you lift the item and set it in place.</li> <li>Do not lift the TV stand using the top shelf. Lift from the frame.</li> <li>Remove the TV before moving the TV stand.</li> </ul>
<ul style="list-style-type: none"> <li>The TV/stand assembly tipping forward.</li> </ul>	<ul style="list-style-type: none"> <li>Risk of injury.</li> <li>Top-heavy furniture can tip over.</li> <li>The TV and stand could be damaged.</li> </ul>	<ul style="list-style-type: none"> <li>Use the tipping restraint hardware provided and install it properly.</li> </ul>

## SAVE THESE INSTRUCTIONS

## Features

- 47.5 in. (120.6 cm) tabletop holds most TVs up to 55 in. (139.7 cm) and 70 lbs. (31.75 kg)
- Multiple storage spaces accommodate your DVD player, gaming console, cable box and more
- Cabinet with door keeps spare accessories out of sight
- Cutouts make it easy to route and hide cords


## Dimensions

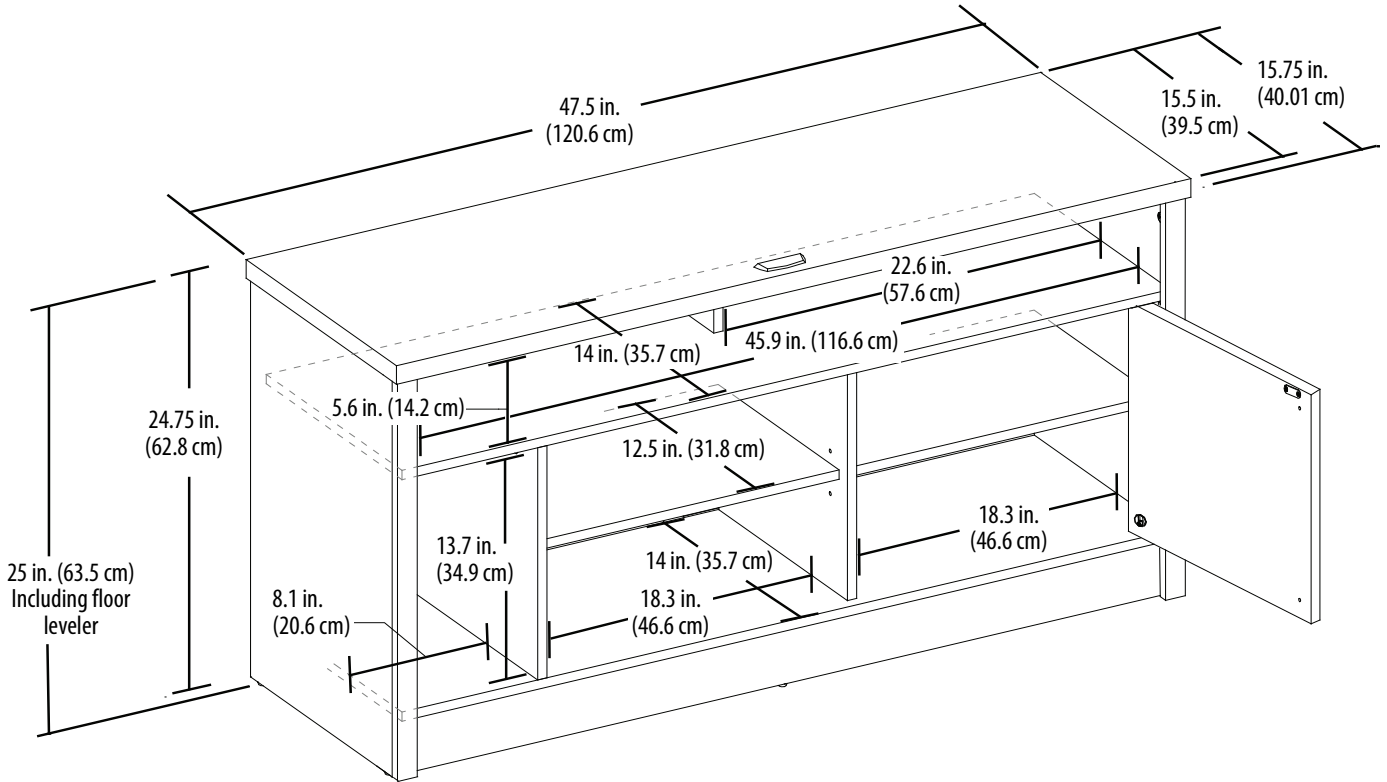




# Package contents
 
## Parts

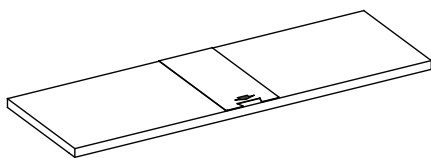


**A** Top panel (1)

 
**Note:** Keep the stopper template attached.

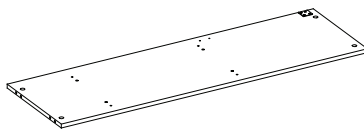


**B** Media shelf (1)

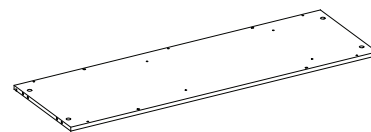 


**C** Bottom panel (1)

 


**D** Skirting board (2)

 


**E** Left side panel (1)

 

**F** Right side panel (1)

 


**G** Left partition (1)

 


**H** Right partition (1)



 
**I** Upper partition (1)




**J** Left adjustable shelf (1)

 

**K** Right adjustable shelf (1)

 

**L** Door (1)

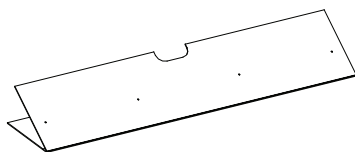 
 


 
 
 




 
 
 

 

 

 
**M** Back panel (1)




 


 

 





**N** Handle (1)

## Hardware

 LABEL	TV STAND PART	QTY.
P	 Wood dowel M8 x 30 mm	32
Q	 Cam pin	30
R	 Cam lock	30
S	 Washer head screw M3.5 x 15 mm	4
T	 Pan head screw M4 x 50 mm	4
U	 Cam lock cover	20
V	 Plastic holder	10
W	 Flat head screw M3 x 17 mm	10
X	 Strike plate	1


LABEL	TV STAND PART	QTY.
Y	 Flat head screw M3.5 x 12 mm	2
Z	 Pan head screw M3 x 15 mm	2
AA	 Magnetic catch	1
BB	 Shelf pin	8
CC	 5/32" x 22 mm bolt	2
DD	 Acrylic stopper	2
EE	 Glue	1
FF	 Touch-up pen	1
GG	 Tipping restraint hardware kit	2

## Extra Hardware


					
Wood dowel M8 x 30 mm	Cam pin	Cam lock	Washer head screw M3.5 x 15 mm	Pan head screw M4 x 50 mm	Cam lock cover
					
Plastic holder	Flat head screw M3 x 17 mm	Flat head screw M3.5 x 12 mm	Pan head screw M3 x 15 mm	Shelf pin	5/32" x 22 mm bolt

## Tools needed (not provided)
 
### For assembling the TV stand:



Phillips screwdriver

 


Rubber mallet




Pliers

### For installing the tipping restraint:

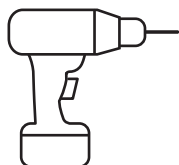

Power drill

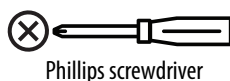

Phillips screwdriver



1/8" drill bit




Edge-to-edge stud finder

**Note: DO NOT USE** power tools unless it is explicitly identified in this manual as required for use during assembly. Power tools can damage the fasteners, hardware and/or components.

## Installation tips


### Gluing wood dowels (P)

When using a wood dowel (P), put one drop of glue (EE) in the hole before you insert the wood dowel (P). Insert the wood dowel (P), then gently tap it with a rubber mallet to secure it in place.

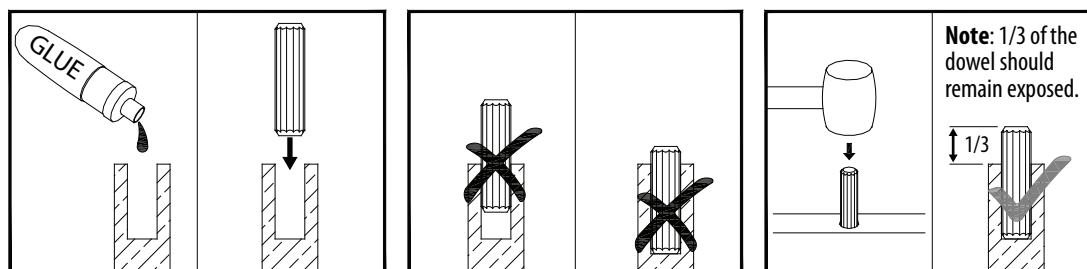

### Locking cam pins (Q) and cam locks (R)

- 1 One end of a cam pin (Q) is threaded so that it screws into place. The other end is not threaded. Before you insert the un-threaded end into a hole, insert a cam lock (R) into the hole and make sure that the hole in the cam lock (R) faces the outside edge of the part being used.
- 2 Insert the un-threaded end of the cam pin (Q) through the hole in the part being used and into the cam lock hole, then rotate the cam lock (R) clockwise with a screwdriver to lock the cam pin (Q) into place.
- 3 Insert a cam lock cover (U) into the cross slot of the cam lock (R) to conceal.

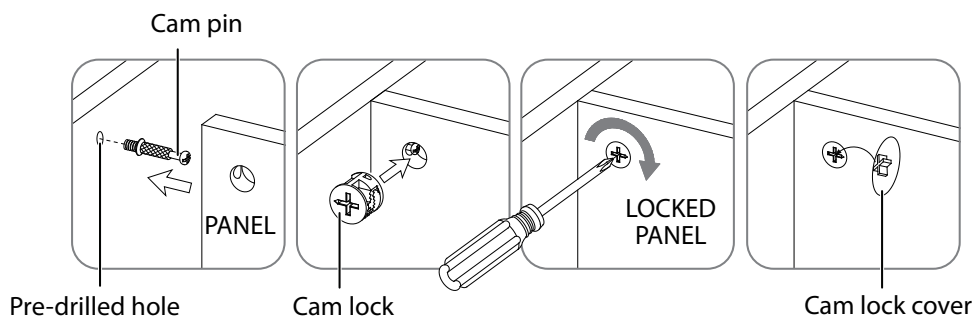


## Assembling your TV stand

**Tip:** Assemble your TV stand on a carpeted floor or the empty TV stand carton to avoid scratching it.


**Note:** Do not fully tighten all bolts until you finish assembling all of the parts. After assembly, go back and fully tighten all bolts. This will make the assembly easier.

### STEP 1: Preparing the media shelf and bottom panel


You need:

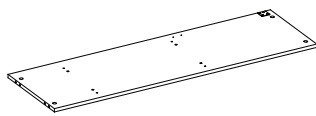


**B** Media shelf (1)

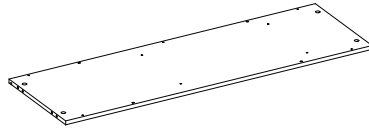

**C** Bottom panel (1)



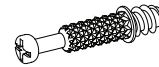




**Q** Cam pin (10)

 




Phillips screwdriver

- Securely screw the cam pins (**Q**) into the indicated holes in the panels (**B** and **C**), using a Phillips screwdriver.

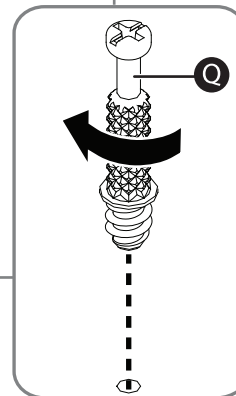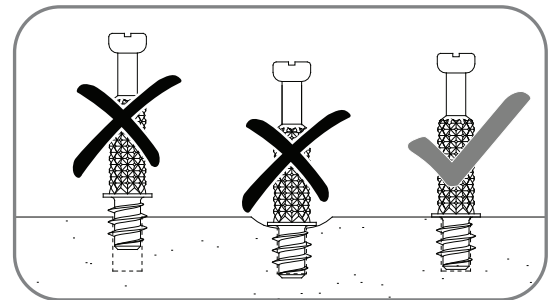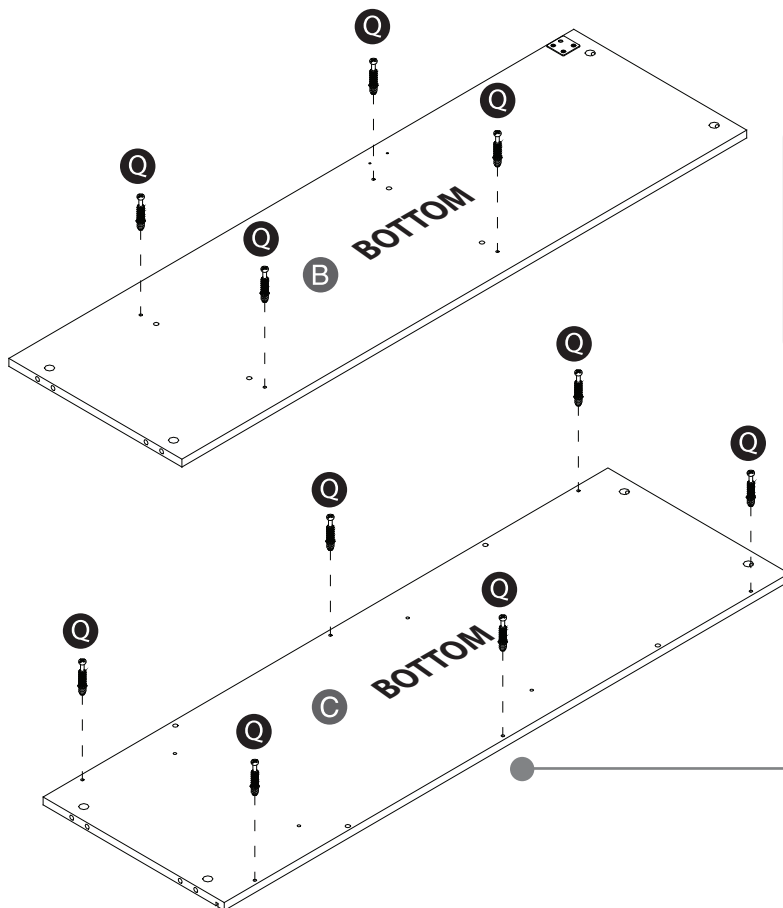

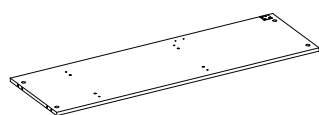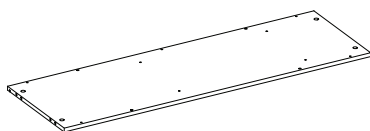
**STEP 2: Preparing the media shelf and bottom panel (continued)****You need:****B** Media shelf (1)**C** Bottom panel (1)**P** Wood dowel (8)**EE** Glue (1)

- Glue wood dowels (**P**) into the drilled inner holes on the ends of the panels (**B** and **C**).

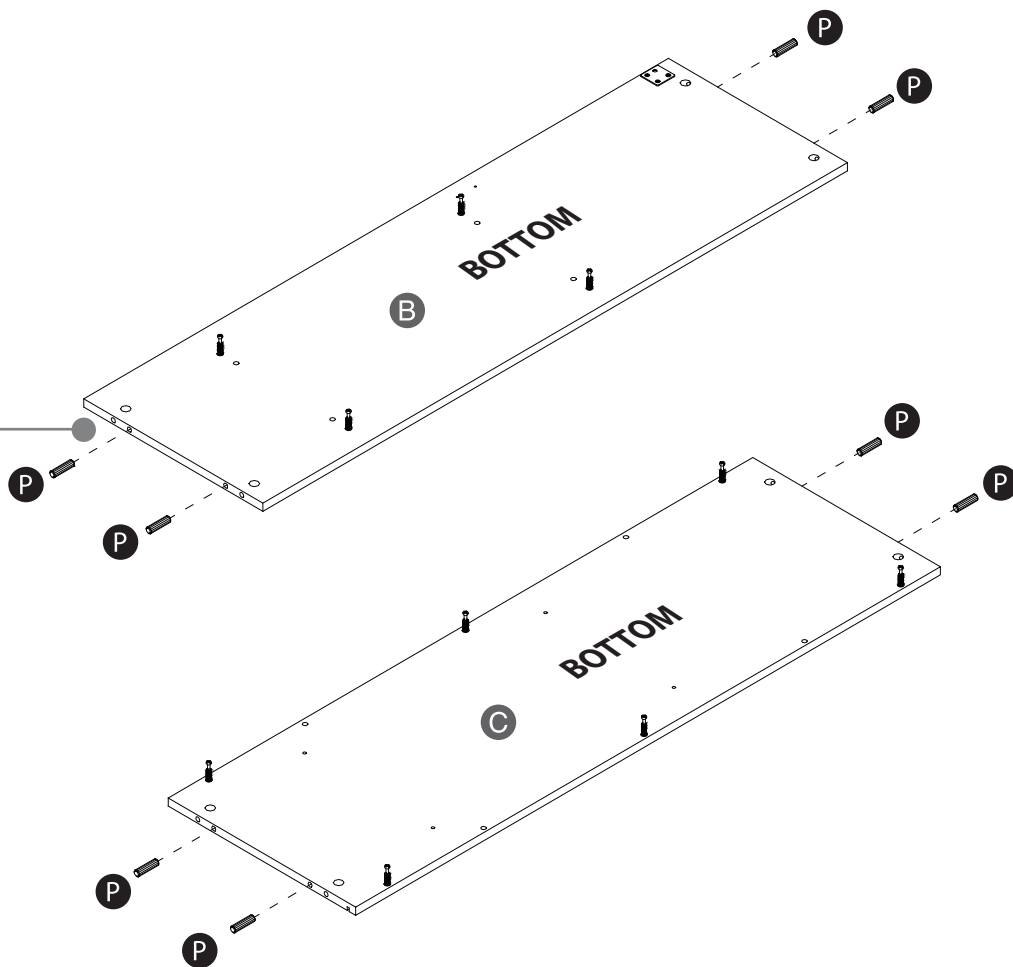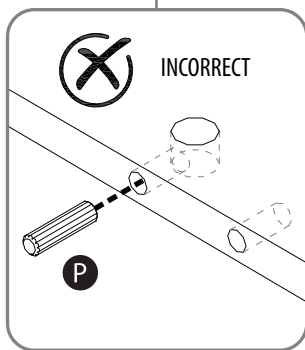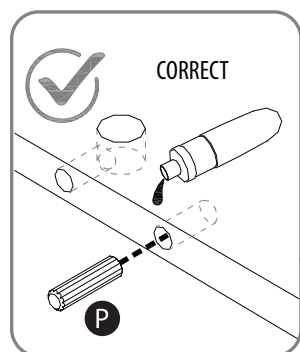


## STEP 3: Installing the magnetic catch on the media shelf


You need:

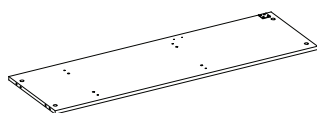


**B** Media shelf (1)

 

**Z** M3 x 15 mm screw (2)

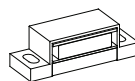





**AA** Magnetic catch (1)

 




Phillips screwdriver

- Align and attach the magnetic catch (**AA**) to the media shelf (**B**) using two M3 x 15 mm screws (**Z**) with the Phillips screwdriver.

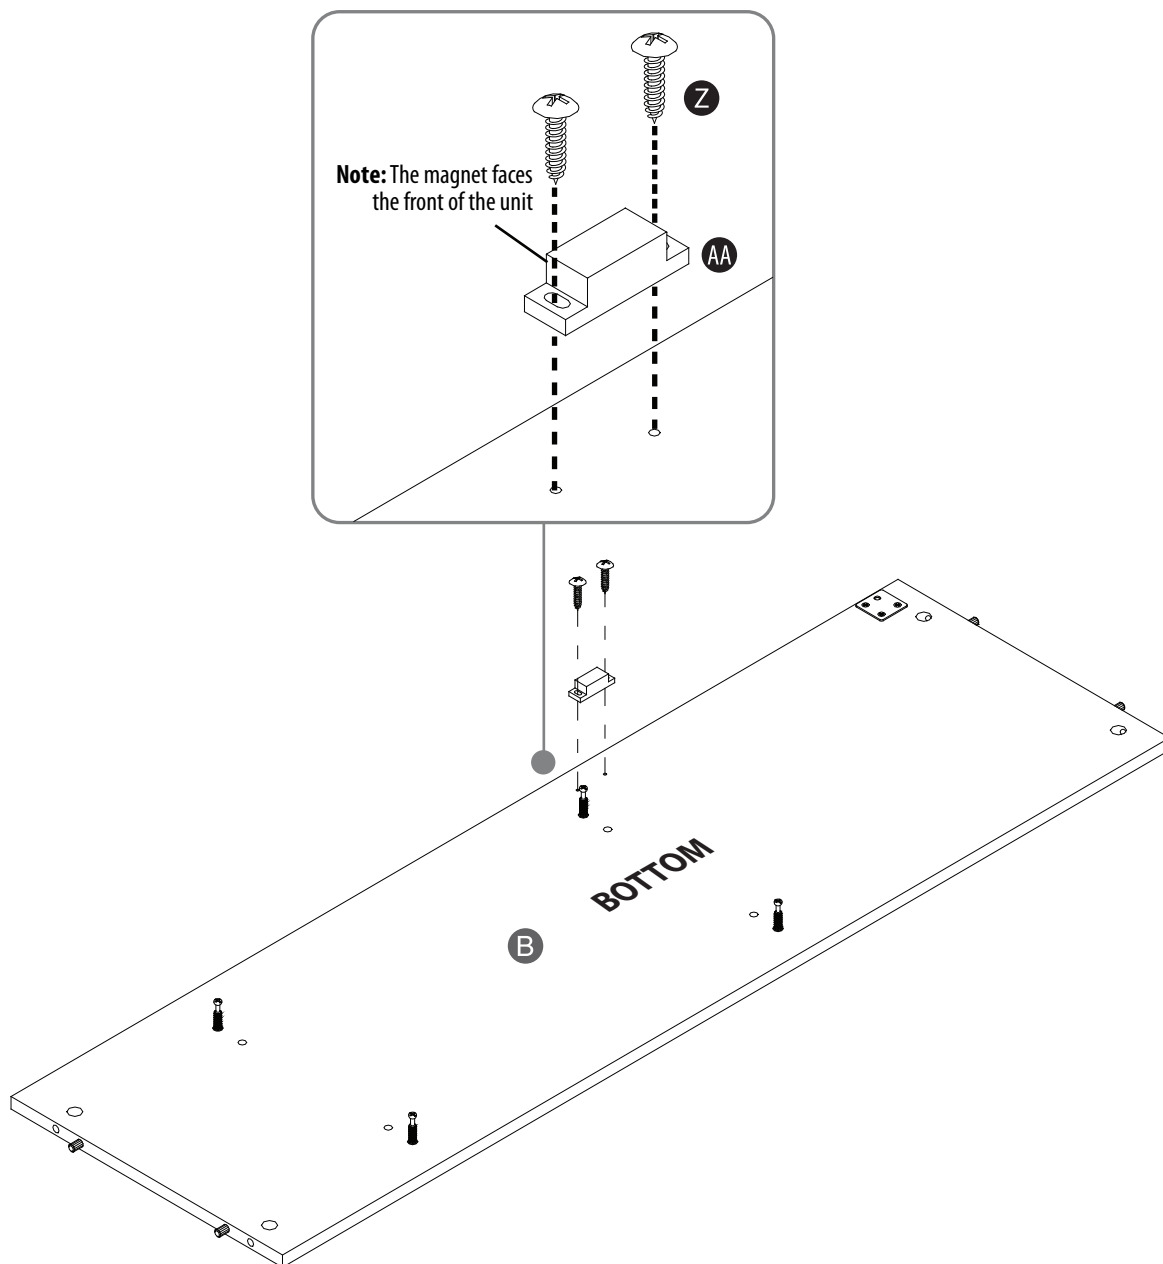

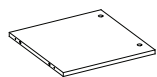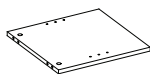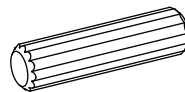
**STEP 4: Preparing the partitions****You need:****G** Left partition (1)**H** Right partition (1)**P** Wood dowel (8)**EE** Glue (1)

- Glue the wood dowels (**P**) into the inner holes pre-drilled on both ends of the partitions (**G** and **H**).

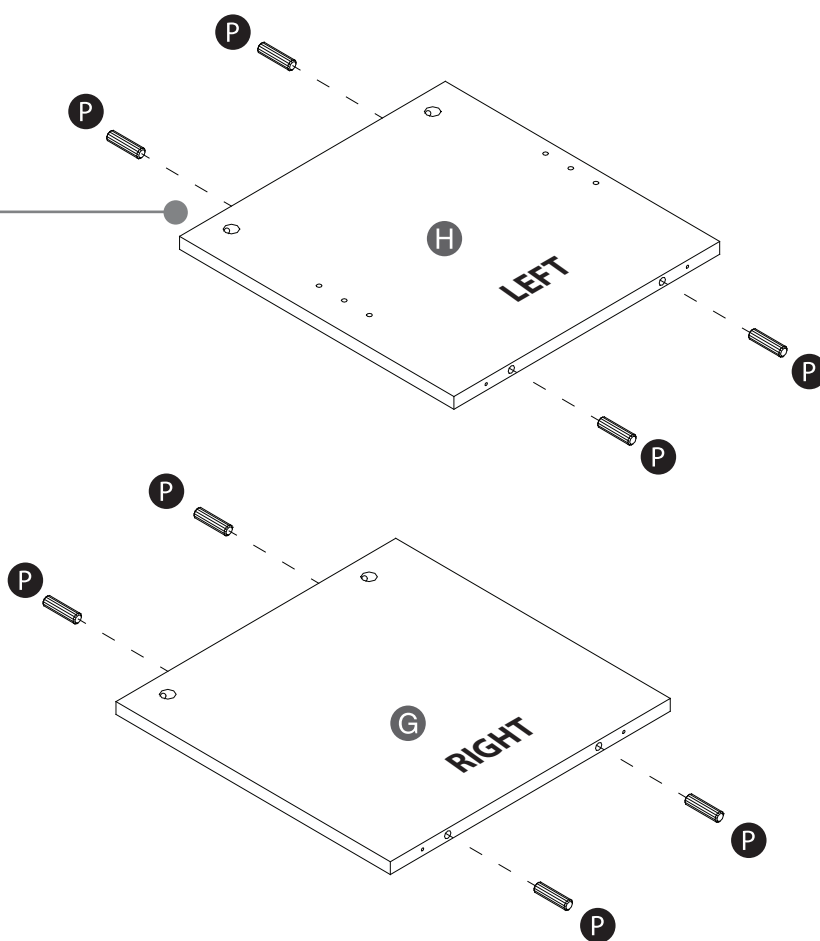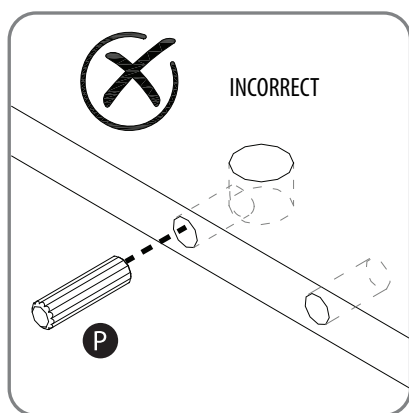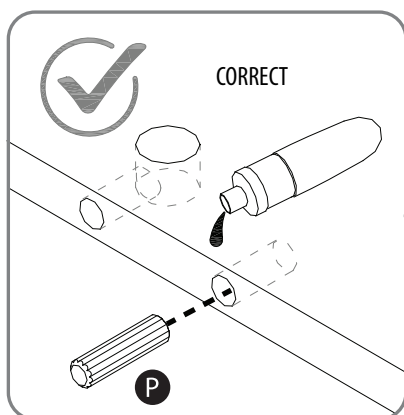


## STEP 5: Installing the right partition to the media shelf




You need:

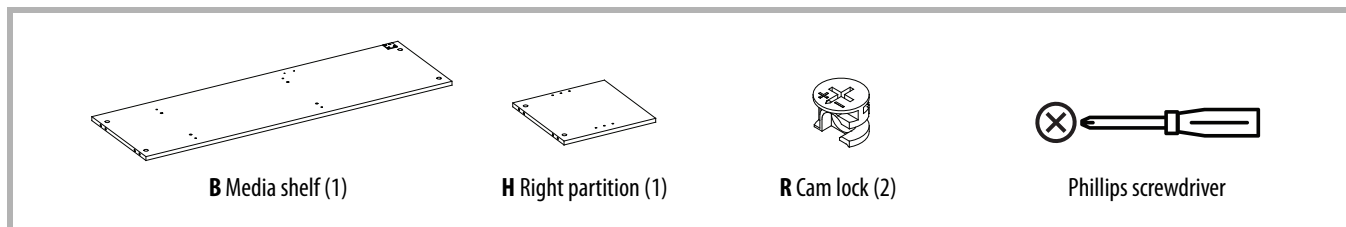

 - Align and attach the right partition (**H**) to the media shelf (**B**) by engaging and tightening two cam locks (**R**) with a Phillips screwdriver.

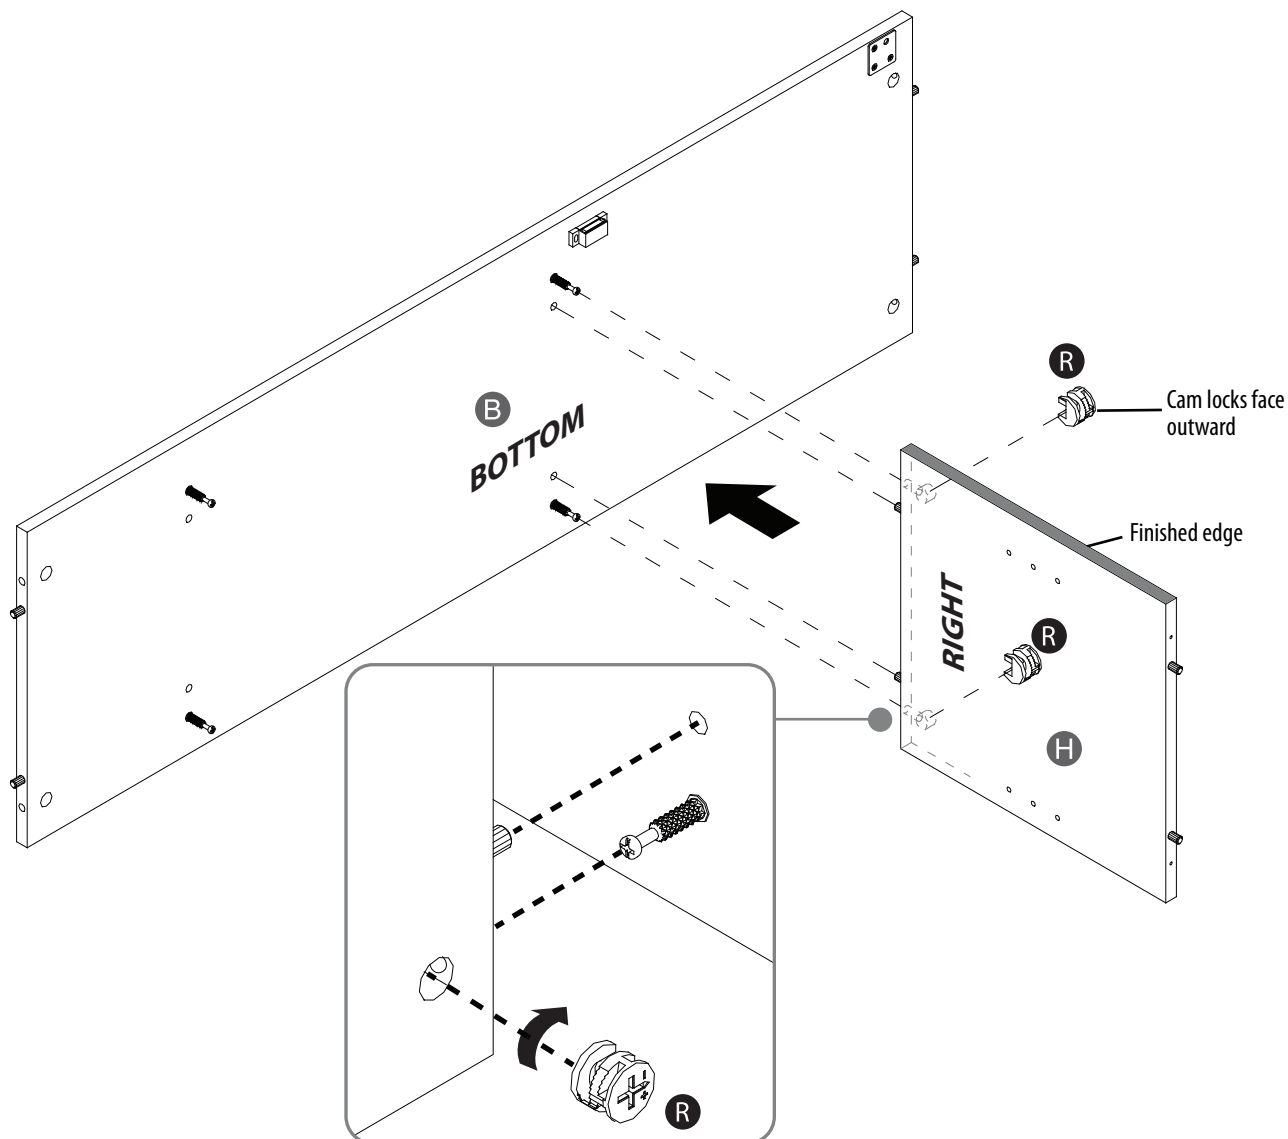


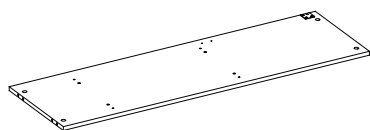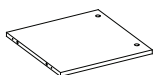

**STEP 6: Installing the left partition to the media shelf****You need:****B** Media shelf (1)**G** Left partition (1)**R** Cam lock (2)


Phillips screwdriver

- Align and attach the left partition (**G**) to the media shelf (**B**) by engaging and tightening two cam locks (**R**) with a Phillips screwdriver.

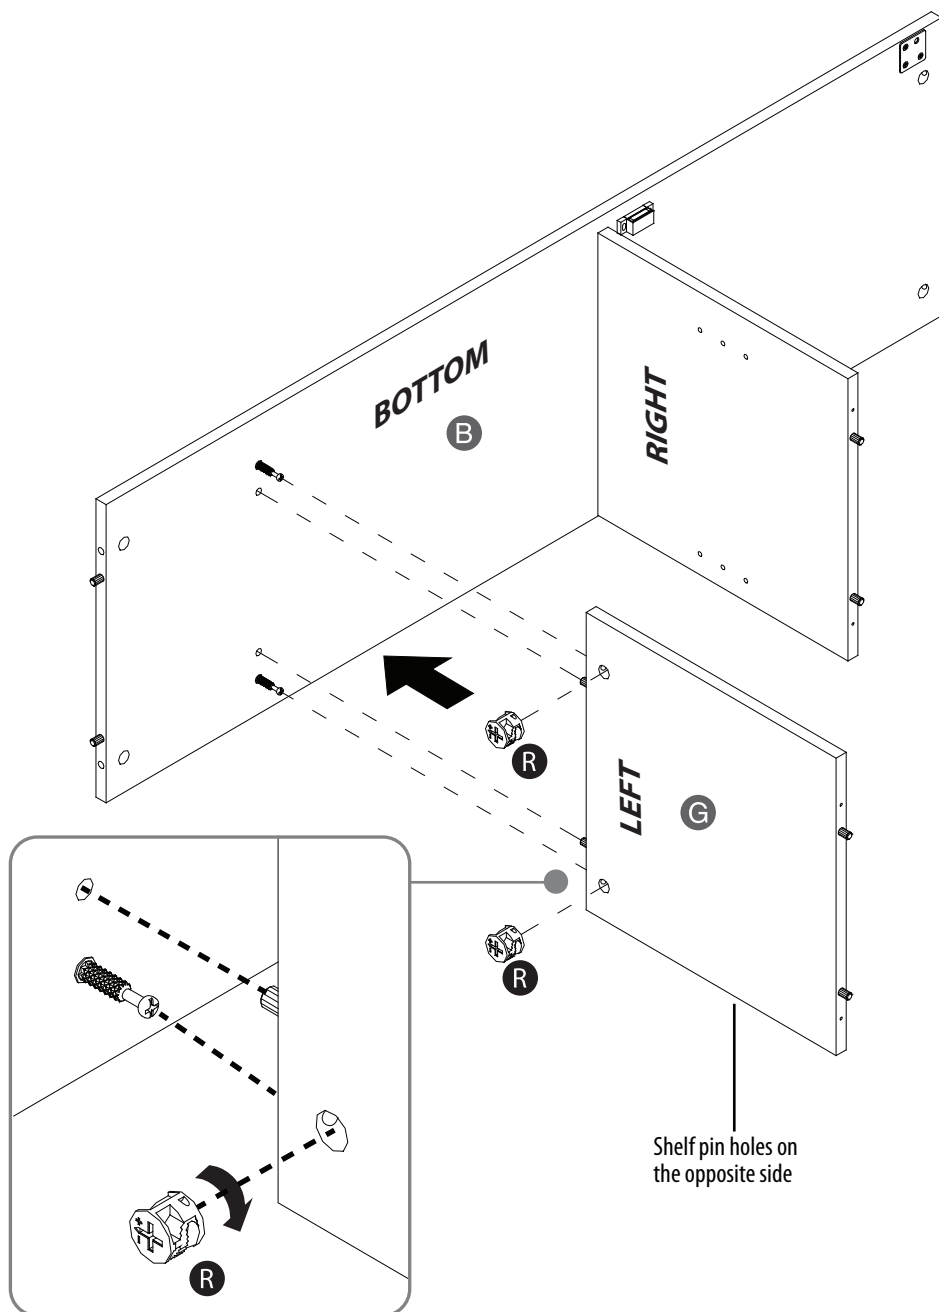






## STEP 7: Attaching the bottom panel to the partitions

You need:

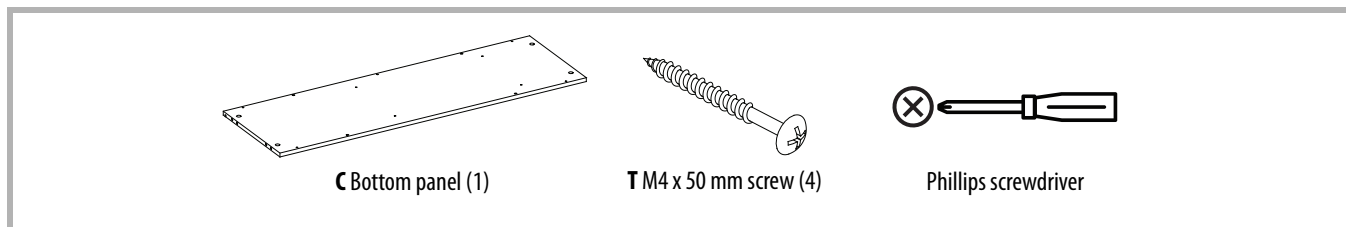




 
- Align and attach the bottom panel (**C**) to both partitions (**G** and **H**) with four M4 x 50 mm screws (**T**) using a Phillips screwdriver. Make sure that the groove for the back panel (**M**) is located at the back of the unit.

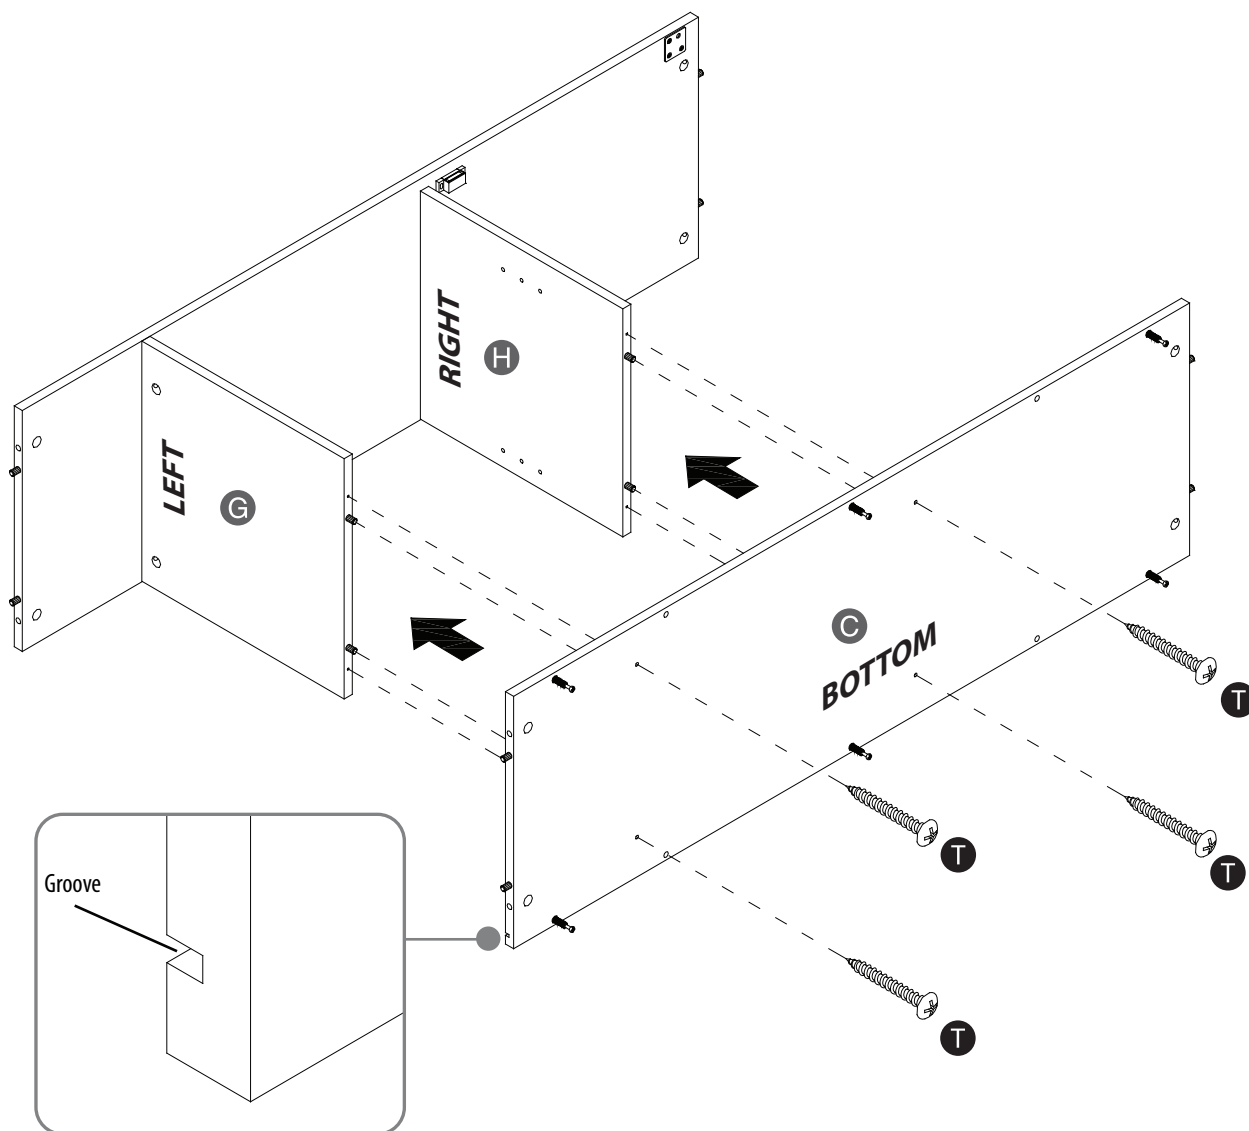

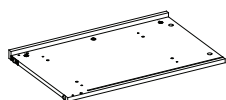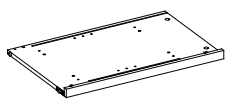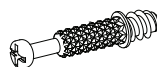**STEP 8: Preparing the side panels****You need:****E** Left side panel (1)**F** Right side panel (1)**Q** Cam pins (12)


Phillips screwdriver

- Securely screw the cam pins (**Q**) into the indicated holes in the side panels (**E** and **F**) using a Phillips screwdriver.

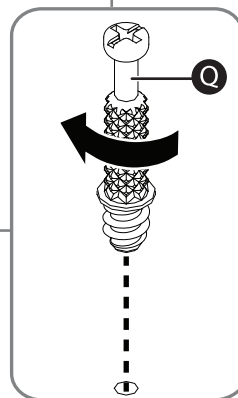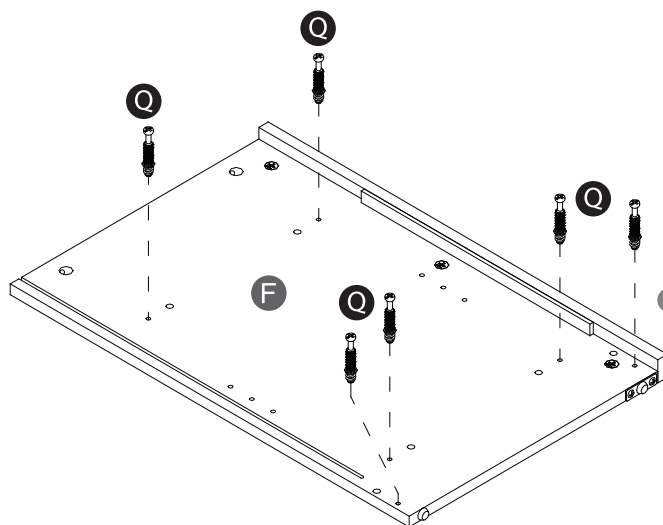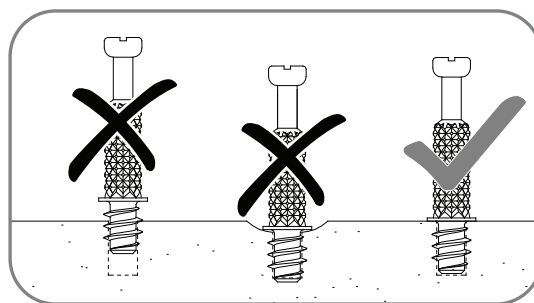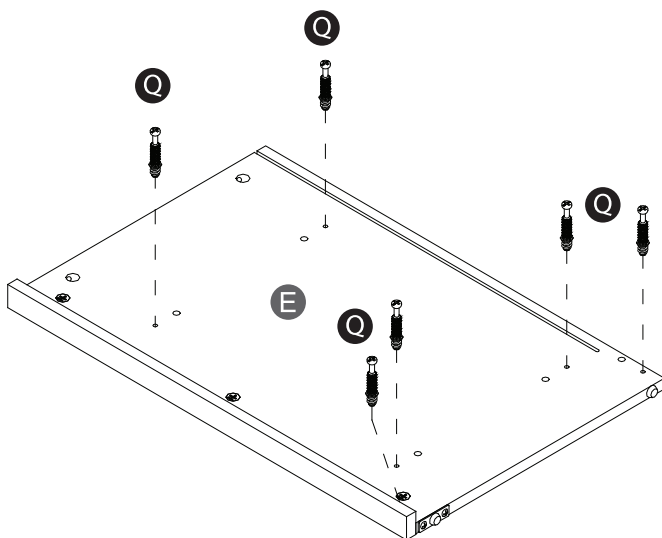




## STEP 9: Preparing the skirting boards and side panels

You need:

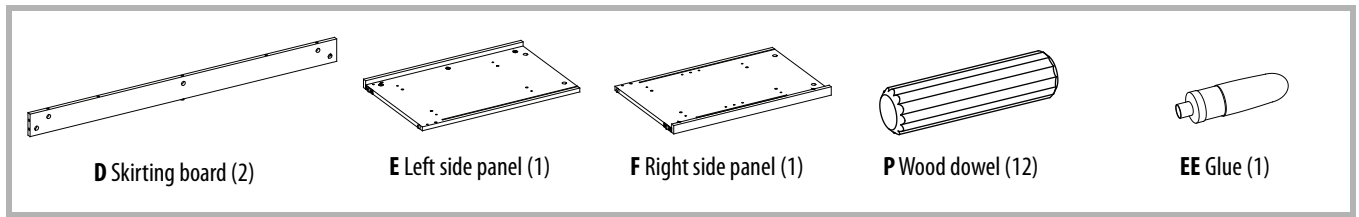

 
- Glue wood dowels (**P**) into the inner holes drilled in the ends of both skirting boards (**D**) and side panels (**E** and **F**).

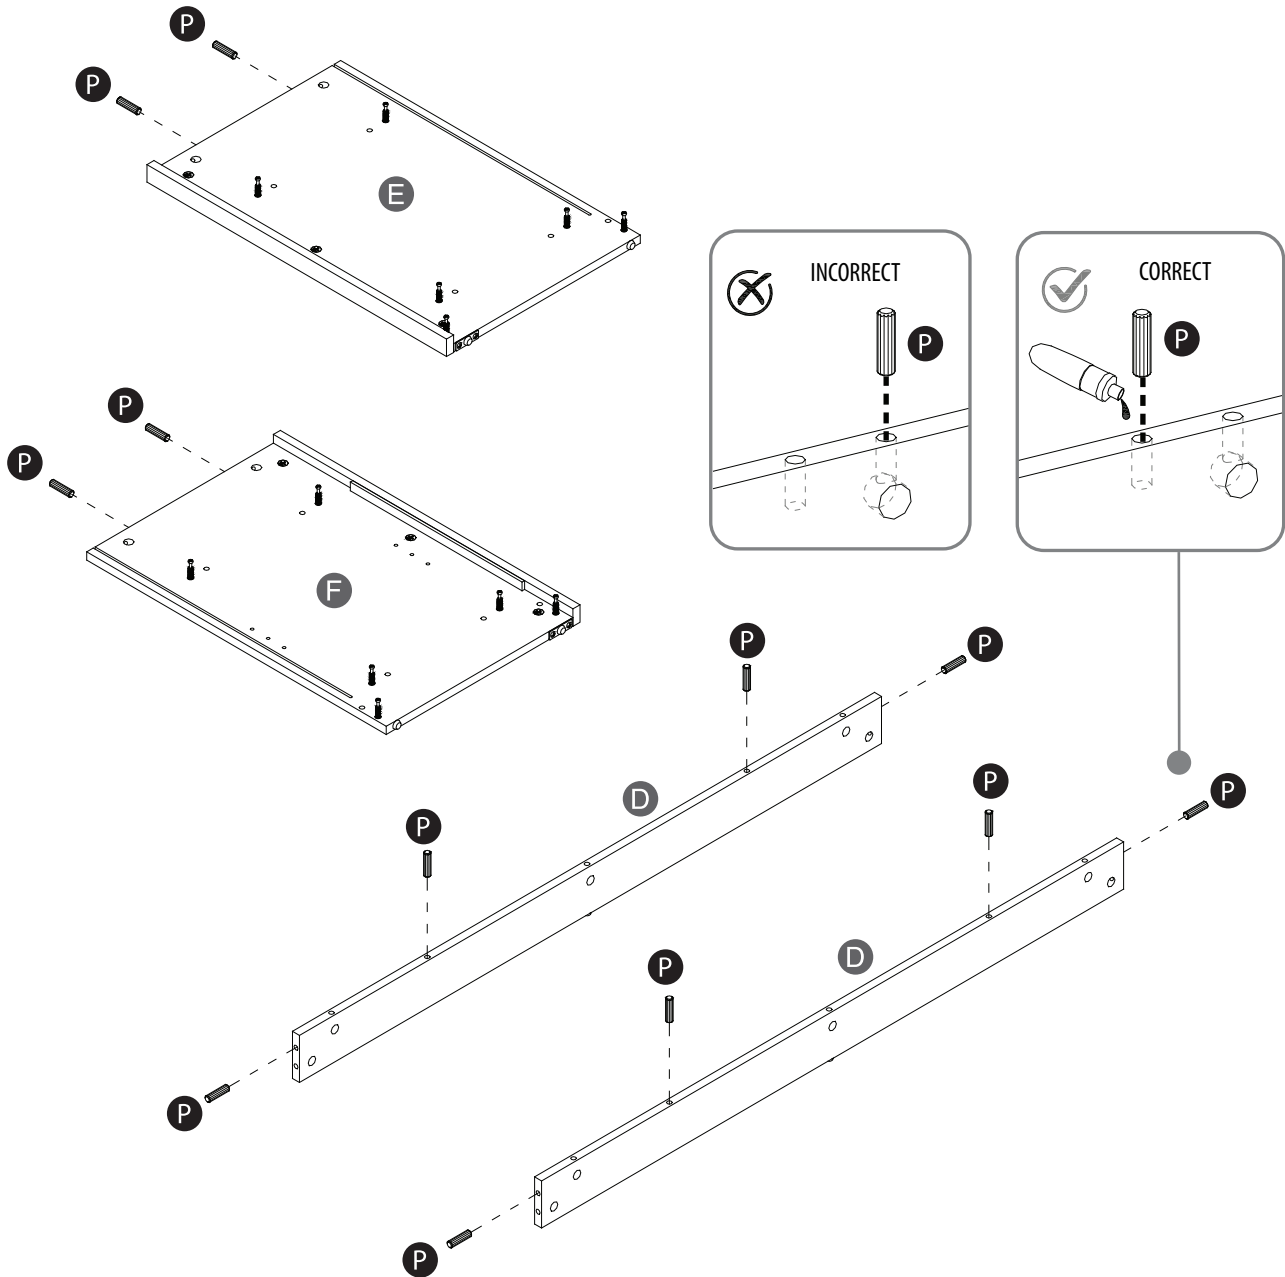

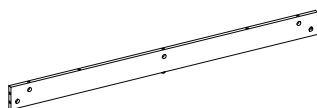**STEP 10: Installing the skirting boards on the bottom panel****You need:****D** Skirting board (2)**R** Cam lock (6)

Phillips screwdriver

- Align and attach both skirting boards (**D**) to the bottom panel (**C**) by engaging six cam locks (**R**) using a Phillips screwdriver.

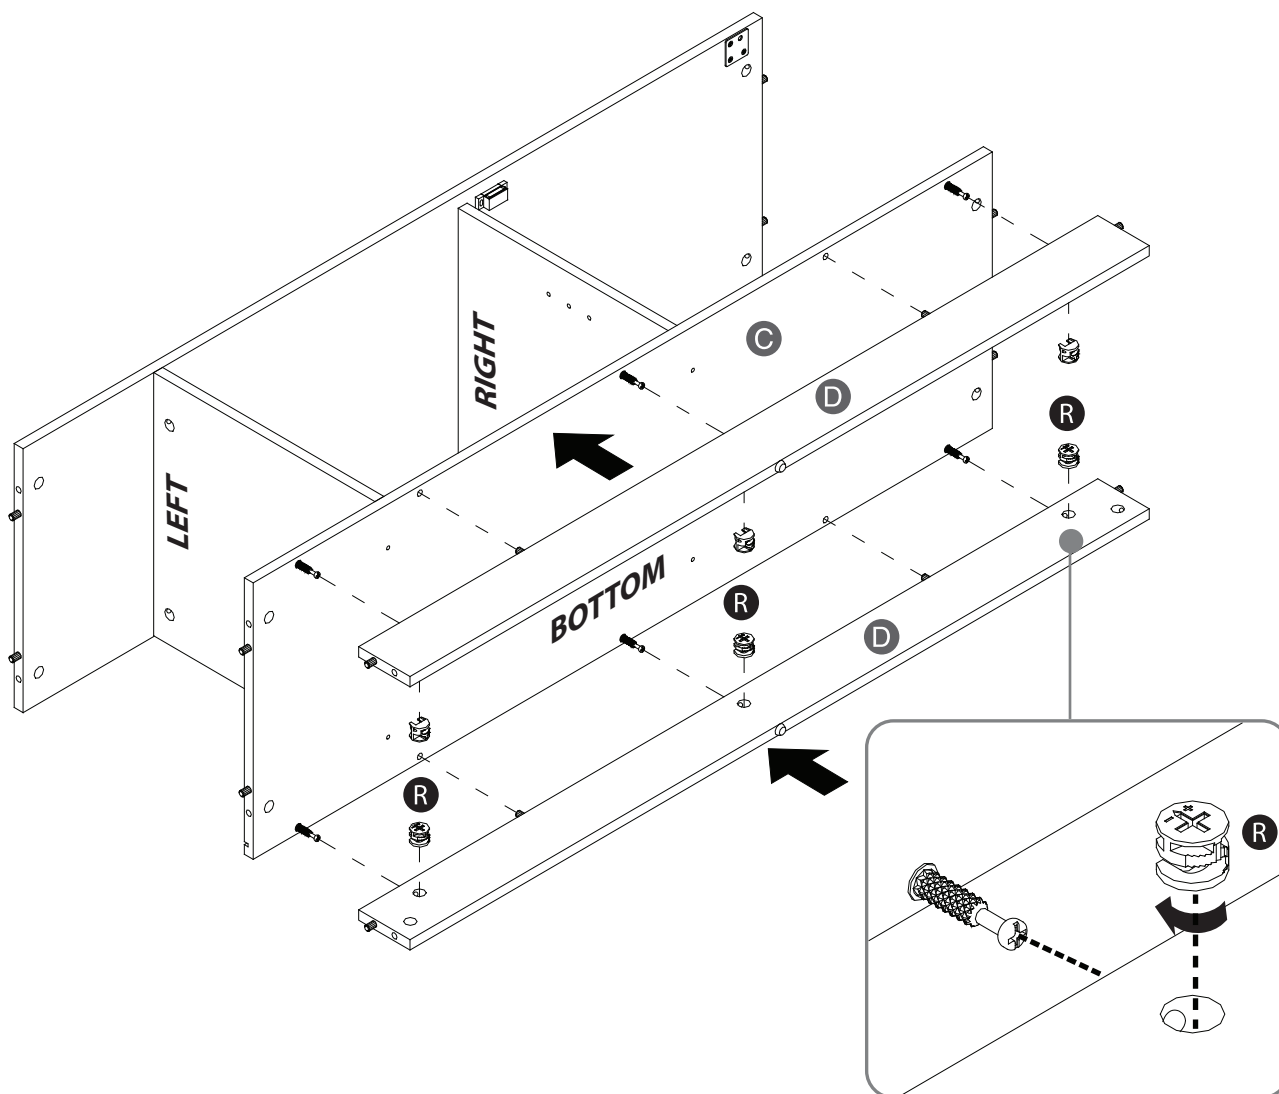


## STEP 11: Installing the side panels on the unit

You need:




**E** Left side panel (1)

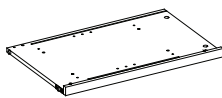

**F** Right side panel (1)






 
**R** Cam lock (12)



Phillips screwdriver



 
- Align and attach both side panels (**E** and **F**) to the previously assembled unit by engaging twelve cam locks (**R**) using a Phillips screwdriver.

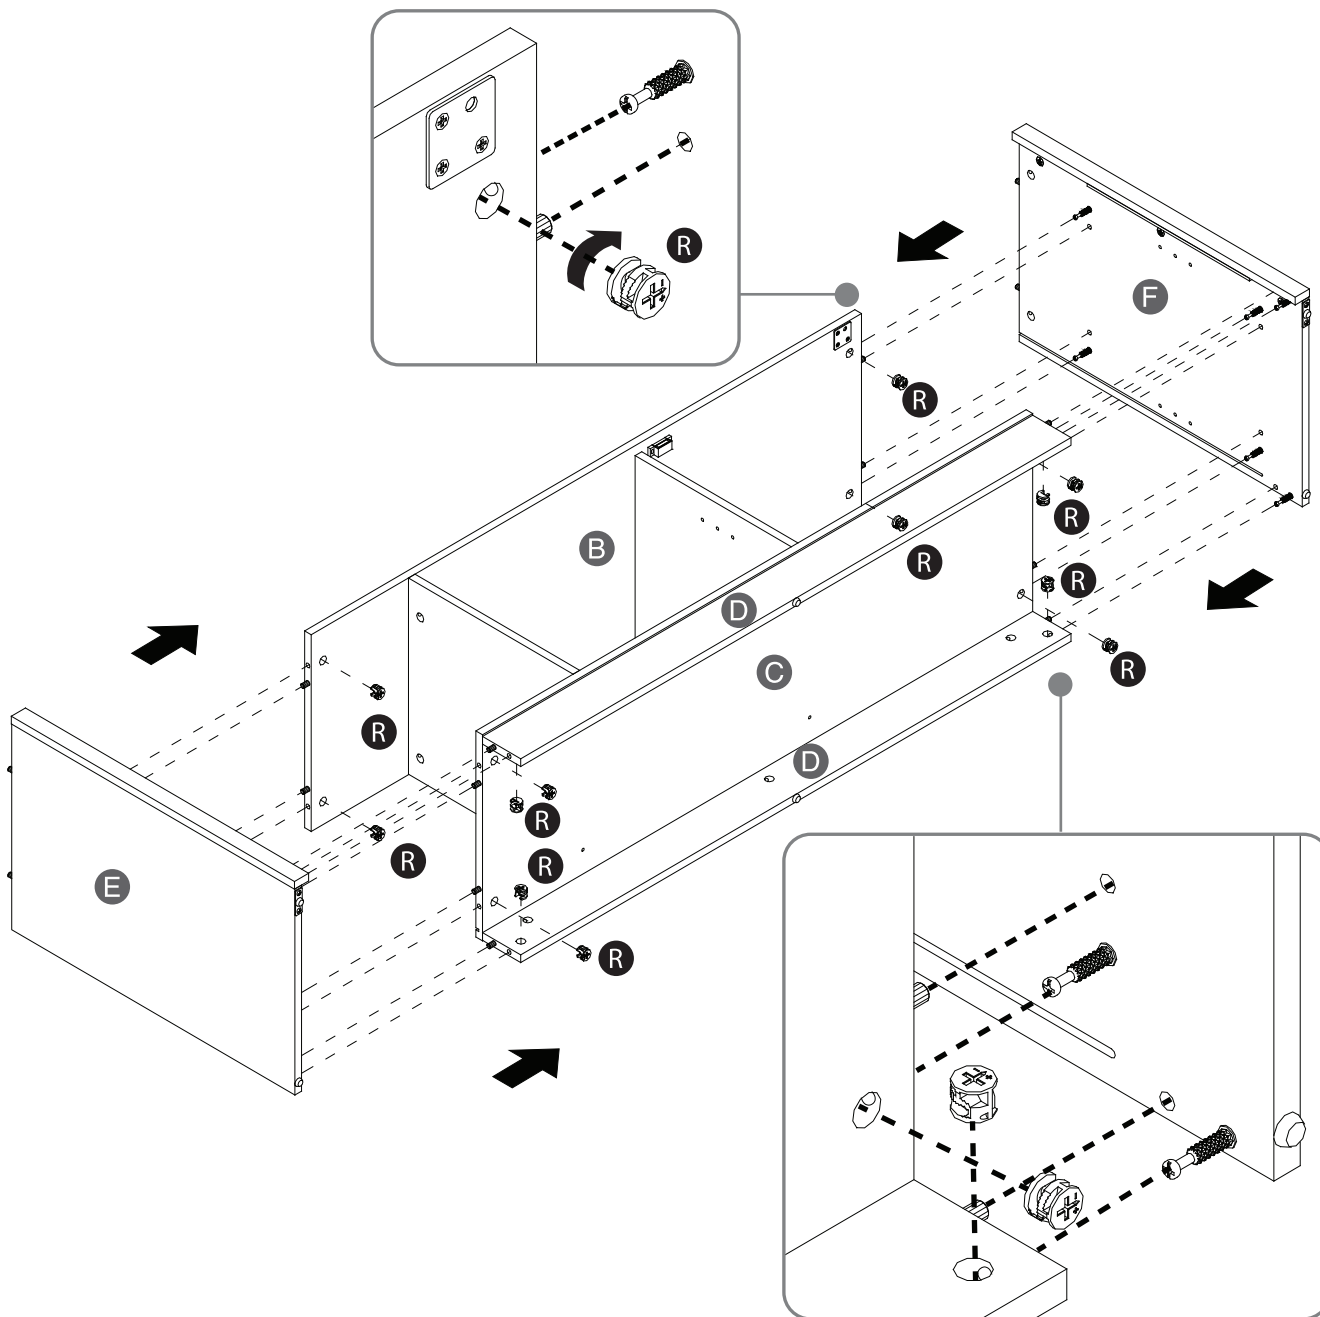

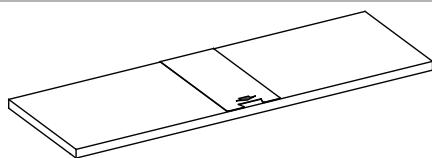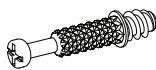**STEP 12: Preparing the top panel and media shelf assembly****You need:****A** Top panel (1)**Q** Cam pin (8)


Phillips screwdriver

- 1 With assistance, turn the unit upright and position it near the final desired location.
- 2 Securely screw cam pins (**Q**) into the indicated holes in the top panel (**A**) and media shelf (**B**), using a Phillips screwdriver.

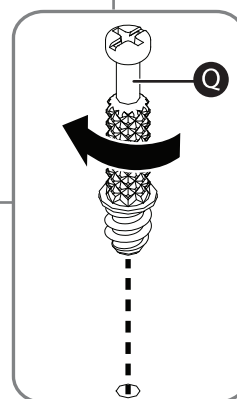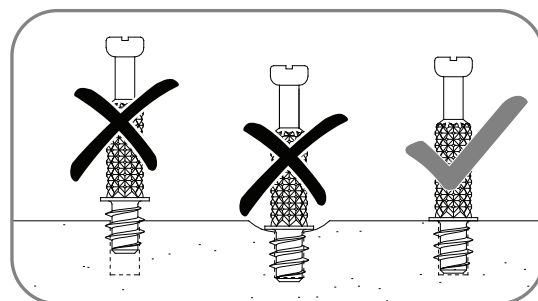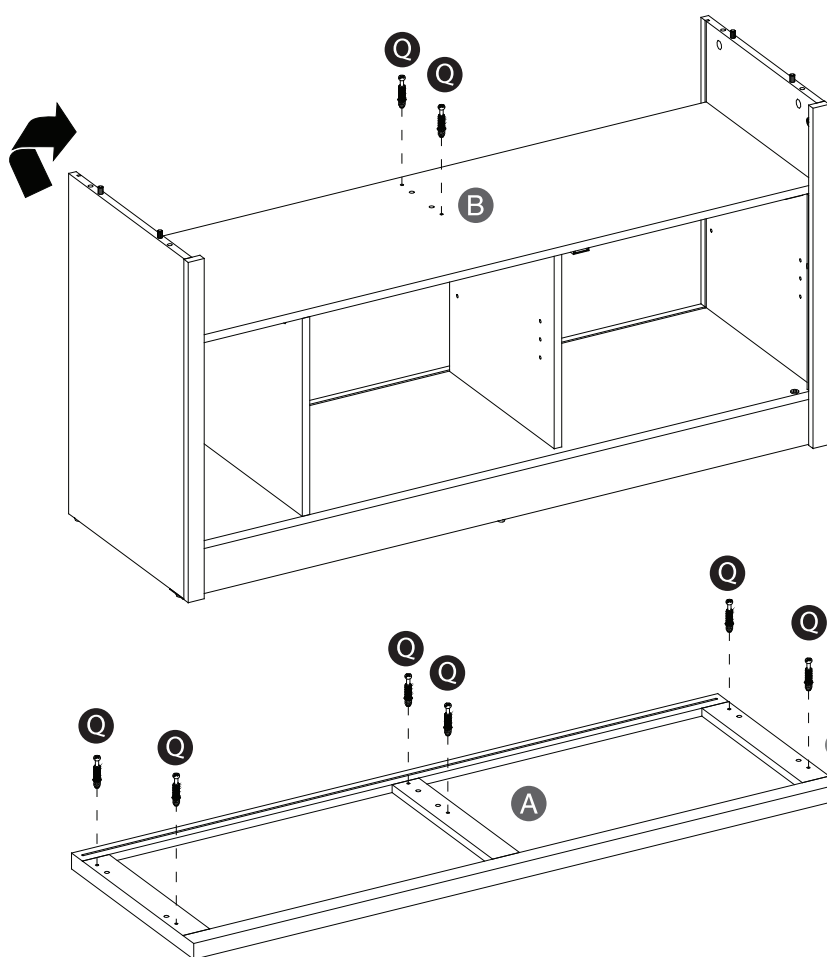


## STEP 13: Preparing the upper partition



You need:

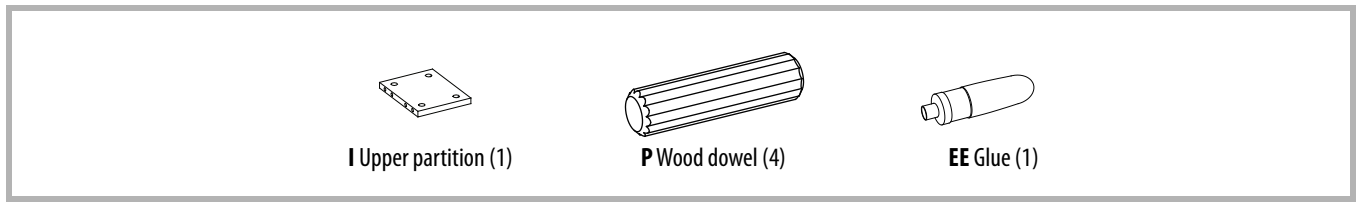

  - Glue two wood dowels (**P**) into the pre-drilled inner holes in both ends of the upper partition (**I**).

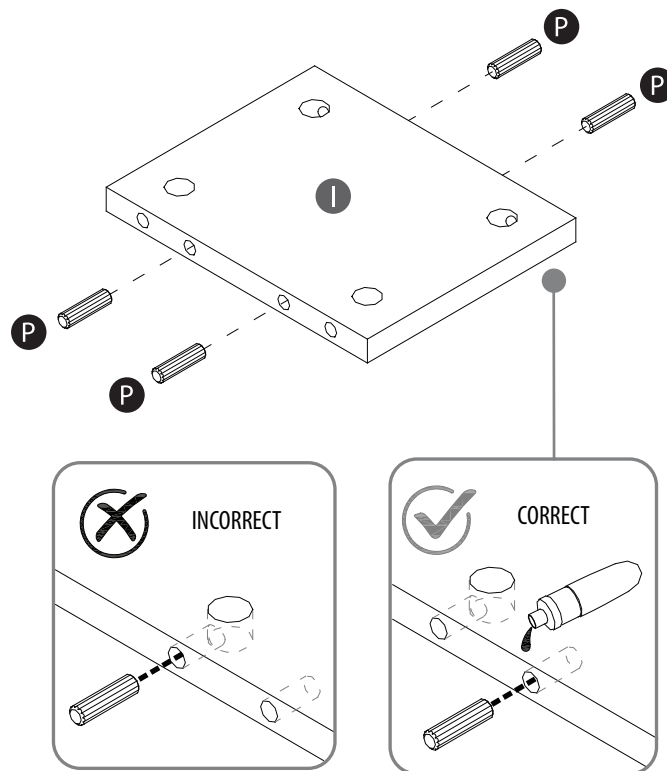




**STEP 14: Attaching the upper partition to the media shelf****You need:****I** Upper partition (1)**R** Cam lock (2)


Phillips screwdriver

- Align and attach the upper partition (**I**) to the media shelf (**B**) by engaging two cam locks (**R**) with a Phillips screwdriver.

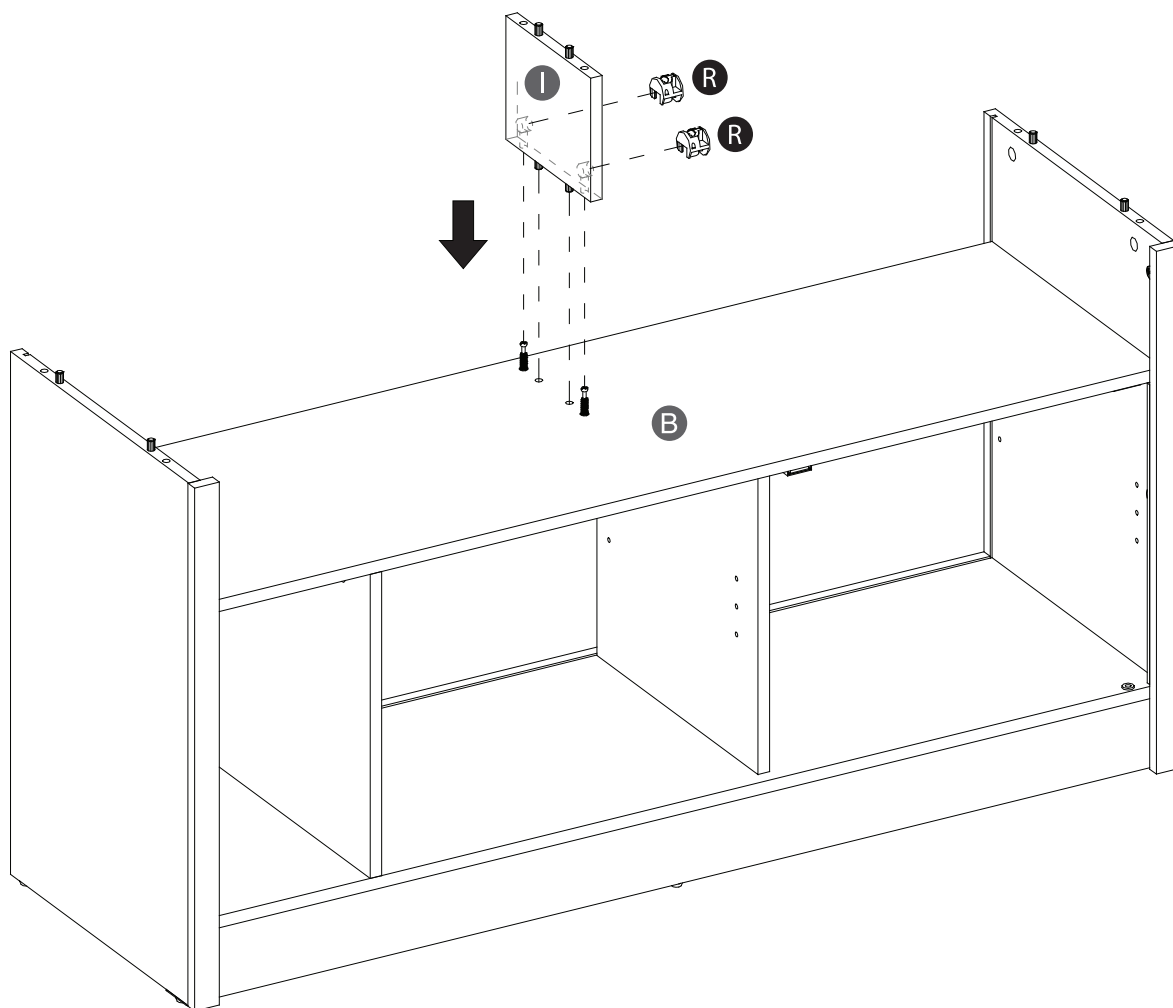




## STEP 15: Installing the back panel

You need:

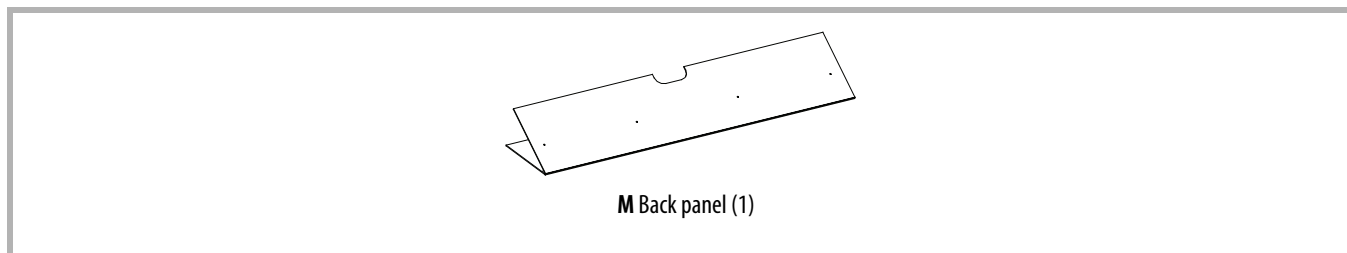

 
- Unfold the back panel (**M**) and slide it into the grooves on both side panels (**E** and **F**) until the bottom edge is fully inserted into the bottom panel (**C**). Make sure that the two cutouts on the back panel align with the partition panels (**G** and **H**) so that the openings are accessible from both sides of the panels.

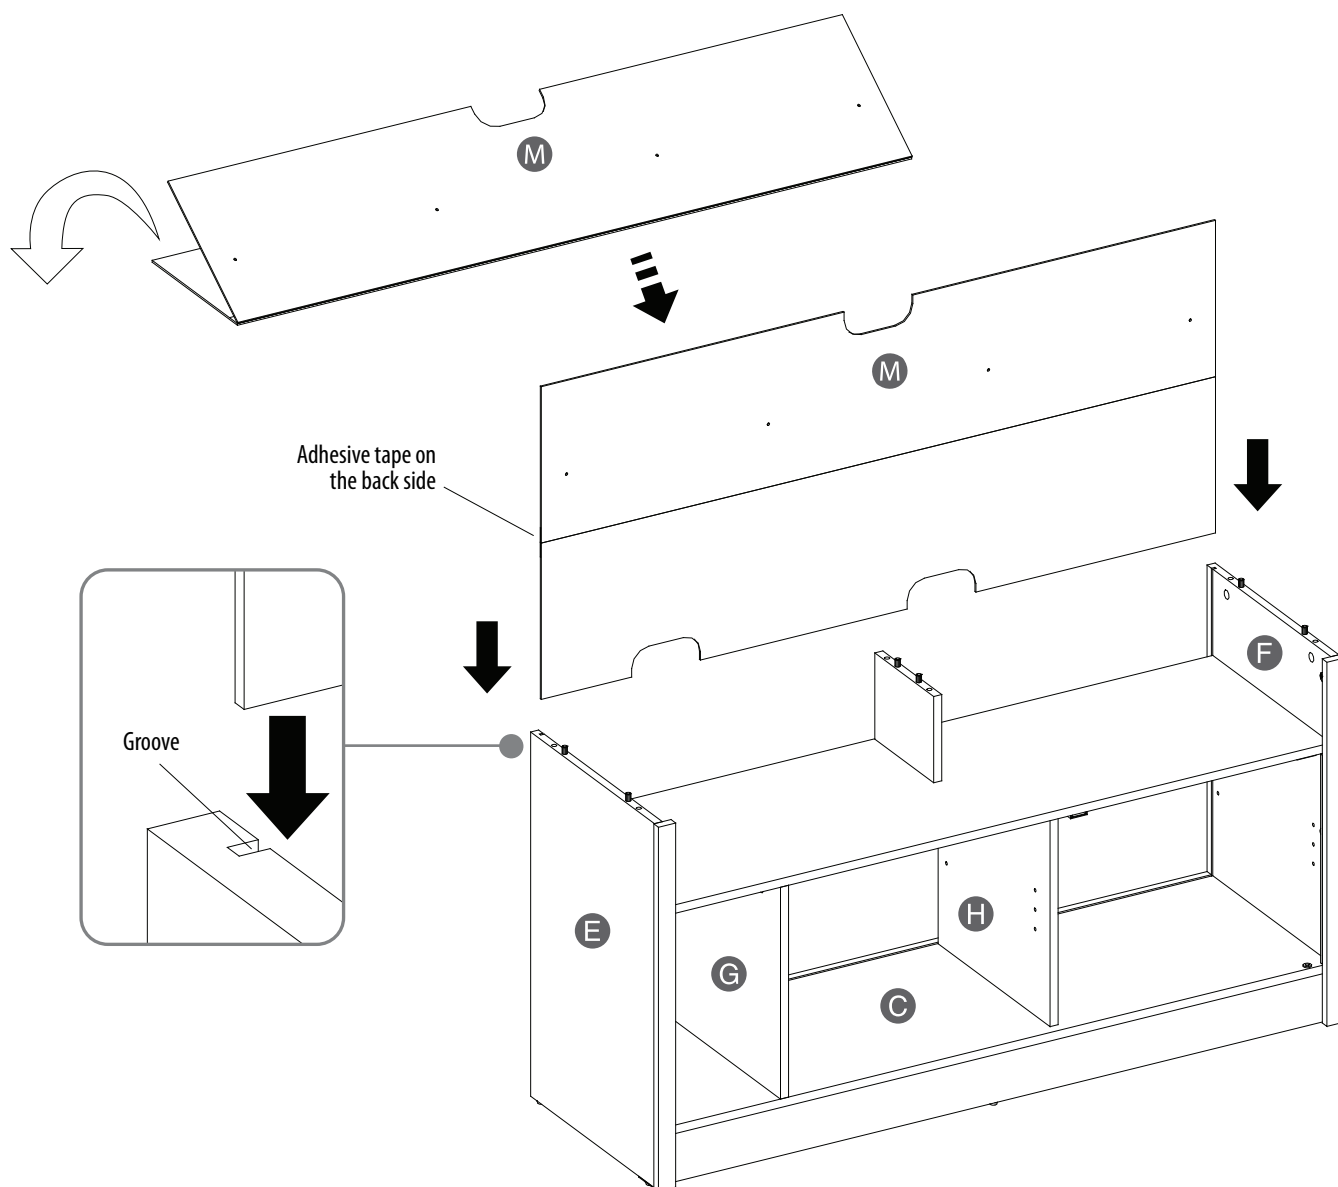

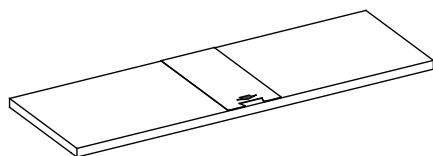**STEP 16: Installing the top panel****You need:****A** Top panel (1)**R** Cam lock (6)

Phillips screwdriver

- Align and attach the top panel (**A**) to both side panels (**E** and **F**) and the upper partition (**I**) with six cam locks (**R**), using a Phillips screwdriver.

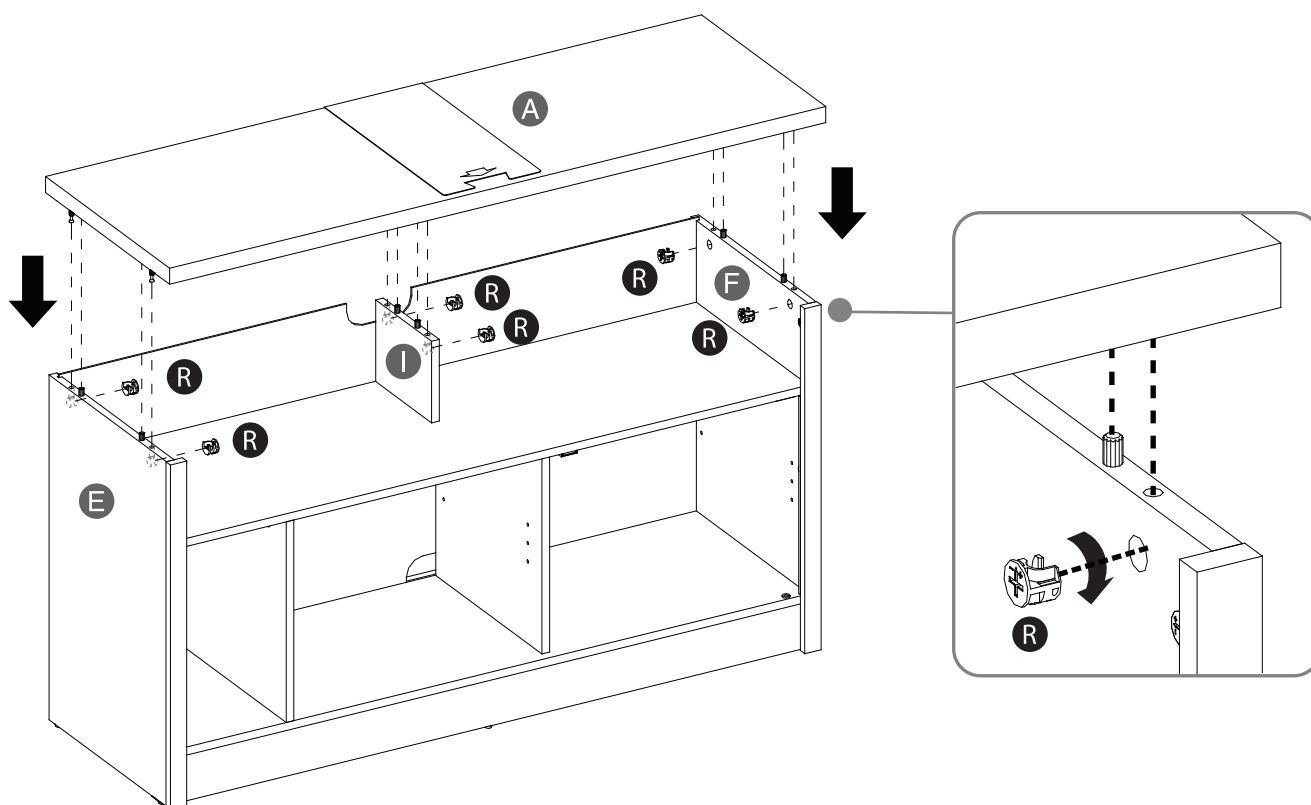


## STEP 17: Fastening the back panel to the media shelf

You need:




 
S M3.5 x 15 mm screw (4)



Phillips screwdriver

 
- Insert four M3.5 x 15 mm screws (**S**) through the holes in the back panel (**M**) and secure it to the media shelf (**B**) with a Phillips screwdriver.

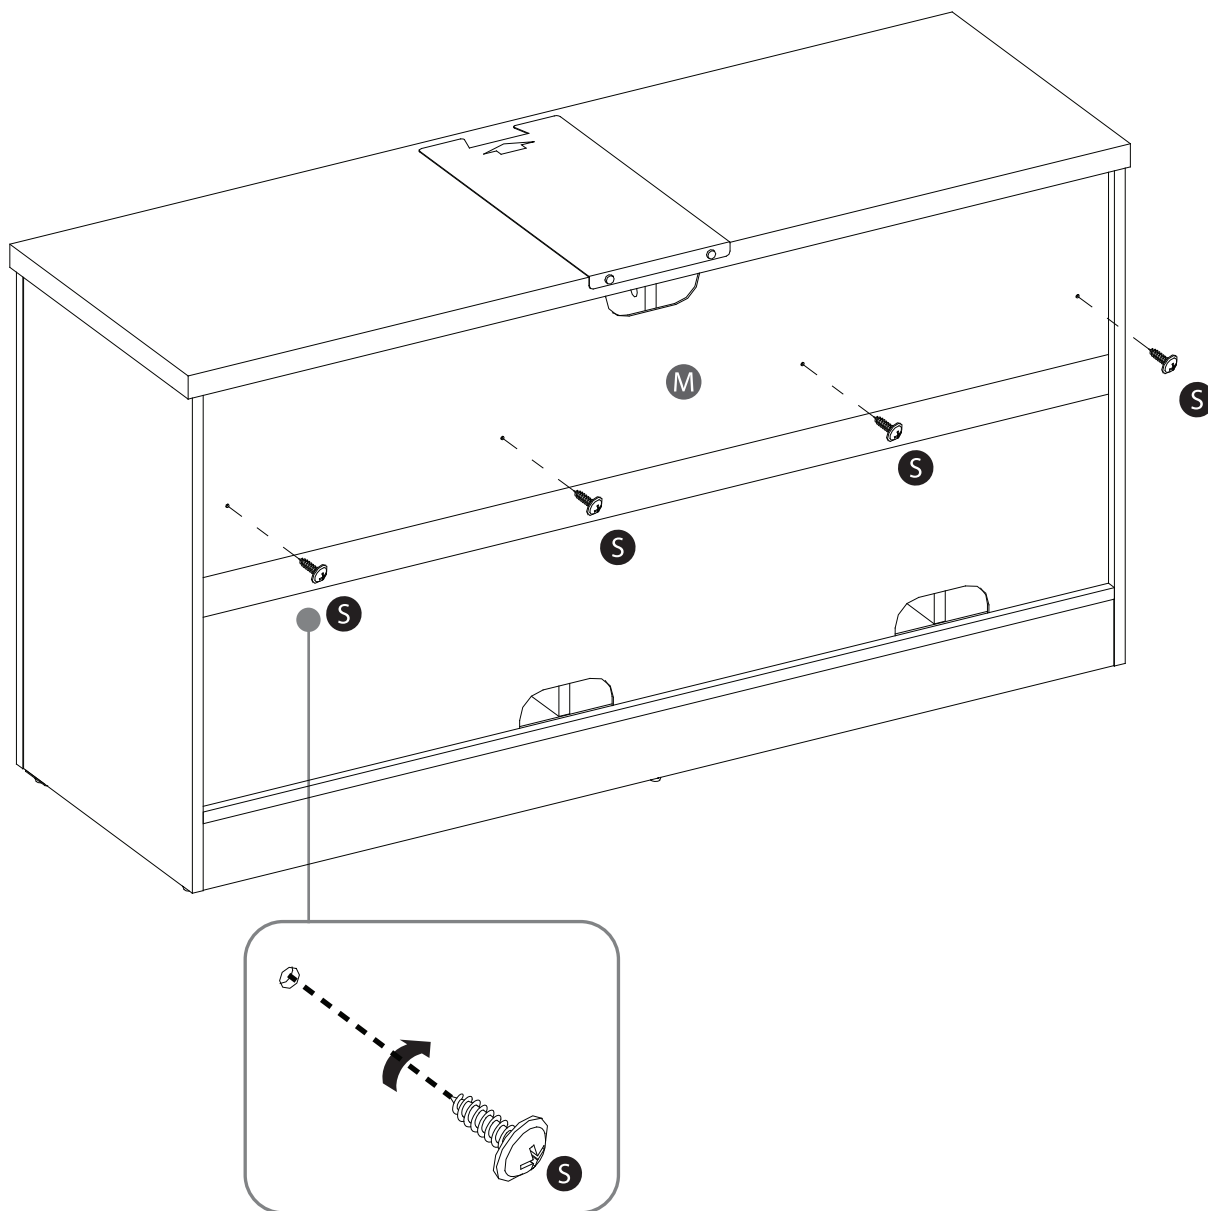

**STEP 18: Fastening the back panel to the assembled unit****You need:****V** Plastic holders (10)**W** M3 x 17 mm screw (10)


Phillips screwdriver

- 1 Insert ten plastic holders (**V**) evenly into the gaps between the back panel (**M**) and the panels (**A**, **C**, **E**, and **F**) as indicated in the illustration.
- 2 Secure the plastic holders into place with ten M3 x 17 mm screws (**W**), using a Phillips screwdriver.

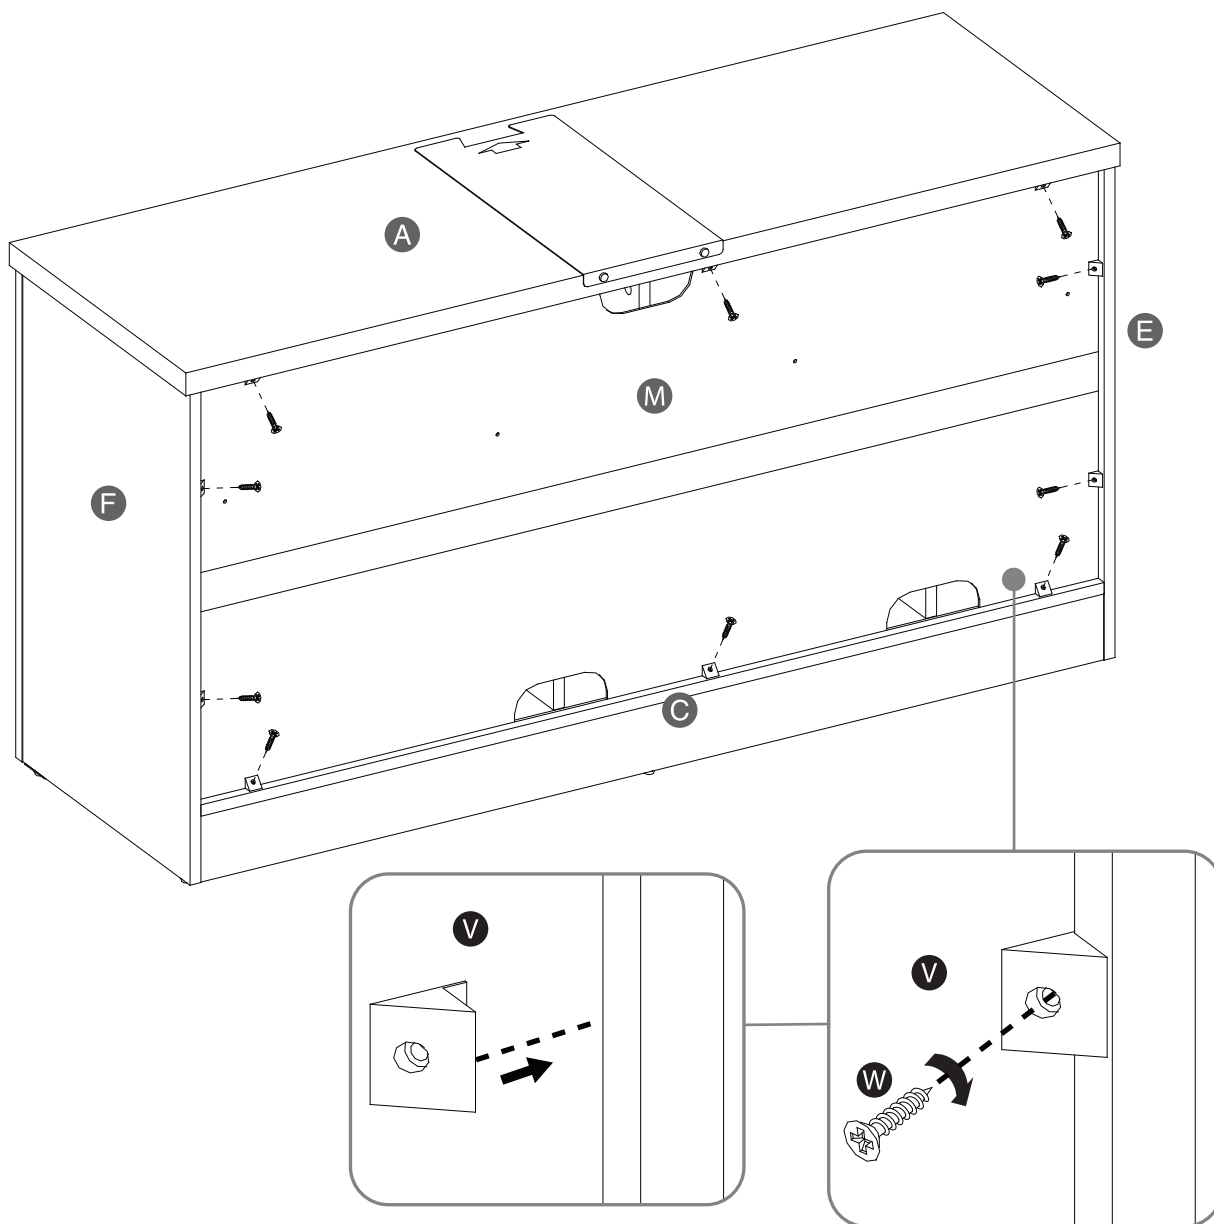



## STEP 19: Installing the metal strike plate and handle to the door

You need:

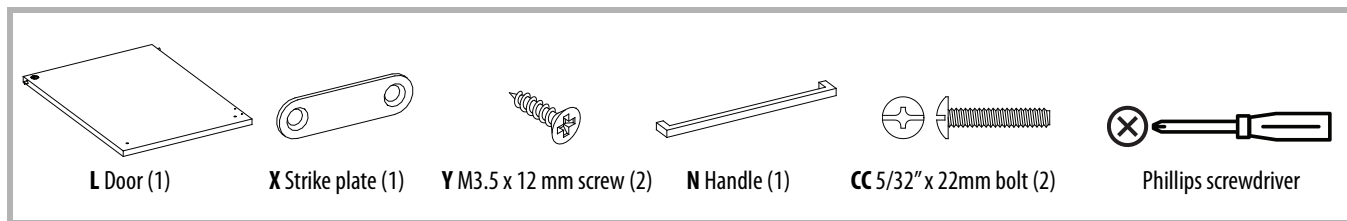


- 1 Using the pilot holes in the door as a guide, fasten the strike plate (**X**) to the door (**L**) with two M3.5 x 12 mm screws (**Y**), using a Phillips screwdriver.
- 2 Install the handle (**N**) to the front of the door (**L**) with two 5/32" x 22 mm bolts (**CC**), using a Phillips screwdriver.

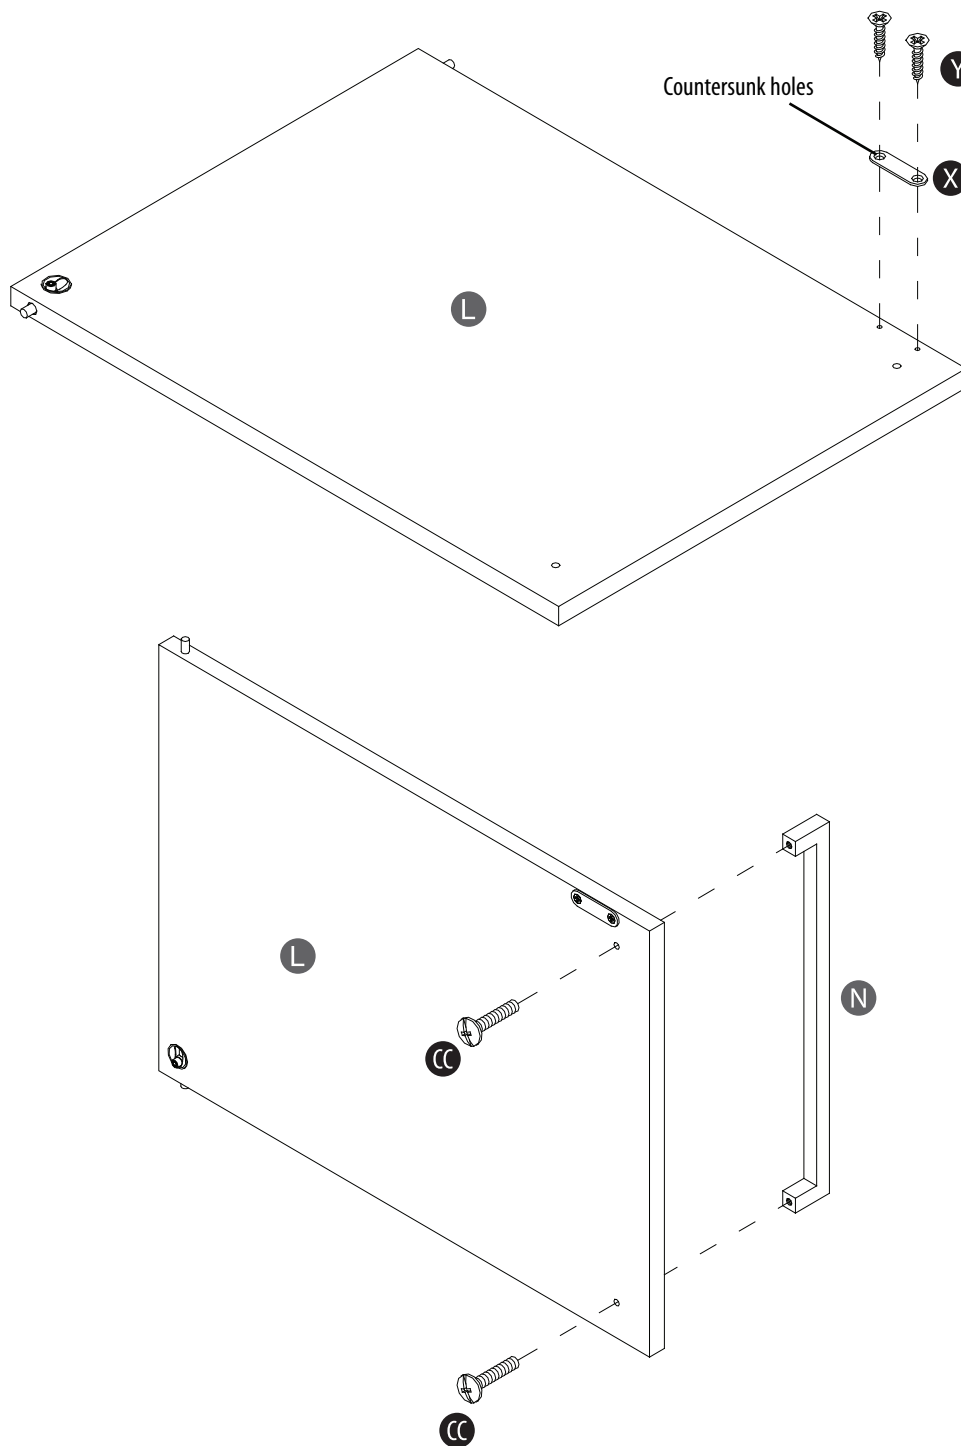

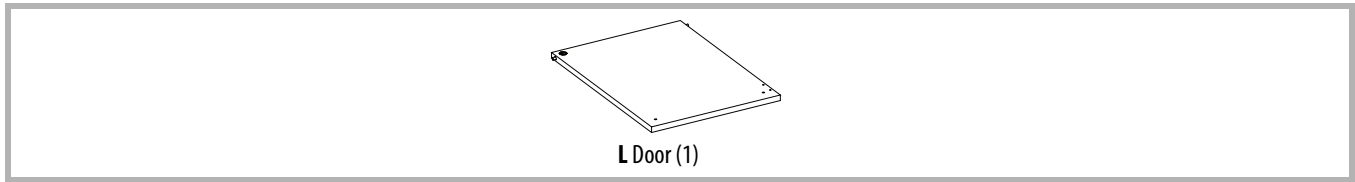
**STEP 20: Installing the door****You need:**

- 1 Tilt and slip the non-removable pin on the top of door (L) into the metal bracket on the bottom of the media shelf (B).
- 2 Push the release lever on the inside bottom of the door all the way up so that the pin is retracted and flush with the bottom edge of the door (L).
- 3 Align the bottom pin of the door (L) with the center of the rubber bushing that's pre-attached on the bottom panel (C).
- 4 Let go of the release lever so that the bottom pin of door (L) slides into the rubber bushing and allows the door to swing.

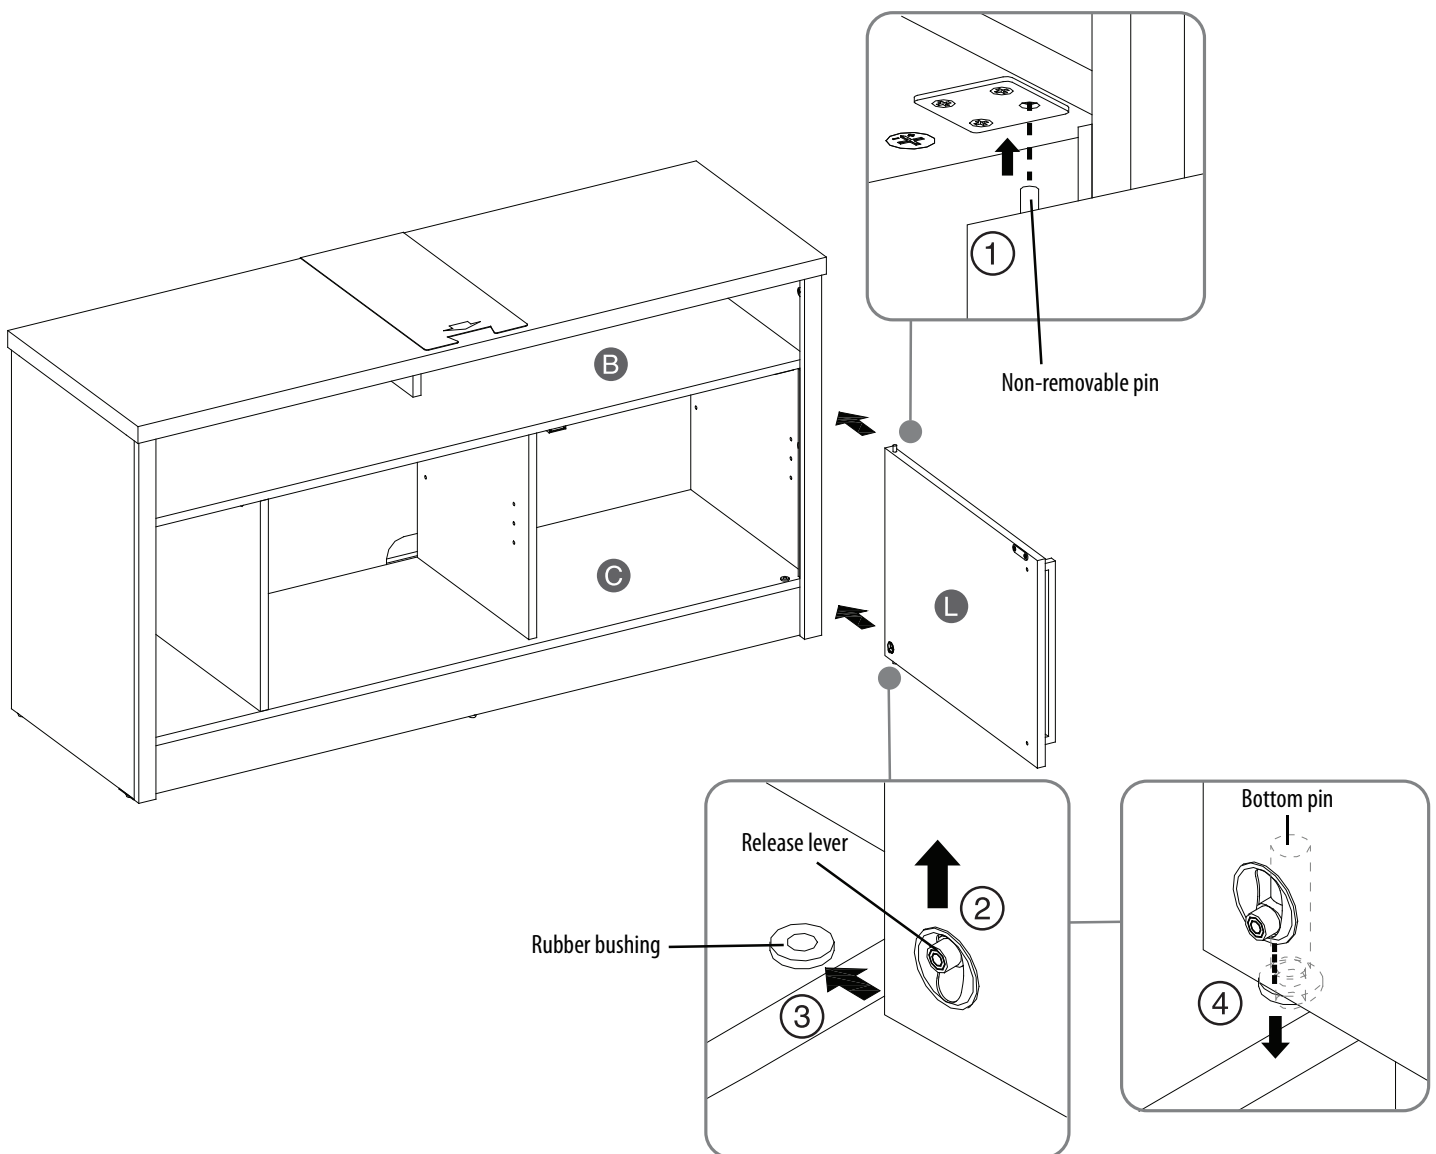


## STEP 21: Installing the adjustable shelves



You need:

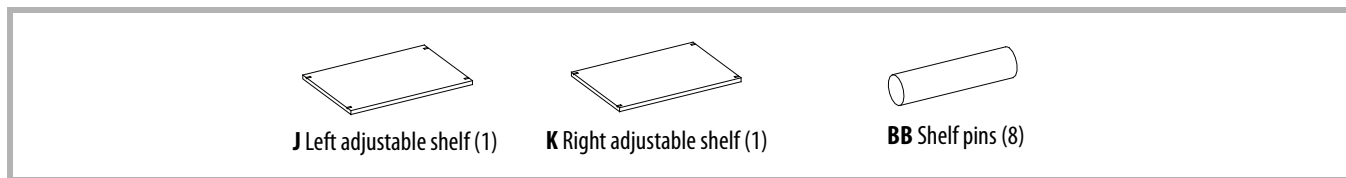

 - 1 Insert four shelf pins (**BB**) into the holes in the partitions at the desired height inside the bottom middle and right compartments. Make sure that you place shelf pins at the same level so that the shelves are level.
- 2 Insert the adjustable shelves (**J** and **K**) onto the shelf pins (**BB**) in the compartments and adjust if necessary.



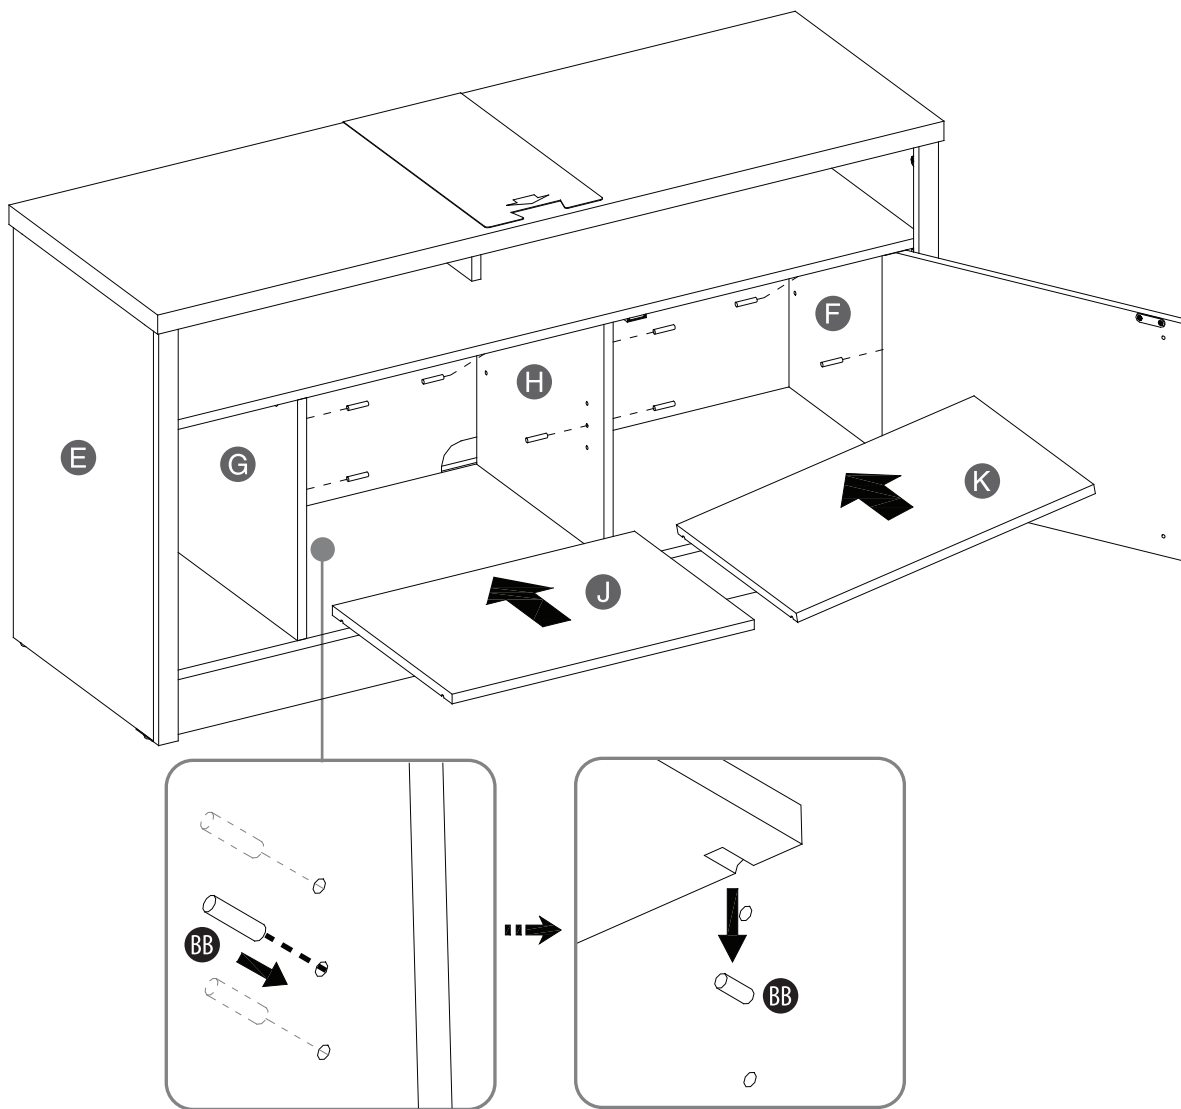


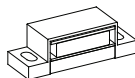

**STEP 22: Installing the cam lock covers and adjusting the magnetic catch****You need:****U** Cam lock cover (20)**AA** Magnetic catch (1)


Phillips screwdriver

- 1** Install the cam lock covers (**U**) by placing them onto the visible cam locks to conceal them.
- 2** Loosen the screws holding the magnetic catch (**AA**) and adjust the catch so that it holds the door closed properly, then tighten the screws.

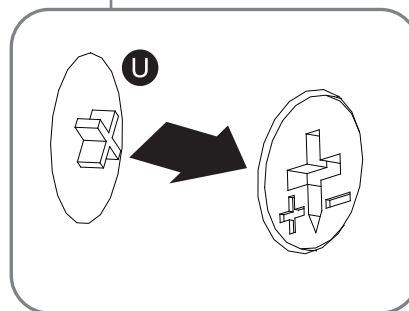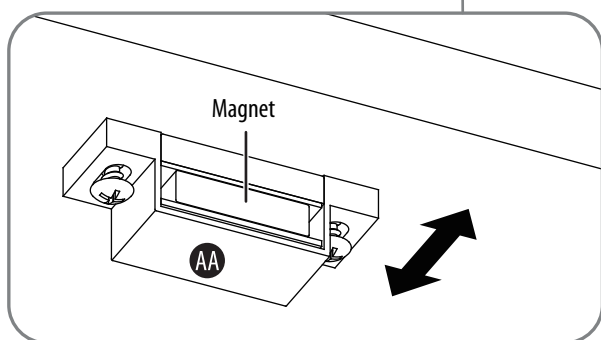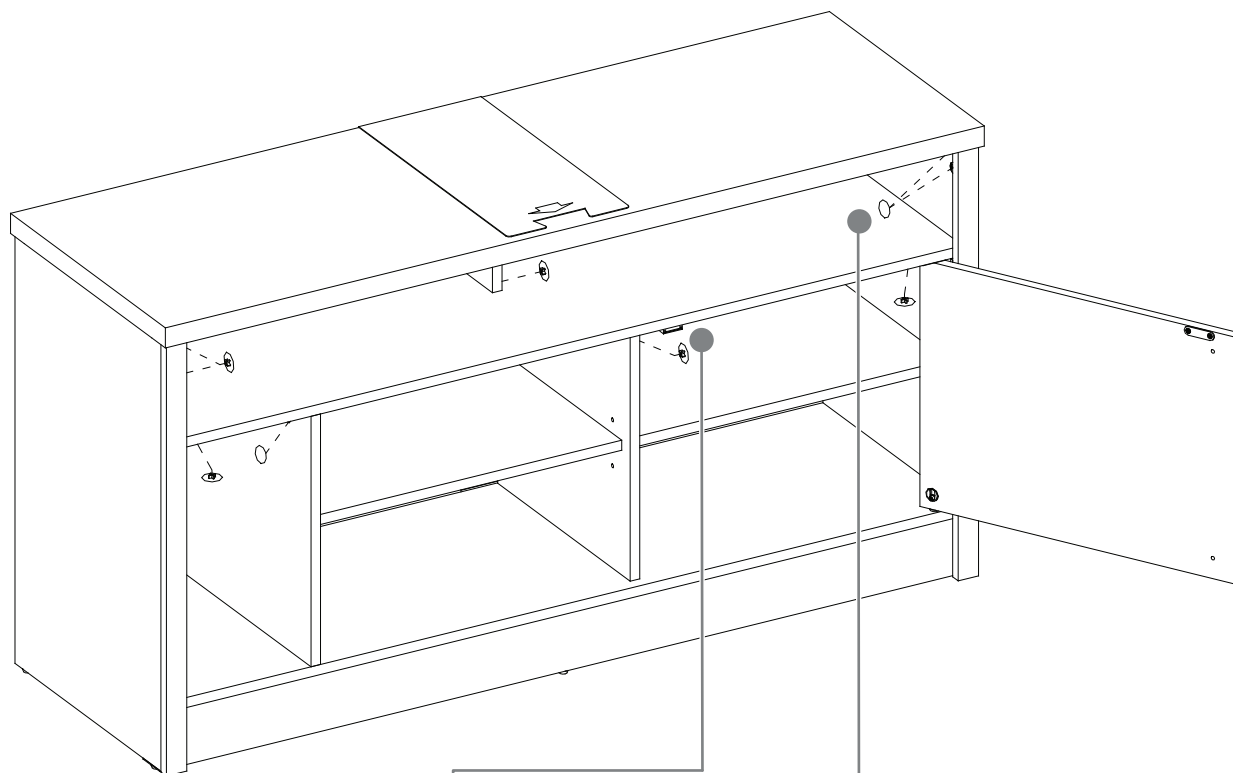

## STEP 23: Attaching the stopper to the top panel

 You need:



DD Acrylic stopper (2)



Pliers


If you place your TV on top of your TV stand, you must follow these instructions to prevent your TV from tipping. Otherwise, skip to [STEP 24: Positioning the TV stand and installing the tipping restraints on page 31](#).



### If your TV has one leg

 - 1 Remove the paper backing from the bottom of the stopper (DD), then place it in the stopper cut-out of the template on the top panel (A). Press down on the stopper (DD) to adhere it to the panel.
- 2 On the back of the top panel (A), carefully pull out the thumb tacks to remove the stopper template.

### If your TV has two legs:

- 1 On the back of the top panel (A), carefully pull out the thumb tacks to remove the stopper template.
- 2 Align the template at the position where one of your TV's legs or one of the feet will be located.
- 3 Remove the paper backing from the stopper (DD), then place it in the stopper cut-out of the template on the top panel (A). Press down on the stopper (DD) to adhere it to the panel.
- 4 Repeat this process to attach the second stopper where the other one of the TV's legs or feet will be located.

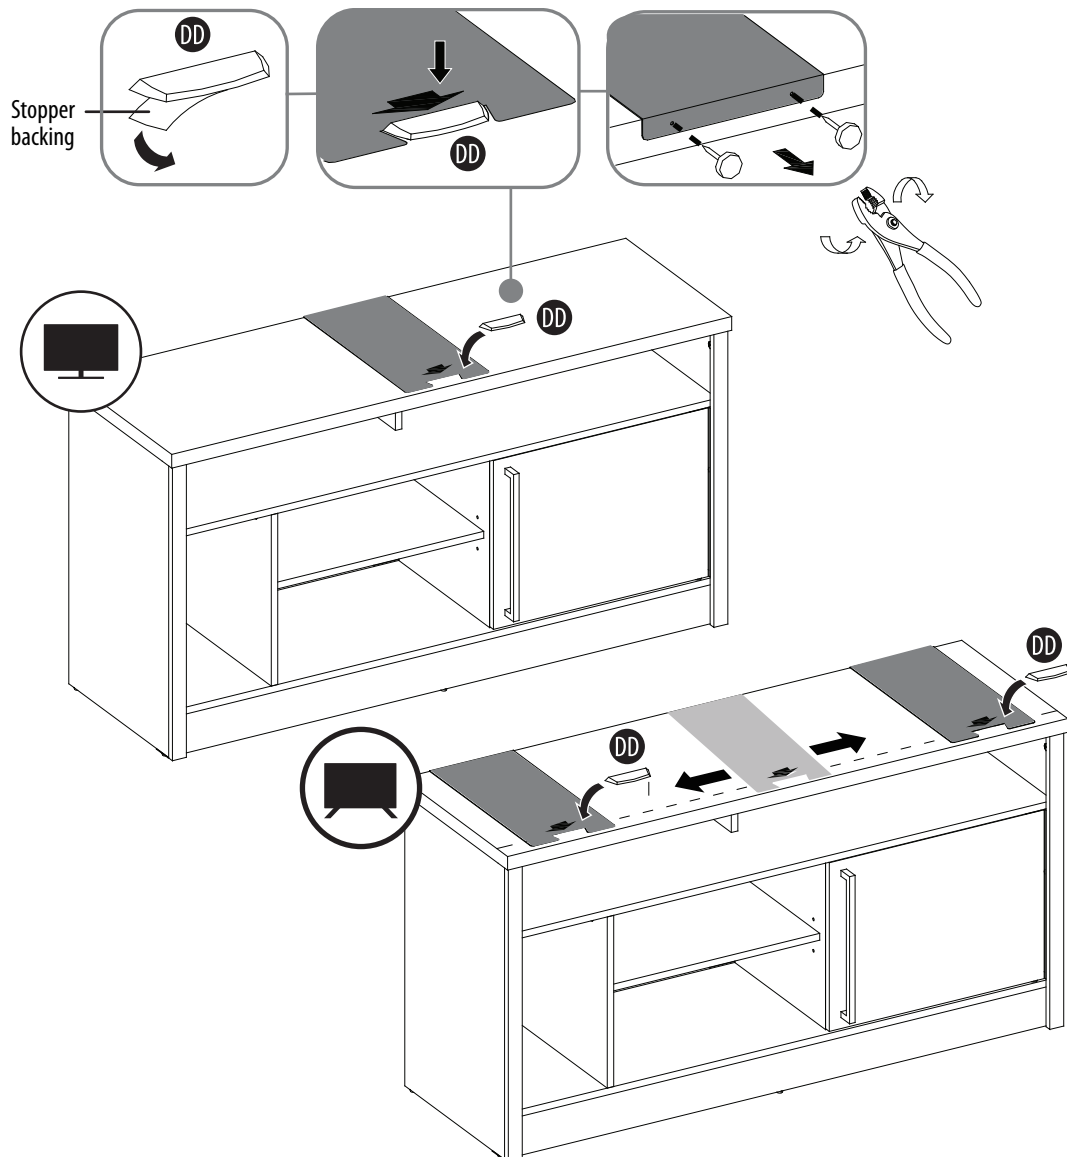

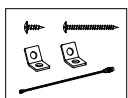**STEP 24: Positioning the TV stand and installing the tipping restraints****You need:****GG Tipping restraint (2)**


Phillips screwdriver



1/8" drill bit




Edge-to-edge stud finder

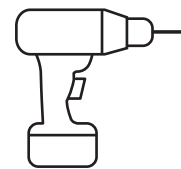

Power drill

- 1 Position the assembled TV stand against the wall where you plan to use it.
- 2 Adjust the leveling feet to level the TV stand.
- 3 Follow the instructions printed on the bag containing the tipping restraint hardware kit (**GG**) to attach the restraint hardware to the wall and to the TV stand.

**WARNING:** It is very important that the tipping restraint be installed correctly. Failure to do this could result in your TV stand falling forward, resulting in damage to equipment or personal injury.

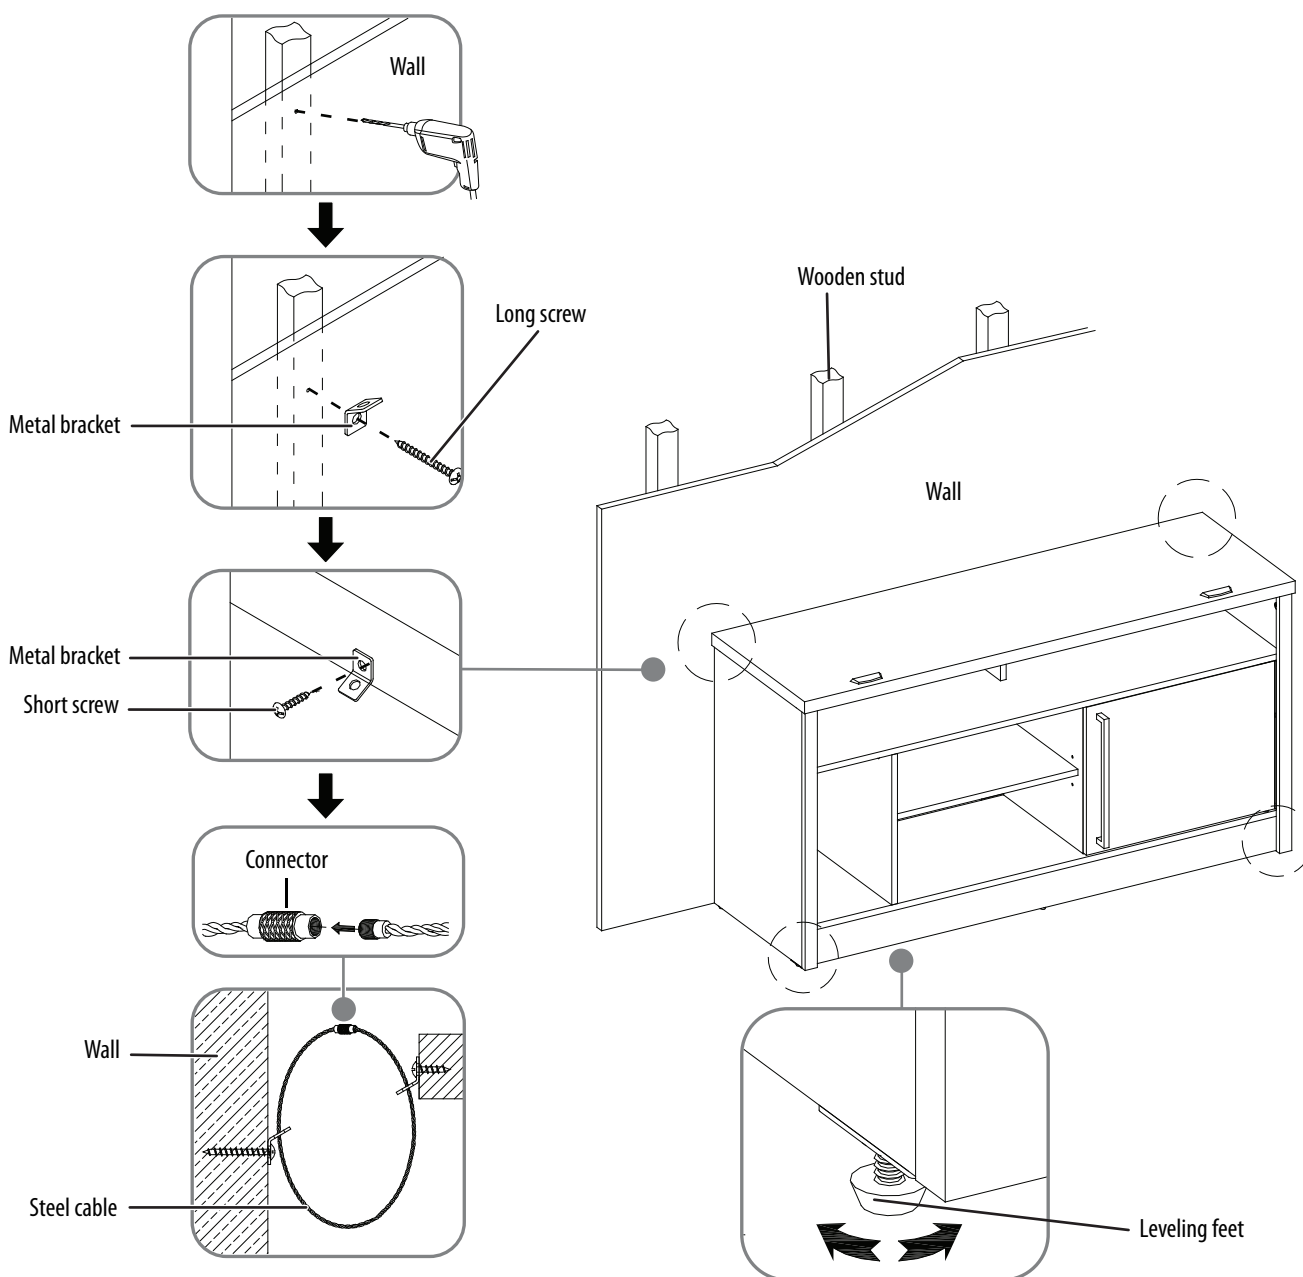

## Maintaining your TV stand

### Wood/Laminate

- Use your favorite type of furniture polish.
- Do not spray polish directly onto the TV stand. Spray onto a soft cloth, then wipe the TV stand.
- Always test any polish in a discrete location first, such as the back of the TV stand, to make sure that there is no adverse reaction.
- Dust frequently with a soft cloth.
- Never slide objects across surfaces. Lift objects from the top surface rather than dragging them across the finish when moving them.
- Do not expose your TV stand to direct sunlight, drying heat sources, or dampness.
- Clean spills immediately with a soft, damp cloth.
- Use a protective pad when using your TV stand as a writing surface (especially when using a ballpoint pen).

## Specifications

Maximum overall weight	370 lbs. (167.83 kg)
Maximum top panel weight	70 lbs. (31.75 kg)
Maximum shelf weight	50 lbs. (22.68 kg)
Maximum bottom panel weight	50 lbs. (22.68 kg)
Maximum TV weight	70 lbs. (31.75 kg)
Maximum screen size	55 in. (139.7 cm)
Overall dimensions (H × W × D)	25 × 47.5 × 15.9 in. (63.5 × 120.6 × 40.5 cm)
Middle shelf dimensions (W × D)	45.9 × 14 in. (116.6 × 35.7 cm)
Adjustable shelf dimensions (W × D)	18.3 × 12.5 in. (46.6 × 31.8 cm)
TV stand weight	Net: 61.18 lbs. (27.75 kg) Gross: 67.90 lbs. (30.80 kg)

# ONE-YEAR LIMITED WARRANTY

## Definitions:

The Distributor\* of Insignia branded products warrants to you, the original purchaser of this new Insignia-branded product ("Product"), that the Product shall be free of defects in the original manufacture of the material or workmanship for a period of one (1) year from the date of your purchase of the Product ("Warranty Period").

For this warranty to apply, your Product must be purchased in the United States or Canada from a Best Buy branded retail store or online at [www.bestbuy.com](http://www.bestbuy.com) or [www.bestbuy.ca](http://www.bestbuy.ca) and is packaged with this warranty statement.

## How long does the coverage last?

The Warranty Period lasts for 1 year (365 days) from the date you purchased the Product. Your purchase date is printed on the receipt you received with the Product.

## What does this warranty cover?

During the Warranty Period, if the original manufacture of the material or workmanship of the Product is determined to be defective by an authorized Insignia repair center or store personnel, Insignia will (at its sole option): (1) repair the Product with new or rebuilt parts; or (2) replace the Product at no charge with new or rebuilt comparable products or parts. Products and parts replaced under this warranty become the property of Insignia and are not returned to you. If service of Products or parts are required after the Warranty Period expires, you must pay all labor and parts charges. This warranty lasts as long as you own your Insignia Product during the Warranty Period. Warranty coverage terminates if you sell or otherwise transfer the Product.

## How to obtain warranty service?

If you purchased the Product at a Best Buy retail store location or from a Best Buy online website ([www.bestbuy.com](http://www.bestbuy.com) or [www.bestbuy.ca](http://www.bestbuy.ca)), please take your original receipt and the Product to any Best Buy store. Make sure that you place the Product in its original packaging or packaging that provides the same amount of protection as the original packaging.

To obtain warranty service, in the United States and Canada call 1-877-467-4289. Call agents may diagnose and correct the issue over the phone.

## Where is the warranty valid?

This warranty is valid only in the United States and Canada at Best Buy branded retail stores or websites to the original purchaser of the product in the country where the original purchase was made.

## What does the warranty not cover?

This warranty does not cover:

- Food, beverage, and/or medicine loss/spoilage.
- Customer instruction/education
- Installation
- Set up adjustments
- Cosmetic damage
- Damage due to weather, lightning, and other acts of God, such as power surges
- Accidental damage
- Misuse
- Abuse
- Negligence
- Commercial purposes/use, including but not limited to use in a place of business or in communal areas of a multiple dwelling condominium or apartment complex, or otherwise used in a place of other than a private home.
- Modification of any part of the Product, including the antenna
- Display panel damaged by static (non-moving) images applied for lengthy periods (burn-in).
- Damage due to incorrect operation or maintenance
- Connection to an incorrect voltage or power supply
- Attempted repair by any person not authorized by Insignia to service the Product
- Products sold "as is" or "with all faults"
- Consumables, including but not limited to batteries (i.e. AA, AAA, C etc.)
- Products where the factory applied serial number has been altered or removed
- Loss or Theft of this product or any part of the product
- Display panels containing up to three (3) pixel failures (dots that are dark or incorrectly illuminated) grouped in an area smaller than one tenth (1/10) of the display size or up to five (5) pixel failures throughout the display. (Pixel based displays may contain a limited number of pixels that may not function normally.)
- Failures or Damage caused by any contact including but not limited to liquids, gels or pastes.

REPAIR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS YOUR EXCLUSIVE REMEDY FOR BREACH OF WARRANTY. INSIGNIA SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR THE BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, INCLUDING, BUT NOT LIMITED TO, LOST DATA, LOSS OF USE OF YOUR PRODUCT, LOST BUSINESS OR LOST PROFITS. INSIGNIA PRODUCTS MAKES NO OTHER EXPRESS WARRANTIES WITH RESPECT TO THE PRODUCT, ALL EXPRESS AND IMPLIED WARRANTIES FOR THE PRODUCT, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE WARRANTY PERIOD SET FORTH ABOVE AND NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, WILL APPLY AFTER THE WARRANTY PERIOD. SOME STATES, PROVINCES AND JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE.

Contact Insignia:

**1-877-467-4289**

[www.insigniaproducts.com](http://www.insigniaproducts.com)

INSIGNIA is a trademark of Best Buy and its affiliated companies.

\*Distributed by Best Buy Purchasing, LLC

7601 Penn Ave South, Richfield, MN 55423 U.S.A.

©2024 Best Buy. All rights reserved.

INSIGNIA™

**[www.insigniaproducts.com](http://www.insigniaproducts.com)**

1-877-467-4289 (U.S. and Canada) or 01-800-926-3000 (Mexico)

INSIGNIA is a trademark of Best Buy and its affiliated companies.

Distributed by Best Buy Purchasing, LLC

7601 Penn Ave South, Richfield, MN 55423 U.S.A.

©2024 Best Buy. All rights reserved.

V2 ENGLISH  
24-0443