

IMPORTANT SAFEGUARDS

Before using the coffee maker, the following basic precautions should always be followed:

- 1 Read all instructions.
- 2 Do not operate the coffee maker without water.
- 3 Make sure that your outlet voltage corresponds to the voltage stated on the rating label of the coffee maker.
- 4 To protect against fire, electric shock, and injury to persons, do not immerse the cord, plug, or coffee maker in water or other liquid.
- 5 Do not leave the coffee maker unattended.
- 6 Unplug the coffee maker from the outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the coffee maker.
- 7 Do not operate the coffee maker if it has been damaged or if it malfunctions. Return the coffee maker to an authorized service facility for repair or examination.
- 8 The use of attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury.
- 9 Do not use outdoors.
- 10 Place the coffee maker on a flat surface or table and do not let the cord hang over the edge of a table or counter, or touch a hot surface.
- 11 Do not place on or near a hot gas or electric burner, or in a heated oven.
- 12 Do not use the coffee maker for anything other than its intended use.
- 13 To remove the plug from a wall outlet, always hold the plug. Never pull the cord.
- 14 To avoid splashing hot water, do not open the water tank during brewing.
- 15 This coffee maker is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the coffee maker by a person responsible for their safety.
- 16 Do not allow children to use or play with the coffee maker.
- 17 Do not touch hot surfaces. Use handles or knobs.

SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY

Before using your new product, please read these instructions to prevent any damage.

POWER CORD SAFETY

This coffee maker has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

- A short power cord is provided to reduce risks resulting from becoming entangled in or tripping over a long cord.
- The coffee maker is provided with non-detachable power cord terminated in a 2-wire polarized type plug.


PACKAGE CONTENTS

- Coffee maker (including the carafe)
- Permanent filter
- Funnel
- Measuring spoon
- *Quick Setup Guide*


FEATURES

- Brews up to 12 cups of coffee
- Automatic pause and serve
- Delay brew allows you to pre-program your coffee maker up to 24 hours in advance
- Two-hour auto shut-off for safety
- Multiple brew functions
- Electronic control, LCD display, with blue backlight

Coffee maker, carafe, and measuring spoon

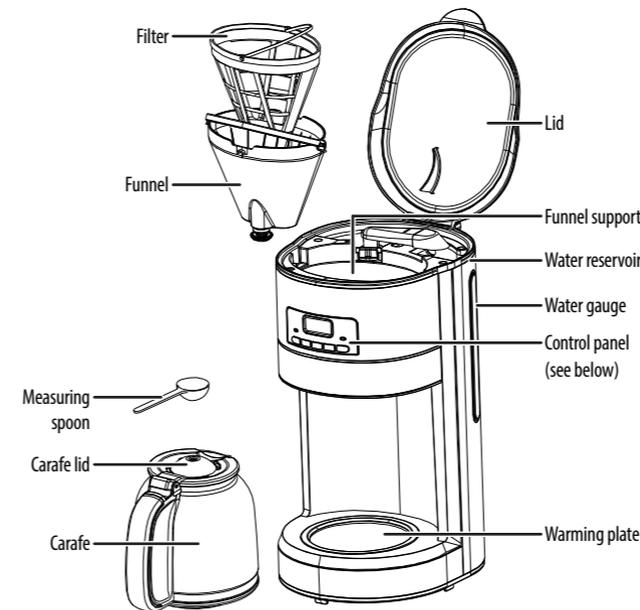

Control panel

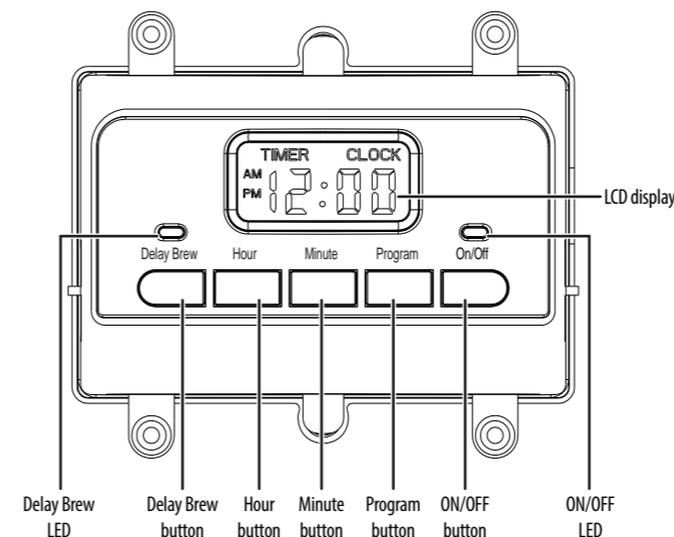

FIRST USE

Clean your coffee maker before the first use. See "Cleaning and Maintenance" for instructions. You may notice a slight odor the first time you use your coffee maker. This is normal and will not happen after a few uses.

BREWING COFFEE

- 1 Fill the carafe to the desired cup size level with cool drinking water, then pour it into the water reservoir. Do not fill the water reservoir above the **Max** fill line.
- 2 Place the funnel into the funnel support and make sure that the funnel is placed correctly. Put the filter into the funnel correctly.
- 3 Add coffee to the filter, then close the lid.
Tip: Use approximately one measuring spoon full per cup of water in the water reservoir.
- 4 Place the carafe on the warming plate.
- 5 Plug the power cord into the outlet. The LCD displays *AM 12:00* and the colon flashes.
- 6 Press the **ON/OFF** button once. The ON/OFF LED lights blue. The brew cycle starts.
- 7 After the brewing cycle is done, remove the carafe and serve the coffee.
- 8 Turn the coffee maker off and disconnect the power supply when not in use.
Caution: When pouring coffee, don't pour the coffee too fast!

PAUSING TO SERVE

- 1 You can pause brewing at any time by pressing the **ON/OFF** button once or taking the carafe off the warming plate.
- 2 To resume brewing, press the **ON/OFF** button or return the carafe to the warming plate.

KEEPING YOUR COFFEE WARM

After the brewing cycle is done, the warming plate stays hot to keep your coffee warm. Press the **ON/OFF** button to turn off the coffee maker when the carafe is empty.


Notes:

- The warming plate turns off after two hours.
- Always turn off the coffee maker and disconnect the power supply when not in use.

SETTING THE CLOCK

To set the time on your coffee maker:

- 1 Press the **Program** button. *CLOCK* appears in the upper-right corner of the display.
- 2 Press the **Hour** and **Minute** buttons repeatedly to set the present time.
- 3 After 15 seconds, *CLOCK* disappears from the display and your time setting is saved.

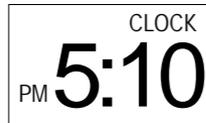

SETTING THE DELAY BREW FUNCTION

To delay brewing your coffee:

Notes:

- Your clock must be set to the current time to use this function. See "Setting the Clock" above for instructions.
- You cannot set the clock while the coffee maker is brewing coffee.

- 1 Press the **Program** button twice so that *TIMER* appears in the upper-left corner of the display.
- 2 Press the **Hour** and **Minute** buttons repeatedly to set the delayed starting time.
- 3 Press the **Program** button. *TIMER* disappears from the display and the current time displays.
- 4 Press the **Delay Brew** button. The Delay Brew LED lights green. The coffee maker begins brewing at the time set in step two.
- 5 When the preset time arrives, the **Delay Brew** LED turns off and the brew cycle begins.



Notes:

- To cancel the delay brew function, press the **ON/OFF** button. Press the **ON/OFF** button again to immediately brew coffee.
- After the brew cycle is complete, the coffee maker automatically turns off after two hours.

MEMORY

- The coffee maker remembers clock and delay brew settings if power was disconnected for 10 seconds or less.

CLEANING AND MAINTENANCE

Caution: Never use harsh chemicals or abrasive cleaning pads. Do not immerse your coffee maker in water (or other liquids) or place it under running water.

Routine cleaning:

- 1 If necessary, remove the paper filter and coffee grounds.
- 2 Insert the filter.
- 3 Fill the carafe to the 12 cup line with cool water, pour it into the water reservoir, then place the carafe on the warming plate.
- 4 Plug the power cord into a power outlet.
- 5 Press the **ON/OFF** button. The ON/OFF LED lights blue and the brew cycle starts.
- 6 When the brew cycle is done, turn off your coffee maker, then unplug it and empty the carafe.
- 7 Wipe the outside of your coffee maker with a damp cloth.
- 8 Remove the filter basket, funnel, and carafe, then wash them in warm, soapy water.
- 9 Do not put any part of the coffee maker in the dishwasher.

For a more thorough cleaning:

Note: If you are using water descaler, follow the instructions on the descaler.

- 1 If necessary, remove the paper filter and coffee grounds.
- 2 Pour one cup of white vinegar into the carafe, add cool water to the 12 cup line, then pour the mixture into the water reservoir.
- 3 Place the carafe onto the warming plate.
- 4 Insert the filter basket.
- 5 Plug the power cord into a power outlet.
- 6 Press the **ON/OFF** button. The ON/OFF LED lights blue and the brew cycle starts.
- 7 Let the coffee maker brew until the carafe has one cup of liquid in it, then press the **ON/OFF** button twice.
- 8 Remove the carafe and let it cool for 15 minutes.
- 9 Place the carafe on the warming plate, then press the **ON/OFF** button.
- 10 When the coffee maker is done brewing, turn it off and discard the liquid in the carafe and rinse thoroughly.

HINTS FOR GREAT-TASTING COFFEE

- A clean coffee maker is essential for making great-tasting coffee. Regularly clean the coffee maker as specified in the "Cleaning and Maintenance" section. Always use fresh, cold water in the coffee maker.
- Store unused coffee in a cool, dry place. After opening a package of coffee, reseal it tightly and store it in a refrigerator to maintain its freshness.
- For an optimum coffee taste, buy whole coffee beans and finely grind them just before brewing.
- Do not reuse coffee since this will greatly reduce the flavor. Reheating coffee is not recommended as coffee is at its peak flavor immediately after brewing.
- Clean the coffee maker when over-extraction causes oiliness. Small oil droplets on the surface of brewed, black coffee are due to the extraction of oil from the coffee.
- Oiliness may occur more frequently if heavily roasted coffees are used.

SPECIFICATIONS

- Dimensions: 12.4 × 11.5 × 6.6 in
(37.2 × 28.2 × 19.4 cm)
- Voltage: 120V AC
- Wattage: 900W

ONE-YEAR LIMITED WARRANTY

Visit www.insigniaproducts.com for details.

CONTACT INSIGNIA:

For customer service, call 1-877-467-4289 (U.S. and Canada) or 01-800-926-3000 (Mexico)
www.insigniaproducts.com

INSIGNIA is a trademark of Best Buy and its affiliated companies. Registered in some countries.
Distributed by Best Buy Purchasing, LLC
7601 Penn Ave South, Richfield, MN 55423 U.S.A.
©2014 Best Buy. All rights reserved.
Made in China