



EXTRA LARGE CAPACITY

THERMOELECTRIC
12-CAN MINI FRIDGE
**COOLER
& WARMER**

MODEL#GMF-1200



FOR CUSTOMER SERVICE
QUESTIONS OR COMMENTS
PLEASE CALL
888.552.0033

Gourmia

GOURMIA.COM

Gourmia

THERMOELECTRIC
12-CAN MINI FRIDGE
**COOLER
& WARMER**

MODEL#GMF-1200

| | |
|-------------------------------------|----------|
| About This Product | 4 |
| Operating Instructions | 4 |
| Safety Precautions | 5 |
| Storage and Disposal | 5 |
| Warranty Details | 5 |

**USER
MANUAL**

ABOUT THIS PRODUCT:

This thermoelectric cooler / warmer is an eco-friendly, “green” product, cooling and warming using advanced semiconductors that are free of CFC’s and refrigerants. Enjoy the many benefits of the cooler / warmer, while protecting the safety of the environment.

The cooler and warmer is insulated, ensuring that your food and beverages stay cold or warm, making this product great for use in a car, boat, RV, or any other mode of transport.

This product is ergonomically designed for your convenience, with a folded carry handle allowing for easy portability, and features a lightweight design.

OPERATING INSTRUCTIONS:

Operating voltage: 12V DC or 230V AC (120V)

- When using your cooler / warmer in a car, you can plug it into the cigarette lighter socket, or connect it to a 12V storage battery. When using it at home or at the office, you can plug it into a wall outlet. Before operating, first connect the plug of the cord into the socket of the cooler / warmer, then connect the other end to the power outlet.
- Once plugged in, you can then slide the switch to COLD or HOT function.
- Turn the switch to COLD for cooling mode. The green LED light will illuminate.
- Turn the switch to HOT for warming mode. The red LED light will illuminate.
- Turn the switch to OFF. Cooler/warmer will function as an insulated box.
- For best results when cooling or heating items, refrigerate items before placing in cooler / warmer on cooling mode, or heat items before putting in warming mode.

SAFETY PRECAUTIONS

- When alternating between COLD and HOT functions, turn the switch to OFF first. After 5 minutes, turn it to COLD or HOT.
- When the cooler / warmer is in its HOT function, use care when handling hot items to avoid burns.
- When using in a car, to save energy, it is preferred to pull the plug out of the cigarette lighter when the car is stopped and shut off.
- Keep fan free of obstructions to keep it from getting jammed.

STORAGE AND DISPOSAL

- Store the appliance in a cool, dry and clean place, out of the reach of children and pets.
- Please keep the packaging for transporting the appliance or for storing your appliance when not in use for a prolonged time period.
- This product may not be disposed of along with ordinary household waste, as electrical and electronic waste must be disposed of separately.
- Contact your retailer, distributor or the municipal authorities for further information on product disposal.

WARRANTY DETAILS

This product is guaranteed under the premise of a 1 year limited warranty period, applicable to the original purchaser and not transferable to a third party user.

Repair or replacement of defective parts are at the seller's discretion. In the event that repair isn't possible, the seller will replace the product/ part. If product repair/ replacement won't suffice, the seller has the option of refunding the cash value of the product or component returned.

Product defects not covered under the warranty provisions include normal wear and damage incurred from use or accidental negligence, misuse of instruction specifications, or repair by unauthorized parties. The manufacturing company is not liable for any incidental or consequential damages incurred by such circumstances.