



Please give us a chance to make it right and do better !

Contact our friendly customer service department for help first.
Replacements for missing or damaged parts will be shipped ASAP !

US office: Fontana UK office: Ipswich AU office: Truganina
DE office: Hamburg FR office: Saint Vigor d'Ymonville PL office: Gdańsk



Contact Us!

 
Do NOT return this item.

Contact our friendly customer service department for help first.



US: cs.us@costway.com
UK: cs.uk@costway.com
AU: cs.au@costway.com

COSTWAY®

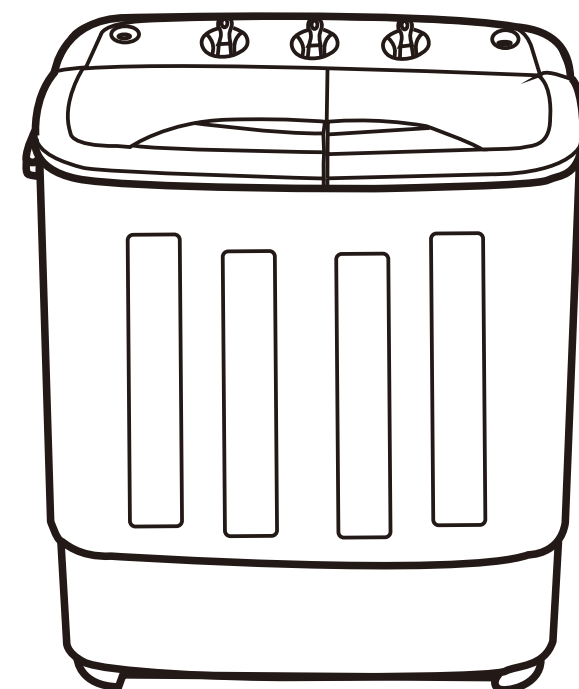

USER'S MANUAL WASHING MACHINE

THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.



Before You Start

- ⚠ Please read all instructions carefully.
- ⚠ Retain instructions for future reference.
- ⚠ Separate and count all parts and hardware.
- ⚠ Read through each step carefully and follow the proper order.
- ⚠ We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
- ⚠ Always place the product on a flat, steady and stable surface.
- ⚠ Keep all small parts and packaging materials for this product away from babies and children as they potentially pose a serious choking hazard.

CONTENTS:

Introduction
 Technology Parameter and Specifications
 Structure and Parts
 Washing Instructions
 Attention Points
 Maintenance
 Troubleshooting
 Electrical Principle

Introduction

Thank you for purchasing this Semi Auto Washing Machine. The design of this product has adopted the special patent technology of cabinet integration. The entire body casing is made of plastic and this ensures that your semi auto washing machines will never be rust eaten. The washer is relatively lighter and space saving as compared to other general twin-tub washing machines

Through the integration of new technology, this washer with large wave pulsator and new water flow, will not only produce less twisting of the clothing but also better cleaning and washing effect. The functions of water inlet, sprinkling, spin-dry and water flow are also made available to save time, labor and water usage.

We trust that you will find your purchase of this beautifully designed and dignified-looking semi auto washing machine to your satisfaction.

Technology parameter and specifications

Water capacity		Input power		Power source	
high	low	wash	dry	voltage	hertz
24L	18L	240W	120W	110V	60Hz


Troubleshooting

Problem	Reason	Solution
The pulsator is too slow	Power cut or switch off	Switch on the power
	Transmission belt left off	Assemble the transmission belt
	Belt pulley has become loose	Tighten the belt
	Pulsator is blocked	Remove the block
The pulsator does not rotate	Belt is loose	Tighten the belt or renew it
	The clothes in the spin dry tub loosened	Tighten the belt and the screw
Abnormal noise and vibration	The clothes in the spin dry tub is unbalanced	Replace the clothes in the tub
	There is something jammed between the pulsator and the wash tub	Remove the jammed object(s).
Water leaks from the wash tub	Wash tub was not connected tightly to the hose	Reconnect and tighten the hose
Spin-dry basket does not rotate	The slight switch is in loose contact	Adjust the contactor of the switch
	The fixed screw of spin dry basket or shaft coupling is loose	Tighten the screw
	The shaft of spin dry basket is twined by the textile	Remove the textile
	Brake dragline is loose	Tighten the dragline
The spin tub does not drain	Something had dropped into the space between spin tub and spin dry basket	Remove the object


Attention: When the problem can not be resolved, please contact the Service Center.

Maintenance

 
After use, pull out the plug to prevent accidents.

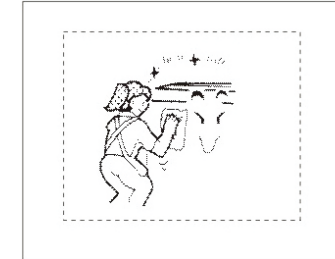

 
When cleaning the washing machine use a soft cloth, this will prevent scratching of the surface of the cabinet.

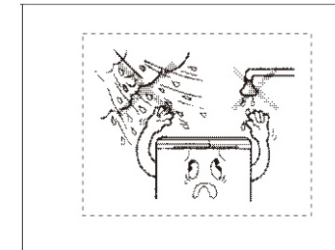

 Do not put the washing machine outdoors or in damp areas such as the bathroom.

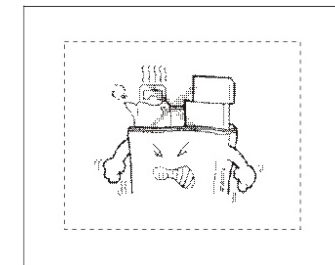


 Do not put heavy objects on top of the washing machine.

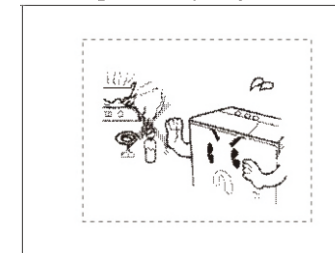

Do not place the washing machine near to heat-generating items such as gas cookers.

 Structure and parts of product

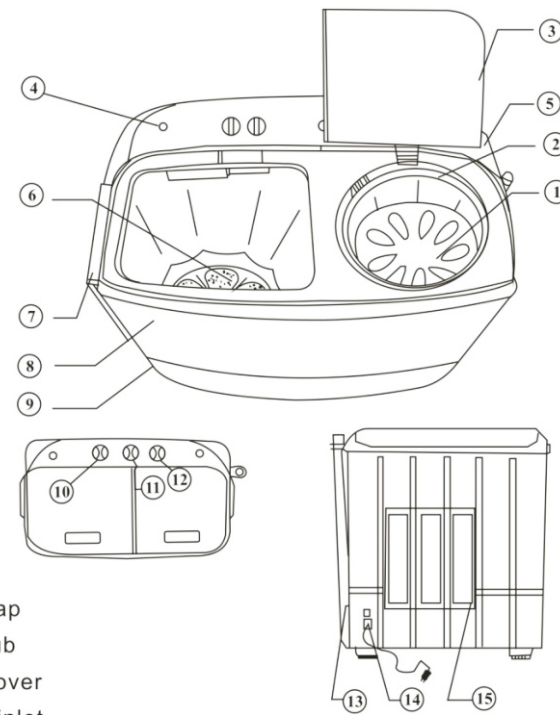

- | | | |
|------------------|----------------------------------|----------------|
| 1. spin cap | | |
| 2. spin tub | | |
| 3. spin cover | | |
| 4. water inlet | | |
| 5. control panel | | |
| 6. pulsator | 9. Bottom | 13. drain hose |
| 7. wash cover | 10. wash timer switch | 14. power wire |
| 8. cabinet | 11. wash & drain selector switch | 15. back cover |
| | 12. spin timer switch | |

Washing Instructions

Preparation

1. The machine should be placed on the flat ground
2. The plug seat should have safety ground connection.
3. Lay down the overflow hose.
4. Use the water inlet hose to connect the water tap on the water inlet.
5. Adjust the water level based on the type of clothing material and its weight.
6. Turn on the power.

Washing

1. Set the 'wash & drain selector switch' according to the material type and weight of clothes.
2. Set the "wash& drain selector switch" to the wash position.
3. Set the "wash timer" and place the clothes into the tub, adjust the water level to the proper position and put in the proper amount of detergent into the wash tub.
4. Set the "wash timer" and washing machine will start to wash.
5. After wash, set the "wash & drain "selector switch to the drain position to the start draining off water.

 
Spinning

1. After spinning, set the water inlet hose to the water inlet of the spin tub position for 20-30 seconds.
2. According to the "spin timer" process, spinning the clothes for 1min~5min, repeat once or twice.

Rinsing

1. After spinning, the spin tub will stop. Open the spin cover and from the spin tub transfer the clothes to the wash tub to prepare for rinsing.
2. Repeat the washing process but do not add any detergent.


Attention Points

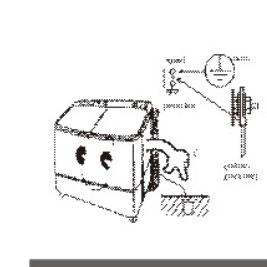

For your own safety, ensure that the ground connection is correct.



 
Never put your hands into the spin tub whilst it is working.

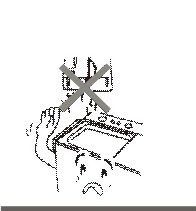


Never wash textiles which contain volatile materials to avoid machine damage or water blockage due to stains.



 The timer should always be turned clock wise

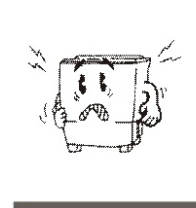

 When abnormal sounds/movements occur during operation, stop the washing machine as soon as possible and check. (Please refer to troubleshooting, Page7.)

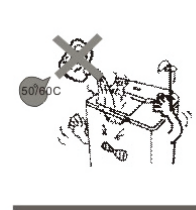

When Washing, Water temperature should be below140°F, Otherwise,the plastic components may be deformed

Electrical Principle

	Washing	Spinning
Rated voltage	110 V~	110 V~
Rated frequency	60 Hz	60 Hz
Rated energy consumption power	240 W	120 W