

## Warranty

For your own records, staple or attach your sales receipt to this manual. Please also write the store name/location and date purchased below.

STORE NAME/LOCATION: \_\_\_\_\_

DATE PURCHASED: \_\_\_\_\_

### THREE YEAR LIMITED WARRANTY:

(SAVE THIS WARRANTY INFORMATION)

Optimus Enterprise, Inc. warrants to its customers and or consumer of this electric heater and the parts thereof will be free from defect in material and workmanship, under normal use, for a period of three (3) years from the date of initial purchase. The warranty does not apply to repairs necessitated by damage, misuse, abuse or alternation and to any repair of merchandise not used within the United States or Canada. Unless otherwise proscribed by law, Optimus Enterprise, Inc. shall not be liable for any personal injury, property damage or any incidental or consequential damages of any kind (include water damage) resulting from malfunctions, defects, misuse, improper installation or alternation of this product. This warranty is the only warranty extended by Optimus Enterprise, Inc. to its original customers and/or consumer purchased of this heater. Optimus Enterprise, Inc. disclaims all other warranties, express or implied, that arise by the operation of law, specifically including the implied warranties of merchantability and fitness for a particular purpose. Optimus Enterprise, Inc. shall not be liable for any incidental or consequential damage, which may have resulted from any alleged breach of warranty. Some states do not allow limitations on how long implied warranty lasts or the exclusion or limitation of incidental or consequential damage, so the above limitations or exclusion may not apply to you. This warranty gives you specific legal rights you may also have other rights which vary from state to state.

Should the heater fail during the warranty period, the owner should:

- After you purchase the fan and find parts missing or you have any question, please call or e-mail Optimus Enterprise, Inc. for help. DO NOT RETURN THE UNIT TO THE STORE, always call or e-mail Optimus for help first.
- Within the first 12 months from date of purchase, Optimus Enterprise, Inc. will repair or replace the product if it is defective in material or workmanship providing it is returned to Optimus Enterprise, Inc. with freight prepaid, with evidence of purchase date (cash registered receipt) together with \$30.00 check or money order for handling and return packaging/ shipping charges.
- In year 2 through 3 from date of purchase, Optimus Enterprise, Inc. will repair or replace the product with a refurbished heater if it is defective in material or workmanship providing it is returned to Optimus Enterprise, Inc. with freight prepaid, with evidence of purchase date (cash register receipt) together with US\$35.00 check or money order for handling and return packaging/ shipping charges.

**IMPORTANT: ANY REPAIRS SHOULD BE PERFORMED BY AN AUTHORIZED SERVICE REPRESENTATIVE. DO NOT ATTEMPT TO REPAIR THIS HEATER YOURSELF. DOING SO MAY VOID YOUR WARRANTY.**

**PLEASE RETAIN THIS WARRANTY AND SALES RECEIPT TO INSURE YOUR PRODUCT WARRANTY.**

### IMPORTANT: RETURN INSTRUCTIONS:

Your warranty depends on your following these instructions if you are returning the unit more than 30 days after the date of purchase:

- Carefully pack the heater in the original container or a suitable container to avoid damage in shipping. Seal the carton. Address an envelope as follows:  
Optimus Enterprise, Inc.  
Customer Service Department  
2201 E Winston Road, Unit J  
Anaheim, CA 92806
- Inside the envelope, enclose your name, full address with zip code, daytime phone number, evidence of purchase date (cash register receipt) AND A CHECK OR MONEY ORDER for handling and return packaging/ shipping charges. Please also include a brief explanation of the problem you are having with the unit.
- Optimus Enterprise, Inc. recommends you insure the package (as damage in shipments is not covered by your warranty).
- All shipping charges must be prepaid by you (as noted as above).

# OPTIMUS

## INSTRUCTION MANUAL AND OWNER'S GUIDE

### Portable Oscillation Ceramic Heater w/ Thermostat & LED

#### Model H-7245



**INFORMATION HOT LINE:** If, after reading this owner's guide, you have any question or comments, please feel free to write us or call us at 1-888-672-5832 or e-mail us at Service. Service@optimusent.com. Our customer service representative will be happy to help you.

**PLEASE READ AND SAVE THESE INSTRUCTIONS**

## IMPORTANT INSTRUCTIONS:

### PLEASE READ AND SAVE THESE IMPORTANT SAFEGUARDS

Thank you for choosing an Optimus heater. To ensure the best performance from your heater, please read and save the following instructions.

WHEN USING ELECTRICAL APPLIANCES, BASIC PRECAUTIONS SHOULD ALWAYS BE FOLLOWED TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK AND INJURY TO PERSON, INCLUDING THE FOLLOWING:

- Read all instructions before using this heater.
- This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Use grip handle when provided.
- Keep combustible materials such as drapes, furniture, pillows, bedding, papers, clothes, and curtains at least three (3) feet (0.9m) from the front of heater and keep them at least 1 foot (0.3m) from the sides and rear of the heater.
- Extreme caution is necessary when heater is used by or near children or invalids and whenever the heater is left operating and unattended.
- Always unplug heater when not in use.
- Do not use any heater with a damaged cord or plug or after heater malfunctions or has been dropped or damaged in any manner. Discard heater, or return to authorized service facility for examination, electrical or mechanical adjustment, or repair. (See Warranty for information)
- Do not use outdoors.
- This heater is not to be used in wet or damp locations such as bathrooms, laundry areas or other similar indoor locations. Never locate heater where it may fall into a bathtub or other water container.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliance. Arrange cord away from traffic area where it will not be tripped over.
- To disconnect heater, turn control to OFF then remove plug from outlet.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause electric shock or fire or damage the heater.
- To prevent possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint or flammable liquids are used or stored.
- Use this heater only as directed in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock or injury to persons.
- Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).
- Keep this heater clean. **DO NOT** allow foreign objects to enter any vent or exhaust opening. This may cause shock, fire, or damage to heater.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- If the heater will not operate: See specific instructions in Safety Feature explained in this manual.

## CLEANING/ MAINTENANCE INSTRUCTIONS:

### During Season Care:

- Before cleaning, be sure to turn off and UNPLUG the heater.
- Clean the Heater with a vacuum brush attachment on your vacuum cleaner. This will remove lint and dirt from the inside of the heater. Unscrew the back cover before cleaning. **DO NOT ATTEMPT TO TAKE APART THE HEATER. DO NOT ALLOW HEATER TO BE OPERATED WITHOUT GRILL GUARD IN PLACE.**
- Do not immerse the Heater in water.
- Never use gasoline, benzene or thinner. This will damage the surface of the heater.
- After cleaning, be sure to completely dry the unit with a cloth or towel.

### After Season Care:

- Store heater in a cool and dry location with power cord properly secured.
- Please store the unit in its original carton or suitable container.

## OPERATING INSTRUCTIONS:

### PRE-OPERATING INSTRUCTIONS:

- Carefully remove your heater from the box (please save the carton for off-season storage).
- Make sure the unit is in the OFF position before plugging the heater into the outlet.
- Place heater on a firm level surface.

### OPERATING INSTRUCTIONS:

The Heater may be operated by the controls located on the Heater (as shown in FIGURE 1) or by your remote control (shown in FIGURE 3).

1. Plug the cord into an AC 110-120V electrical outlet. Turn on the main POWER switch located on the back of the unit. Red power indicator light will turn on and LCD display will be on in blank. The heater is ready to use.
2. Turn the heater on by pressing the ON/OFF button  (FIGURE 1). The unit will display the current "ROOM TEMP" and go automatically into "FAN" mode and blow cold air.
3. Press the "Mode" button and the unit will be in "LOW HEAT" mode. Press the button again the unit will go to "HIGH HEAT" mode. Press the button one more time and the unit will go to "ADJ HEAT"/"ECO" mode. The display indicator shows "SET TEMP", allowing you to adjust heat. (See THERMOSTAT INSTRUCTION for further information).
4. To turn the heater off, press the ON/OFF button.

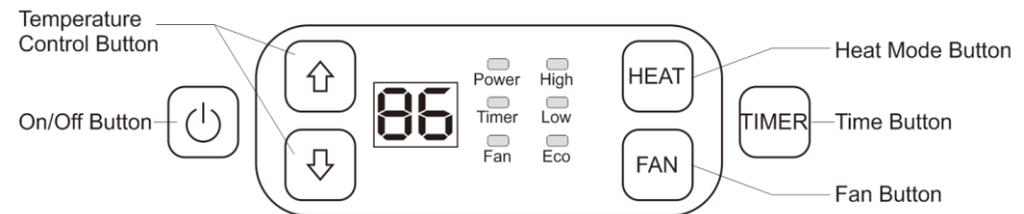


Fig. 1

## TIMER FUNCTION

This function will work in any mode. The timer function allows you to set the length of operation from 1 to 8 hours. Pressing the “Timer” button each time will increase the length of operation by 1 hour. Once the timer is set, the screen will display the remaining operating time in hour until the unit counts down to zero.

### THERMOSTAT INSTRUCTIONS (FIGURE 2)

1. Press the “HEAT” button until the display shows ADJ HEAT.
2. To adjust “SET TEMP”, press the “+” button to increase and the “-” button to decrease the desired temperature. (FIGURE 2) The temperature ranges from **59 to 86 degrees F**.
3. When the air temperature reaches 3 degrees F above the SET TEMP, the heater will cut off.
4. When the air temperature drops 1 degree F below the SET TEMP, the unit will come back on.

**Note:** It is normal for the heater to cycle ON and OFF as it maintains the SET TEMP.

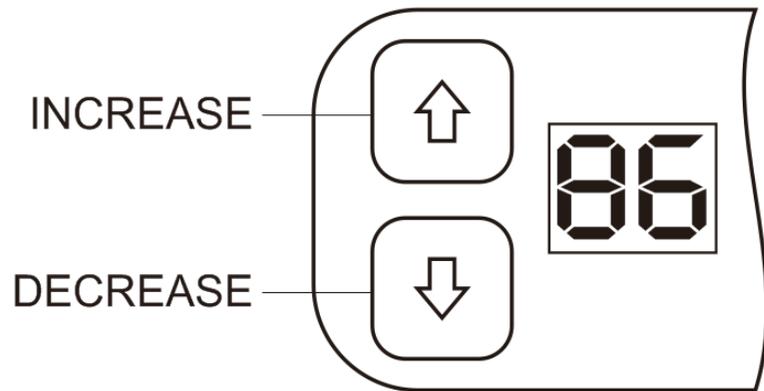


Fig. 2

### SERVICE INSTRUCTIONS:

- Do not attempt to repair or adjust any electrical or mechanical functions on this unit. Doing so will void the warranty.
- If you have any questions regarding this unit’s operation or believe any repair is necessary, please call 1-888-672-5832 to speak with a Customer Service Representative.
- If you need to exchange the unit, please return it, in its original carton with a sales receipt enclosed, to the store you purchased it. If you are returning the unit more than 30 days after the date of purchase, please see the enclosed warranty.
- If you have any other question or comments, feel free to write us:  
Optimus Enterprise, Inc.  
2201 E. Winston Road, Unit J  
Anaheim, CA 90806  
E-mail: Service@optimusent.com

### SAFETY FEATURES

1. A thermal overload protector is built in to prevent overheating.
2. When an overheat temperature is reached, the heater will automatically shut off. It can only resume operation when the user resets the unit.
3. To reset the unit, unplug the heater and wait 15-20 minutes for the unit to cool down. Turn the unit back on to resume function.
4. A tip over safety switch is located on the bottom of the base. Make sure that you place the unit on flat surface to insure that the switch is pushed in.

### Disposal

At the end of the serviceable life of the product and/or the batteries, it should be disposed of carefully and safely in accordance with local authority regulations. The power cord should be cut off from the heater. Keep these instructions for future reference.